

THERMASOL

Cleanse Your Body. Purify Your Soul.

One Touch Control Installation and Operation Instructions



4" L x 2 ³/₁₆" H x ³/₄" W

WARNING

- DO NOT USE THIS PRODUCT UNLESS YOU HAVE CONSULTED YOUR DOCTOR AND RECEIVED WRITTEN PERMISSION TO DO SO. USE OF THIS PRODUCT MAY BE HAZARDOUS TO YOUR HEALTH.
- STEAM IS HOT! DO **NOT** TOUCH OR GO NEAR THE STEAM HEAD WHEN THE UNIT IS IN THE "ON" POSITION. SEVERE BURN WILL OCCUR IF YOU COME IN CONTACT WITH THE STEAM HEAD OR STEAM EMITTING FROM THE STEAM HEAD.
- NEVER ATTEMPT TO FILL AROMA THERAPY RESERVOIR ON THE STEAM HEAD WHEN UNIT IS IN THE "ON" POSITION. SEVERE BURNS WILL OCCUR.
- DO NOT USE THERMASOL AROMA THERAPY OILS OR SKIN CARE PRODUCTS OR ANY PRODUCT IN CONJUNCTION WITH YOUR THERMASOL UNIT WITHOUT CONSULTING WITH YOUR ALLERGIST OR DOCTOR BEFORE USE. THESE PRODUCTS MAY BE HAZARDOUS TO YOUR HEALTH.
- YOUR SHOWER MAY BE A SLIP AND FALL HAZARD CHECK WITH YOUR CONTRACTOR OR FLOORING MANUFACTURER REGARDING THE SAFE USE OF YOUR FLOORING IN A STEAM APPLICATION. SLIPPING AND FALLING INTO THE STEAM HEAD ITSELF OR INTO THE STREAM OF STEAM EMITTING FROM THE STEAM HEAD WILL CAUSE SERIOUS BURNS, OR PHYSICAL INJURY.

Headquarters & Technical Support

2255 Union Place, Simi Valley, CA 93065 – (800) 776-0711

Eastern Sales Office

26 Industrial Avenue, Fairview NJ 07022 – (800) 631-1601

www.thermasol.com

One Touch Installation Instructions

1. The One Touch digital control can be located inside or outside the shower area. **If using the Elite and One Touch combination, refer to their installation instructions now.**
2. Position the touch pad 4 to 6 feet from the floor inside or outside the steam room. Drill one 1-1/16" hole in the wall.
3. Bring the control wire from the generator through the 1-1/16" hole. Carefully connect the wire to the touch pad connector. **DO NOT pinch, nail, wedge etc. the control cable, any damage to the control cable will result in the control not working properly. If the control is not installed immediately, protect the end connectors with tape or some other kind of shielding material.**
4. **Carefully connect the other end of the lead wire to the generator BEFORE turning power on to the generator.**
5. Turn on both water and power to the generator.
6. Test the touch pad to ensure it is properly connected. If any technical problems arise, call toll free 800-776-0711.
7. **THESE STEPS MUST BE TAKEN OR YOUR WARRANTY WILL BE VOID.** Coat the entire control back with supplied waterproof silicon. Completely seal the control to the wall so moisture does not get behind it. Place the control on the wall pressing firmly. You may need to tape the control into place until the silicone dries. Be careful not to harm the wall/control with the tape. Refer to figure 1. **Let dry for 24 hours before using steam bath.**

Failure to follow installation instructions specifically may cause the warranty to be void!

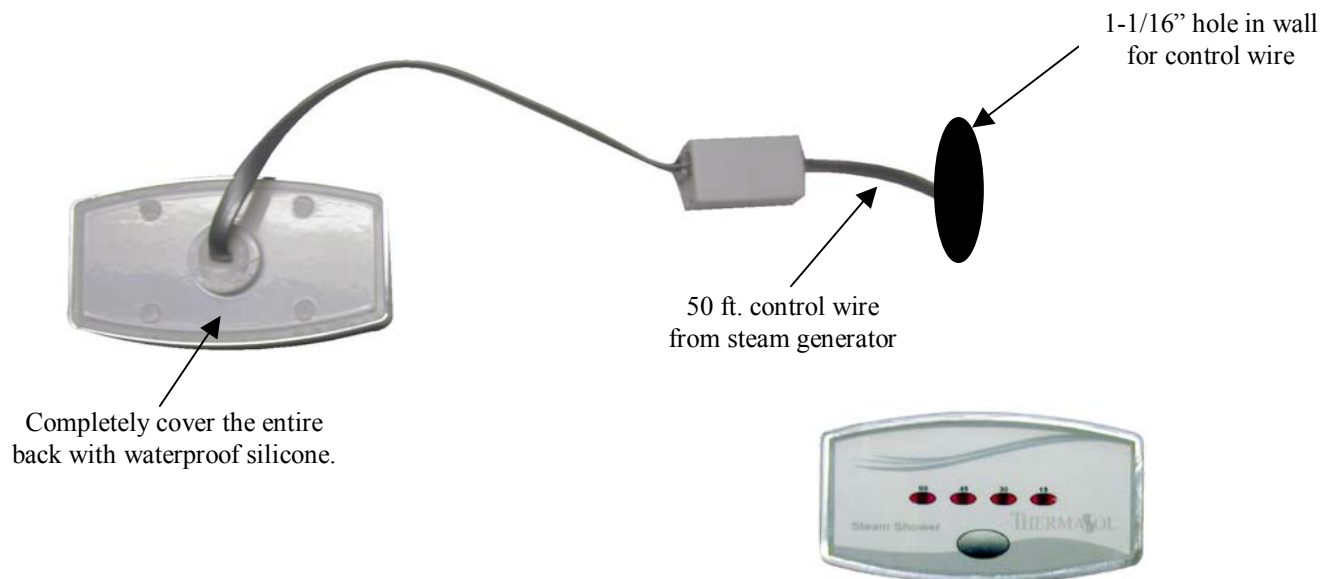


Figure 1

One Touch Control Operation Instructions

WARNING: Please consult your physician before using. If you are pregnant, elderly, have high blood pressure, diabetes, suffering from heart disease, intoxicated, or not in good health, do not use this steam bath.

1. **Starting your steam bath.** Press "STEAM" button to activate your steam bath session. 60 minute LED will light up, **see figure 2.**

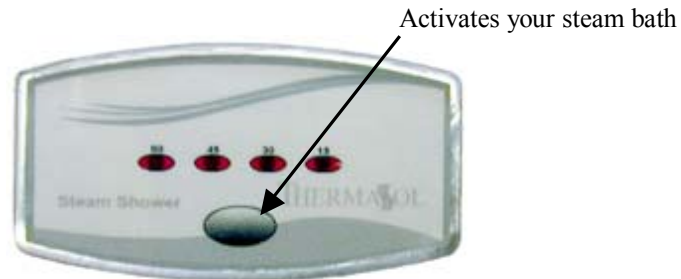


Figure 2

2. **Changing session time.** Press "STEAM" button again and repeat until your desired time session lights up, **see figure 3.**

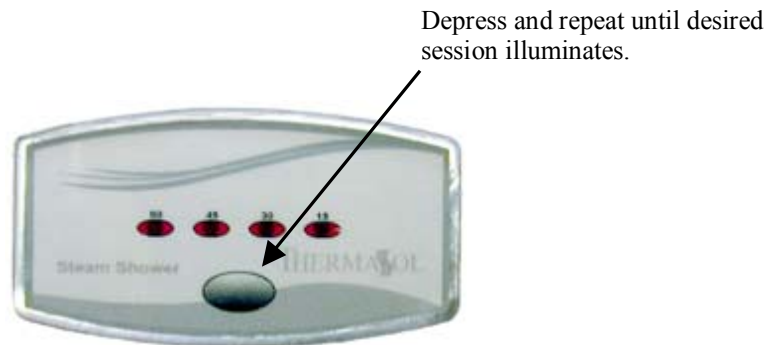


Figure 3

3. **Pause feature.** Press "STEAM" button and hold until LED time light flashes. Release. Light will flash while system is in pause mode. Press "STEAM" button again to restart session, **see figure 4.**



Figure 4

CONSUMER WARNING

WARNING

DO NOT USE THIS PRODUCT UNLESS YOU HAVE CONSULTED WITH YOUR DOCTOR AND RECEIVED WRITTEN PERMISSION TO DO SO. USE OF THIS PRODUCT MAY BE HAZARDOUS TO YOUR HEALTH.

WARNING

STEAM IS HOT! DO NOT TOUCH OR GO NEAR THE STEAM HEAD FROM THE TIME THE UNIT IS “ON”, UP TO ONE HOUR AFTER IT HAS SHUT OFF. SEVERE BURN WILL OCCUR IF YOU COME IN CONTACT WITH THE STEAM HEAD OR STEAM EMITTING FROM THE STEAM HEAD.

WARNING

NEVER ATTEMPT TO FILL AROMA RESERVOIR ON THE STEAM HEAD WHEN UNIT IS IN THE ON POSITION. SEVERE BURNS WILL OCCUR.

WARNING

DO NOT USE THERMASOL AROMA THERAPY OILS OR SKIN CARE PRODUCTS OR ANY PRODUCT IN CONJUNCTION WITH YOUR THERMASOL UNIT WITHOUT CONSULTING WITH YOUR ALLERGIST OR DOCTOR BEFORE USE. THESE PRODUCTS MAY BE HAZARDOUS TO YOUR HEALTH.

WARNING

YOUR SHOWER MAY BE A SLIP AND FALL HAZARD CHECK WITH YOUR CONTRACTOR OR FLOORING MANUFACTURER REGARDING THE SAFE USE OF YOUR FLOORING IN A STEAM APPLICATION. SLIPPING AND FALLING INTO THE STEAM HEAD ITSELF OR INTO THE STREAM OF STEAM EMITTING FROM THE STEAM HEAD WILL CAUSE SERIOUS BURNS, OR PHYSICAL INJURY.

4. **Setting memory.** Find the desired time you want to set. Press and hold the “STEAM” button. LED will flash, continue to hold until light stops flashing and remains solid. Turn timer off by pressing “STEAM” button. Wait 15 seconds and restart your unit. Your desired time will illuminate, **see figure 5.**

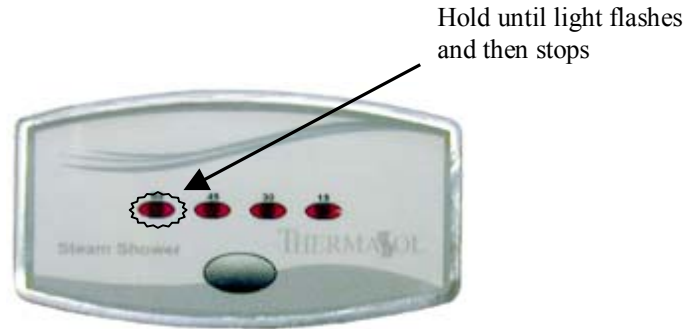


Figure 5

5. **Auto PowerFlush.** (If option is ordered on the steam generator) To activate the inner tank cleaning system, press “STEAM” to turn on the unit then press and hold the “STEAM” button until all four LED’s flash, then release. Powerflush will begin in two minutes and the complete cycle will last 45 minutes, **see figure 6.**
- **Manual PowerFlush.** Power on the control and set the timer to 45 minutes. Open the powerflush valve located on top of the generator for 5-7 minutes, then close. Allow generator to finish the 45-minute session. Use of powerflush will vary with local water conditions. Speak with your plumber regarding hard water conditions in your area. Thermasol recommends one powerflush cycle per week.

WARNING: IT IS IMPORTANT THAT NO ONE IS INSIDE THE SHOWER ENCLOSURE DURING THE POWERFLUSH CLEANING CYCLE. IT IS ALSO IMPORTANT THAT THE ENCLOSURE DOOR BE CLOSED DURING THIS CYCLE.

**** WARNING...Exit shower area once the powerflush is started, hot water from steam head can burn you. Keep the steam door on the enclosure closed during this cycle.**

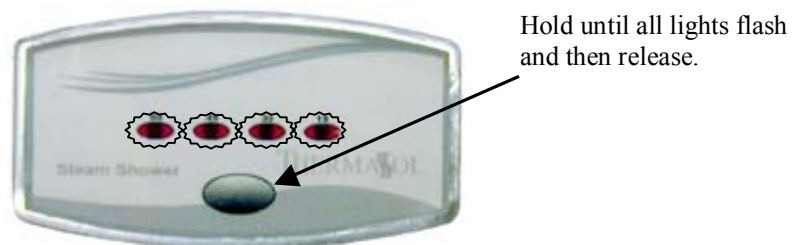


Figure 6

6. **Diagnostic feature.** The One Touch control has a unique diagnostic feature. If there is a malfunction within the unit, it will alert you. The 15-minute light flashes when the control button is stuck, **see figure 7**. The 60-minute light flashes when the low water sensor is activated, **see figure 8**.



Figure 7



Figure 8

Installation instructions for Elite/One Touch Combination

WARNING: Power to the generator **MUST** be off prior to connecting any control.

1. Locate a desired location for the Elite control **INSIDE** of the shower area Refer to “installation instructions for the Elite control” for how to mount control in shower area.
2. Locate a desired location for the One Touch control **OUTSIDE** of the shower area. Refer to the “installation instructions for the One Touch control” for how to mount control.
3. Connect supplied phone jack splitter to the steam generator. Refer to the graphic on page 3 “Control cable wire plug-in”.
4. Run cables from the controls to the steam generator and carefully connect to the phone jack splitter just installed to the generator. Either control cable can connect to either of the two plugs, see figure 9. **DO NOT** pinch, stretch, nail, wedge etc. the control cable, any damage to the control cable will result in the control not working properly and could result in damage to the control itself. If the control is not installed immediately, protect the end connectors with tape or some other kind of shielding material.

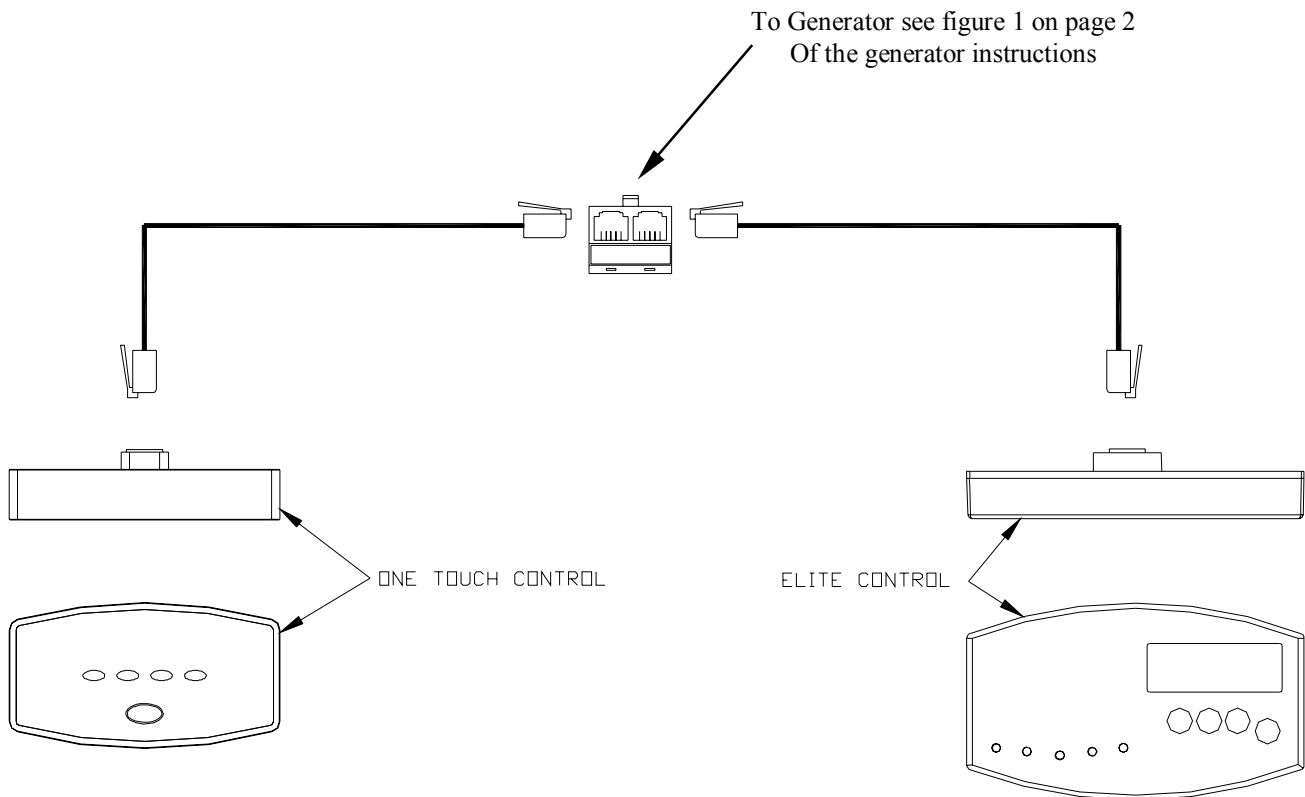


Figure 9

Elite/One Touch combination Operation Instructions



WARNING: Please consult your physician before using. If you are pregnant, elderly, have high blood pressure, diabetes, suffering from heart disease, intoxicated, or not in good health, do not use this steam bath.

1. The Elite control functions will remain the same but the **One Touch acts ONLY as an on/off switch**. Refer to the Elite operation instructions, which are included with the control.
2. When the One Touch is turned on, it sends a signal to the Elite turning it on and loading the last time and temperature settings. The One Touch will display the corresponding time.
3. When the Elite is turned on, it will operate like normal but will send a signal to the One Touch turning it on and display the current time setting.

NOTE: When Auto Power Flushing the steam generator this operation can only be done from the Elite Control.

WARNING: IT IS IMPORTANT THAT NO ONE BE INSIDE THE SHOWER ENCLOSURE DURING THE POWERFLUSH CLEANING CYCLE. IT IS ALSO IMPORTANT THAT THE ENCLOSURE DOOR BE CLOSED DURING THIS CYCLE.

WARNING

Exit shower area once the powerflush is started, hot water from steam head can burn you. Keep the steam door on the enclosure closed during this cycle.

Headquarters & Technical Support
2255 Union Place, Simi Valley, CA 93065 – (800) 776.0711

Eastern Sales Office
26 Industrial Avenue, Fairview, NJ 07022 – (800) 631.1601