


Installation Instructions



WARNING: When installing a steam pipe into a steam room made out of Acrylic, Cultured Marble, Corian, Swanstone, Resin, Plastic or an equivalent type of material, consult the manufacturer of the material for their recommendation on location of the steam pipe. Verify that the type of material used for the construction of the steam room is rated for a steam room environment. When installing a steam pipe, in the mentioned material type rooms, it is very critical in making sure that when the steam pipe protrudes into the steam room that it is centered in its 1 1/4" hole and does not touch the edge of the wall material around the steam pipe.

NOTE: The steam diffuser is an optional accessory and purchased separately. Please contact your dealer.

IMPORTANT: The steam diffuser is intended for small steam rooms approximately 3' x 3' and 3' x 4' in size. When the bather is sitting close to the steamhead the steam can become uncomfortable. The steam diffuser helps to direct some of this steam upward, making it more comfortable. This option may not be needed in larger rooms.

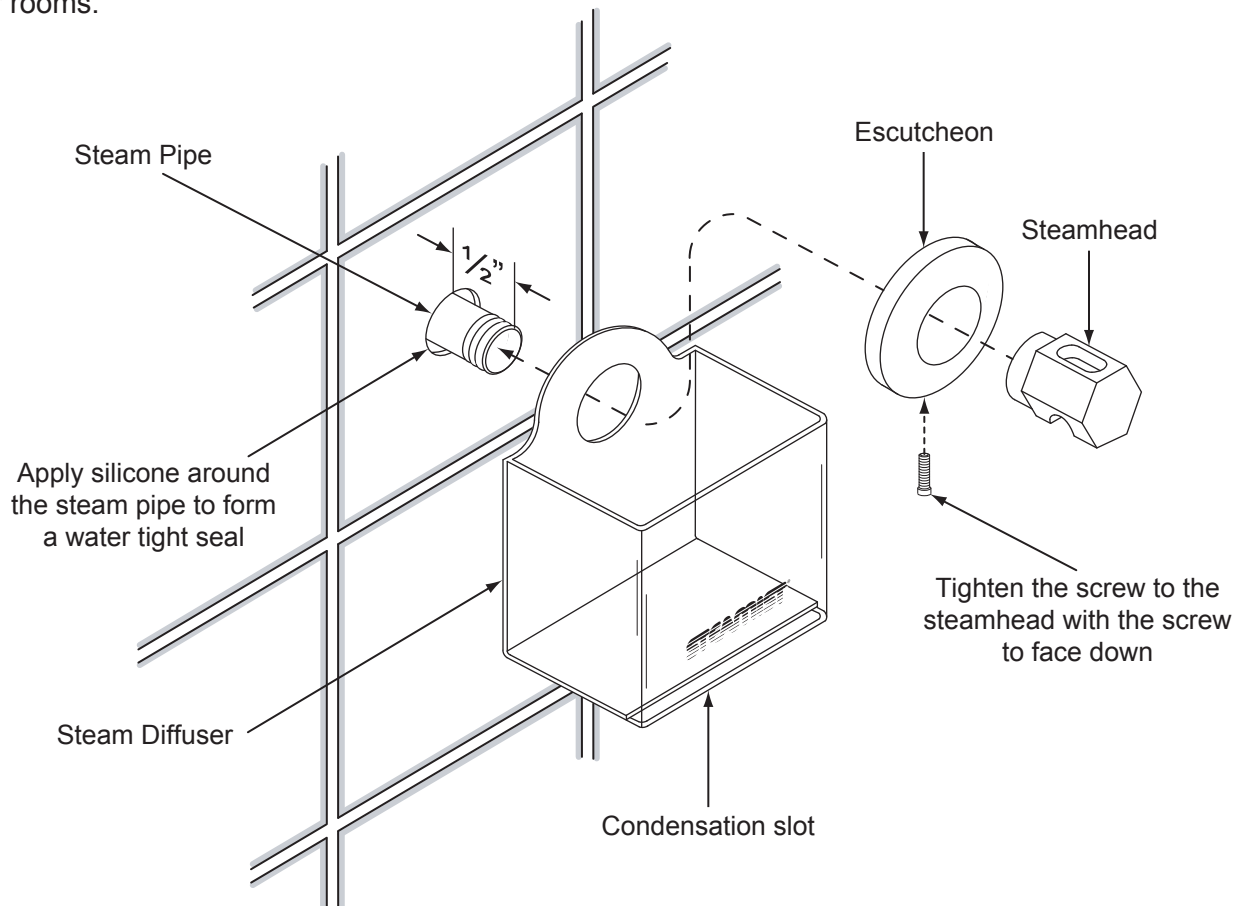

1. Be sure the steam pipe is installed with the proper length pipe protruding through the wall. Allow an extra 1/4" for the steam diffuser (3/4" total pipe protrusion).
2. Apply some silicone sealant around the pipe to seal the pipe to the wall.
3. Slip the steam diffuser over the steam pipe.
4. Slip the escutcheon over the steamhead and tighten the retaining screw facing the steam opening.
5. Screw on the steamhead making sure the steam opening is facing down.