

Item No.	Part No.	Part Description
1	007-1103	Steam Solenoid 1/2" 208/240V
2	007-7007K	Pressure Switch 0-15 psi
3	007-1128	Pressure Gauge 0-30lbs
4	007-1215	Safety Relief Valve - 15psi
5	007-1116	Water Solenoid 1/4" 208/240V
6	007-1208	Watts Strainer - 1/4"
7	007-1205	Drain Valve - Manual 1/2" (When not equipped with Blowdown)
7a	007-1226-1	Drain Valve - Manual 1" (When equipped with Blowdown)
8	007-1161	Drain Valve - Motorized 1" (ABD - 240/480V)
	007-1186	Drain Valve - Motorized 1" (ABD - 208V)
9	007-1219	Glass Sight Tube 9 1/4"
	007-1219W	Glass Sight Tube 9 1/4" Kit with nuts and washers.
10	006-6356	Water Level Probe Housing Assy. (includes item #11 & #12)
11	006-6357	Probe - XL Rod - (Only for 006-6356)
12	006-6358	Probe - H Rod - (only for 006-6356)
13	007-1096	On/Off Switch - Start , Water
14	007-1094	On/Off Switch - Steam
15	007-1212	Water Gauge Fixture Assembly (includes all hardware, less glass tube)
16	007-1192	Check Valve - 1/4" Spring
17	007-5090	LLC-1300-6 Printed Circuit Board (Serial Number - E-24934 D.O.M. 3/90+)
18	007-1090	24-hr/7-day Programmable clock
19	68008-KIT	HC-PCMR Aux Press. Control with manual reset
	007-1023	Transformer, Multitap, .25KvA (480V)
	007-4116	Repair Kit - Steam Solenoid
	007-6420	Contact Snubber
	007-6357	Fuse - 0.15 Amp, 250v, slow-blow (Mounted on PCB)
	007-1280	Fuse - 1 amp (cabinet mounted for control circuitry)
20	007-1301	Contactora, 3pl, 40/50amp, 208-240v
	007-1310	Contactora, 4pl, 40/50amp, 208-240v

