

For models with serials #'s E-40000 and above

Item No.	Part No.	Part Description	Item No.	Part No.	Part Description
1	007-1262	Steam Solenoid Valve 3/4" 208/240V	13	007-1192	Check Valve - 1/4" Spring
	007-4116	Repair Kit - Steam Solenoid	14	007-7008	HC-PCMR Aux Press. Control with Manual Reset
2	007-7007	Pressure Switch 0-15 psi		007-1282	Transformer, Multitap (480V)
3	007-1237	Pressure Gauge 0-30 lbs.	15	007-1280	Fuse, 1 AMP
4	007-1215	Safety Relief Valve 15 psi	16	007-1301	Contactors, 3pl, 40/50 AMP, 208-240V
5	007-1116	Water Solenoid Valve 1/4" 208/240V		007-1310	Contactors, 4pl, 40/50 AMP, 208-240V
6	005-2122K	Strainer 1/4"		007-1307	Contactors, 2pl, 40/50 AMP, 208-240V
7	007-1226	Drain Valve - Manual 1"	17	007-1430	DCCP Control PCB
8	007-1161	Drain Valve - Motorized 1" (ABD - 240/480V)	18	007-1431	DCCP Manager Center
	007-1186	Drain Valve - Motorized 1" (ABD - 208V)	19	007-1432	DCCP User Control
9	006-6357	Probe 8-1/4" Long	20	007-1434	Cable 50' DCCP MGR Ctr
10	006-6364	Probe 9-1/4" Long	21	007-1435	Cable, 50' DCCP User Ctrl
11	007-1094	ON/OFF Switch - Steam 1, Steam 2, Power (DPST)	22	007-1436	Cable, 50' DCCP Sensor
12	007-1231	Water Gauge Fixture Assembly (Includes all hardware w/glass tube)	23	007-1403	DCCP Sensor
	007-4117W	7" Glass Gauge 5/8" x 7" with Hardware	24	006-3190	Sensor Cover
				007-1404	50' DCCP MGR Extension
				007-1405	50' DCCP User Extension
				007-1406	50' Sensor Extension

