

Basic Butler Package®

MS BUTLER PACKAGE

Basic Butler Package

BOX CONTENT

- iTempo Control
- AromaSteam Steamhead
- AutoFlush®
- Condensation Pan

NOTE: When ordered with the Linear Steamhead, standard Steamhead is replaced with 104480 Linear Steamhead



FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

SHAPE	FINISH	PROJECT INFORMATION
☐ RD Round ☐ SQ Square	☐ Brilliant Black ☐ Brushed Bronze ☐ Matte Black ☐ Nouveau Bronze ☐ Oil Rubbed Bronze ☐ Polished Brass ☐ Polished Chrome ☐ Polished Gold ☐ Polished Nickel ☐ Satin Brass ☐ Satin Gold	Location: Architect: Engineer: Contractor: Submitted By: Date:
OPTIONS: ☐ Linear Steamhead		
Notes:		

iTempo® Controls

iTempo controls flush mount in the steam/shower enclosure through a 2 5/8" wide x 3 7/8" (67mm x 99mm) high hole. iTempo controls can also be surface mounted.

iTempo Controls Feature:

- Solid brass decorative cover with choice of square or round styles in designer finishes
- Digital display
- Programmable temperature
- AromaSteam Steamhead in matching finish and shape
- Compatibility with SteamLinX
- Soft touch keypad
- Low voltage operation

The iTempo controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 ft. (1.2 – 1.5m) above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the steam head or direct steam emissions.
- on a vertical wall

The control cable length is 30 ft. [9m]. Insure that the control and/or steam generator are located accordingly.

An optional 60 ft. [18m] cable is available if required, PN 103990-60.

 
If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

BOX CONTENTS:

- iTempo
- Steamhead
- Control Cable (30 ft.) (9m)
- Tube of Silicone Sealant
- Owner's Manual

Dimensions for round and square controls:

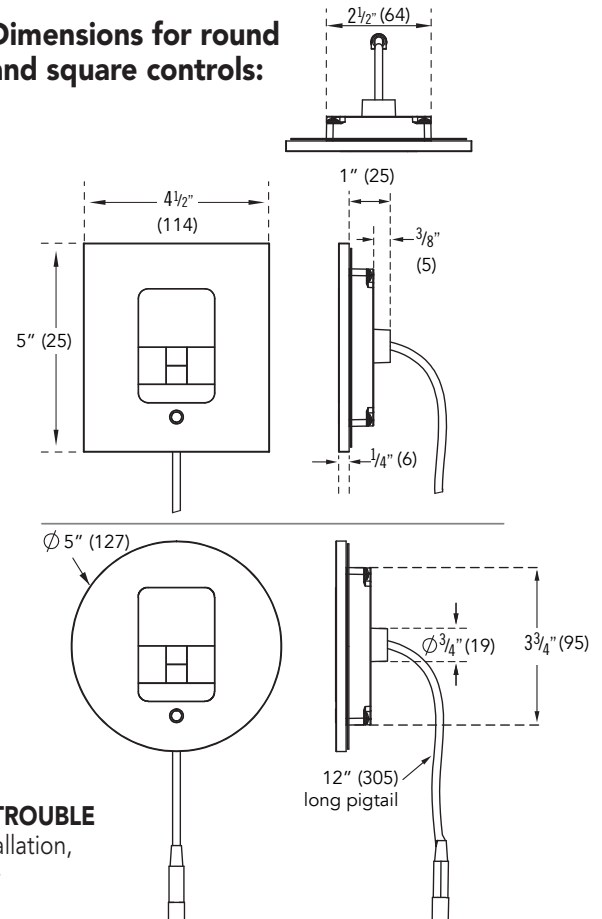


MODEL	SHAPE	FINISH	PROJECT INFORMATION
MS iTempo	☐ RD Round	☐ BB - Brushed Bronze	Location:
	☐ SQ Square	☐ BN - Brushed Nickel	Architect:
		☐ ORB - Oil Rubbed Bronze	Engineer:
		☐ PB - Polished Brass	Contractor:
		☐ PC - Polished Chrome	Submitted By:
		☐ PN - Polished Nickel	Date:
		☐ SB - Satin Brass	Notes:
		☐ BK - Black Fascia	
		☐ WH - White Fascia	
		☐ MB - Matte Black	
		☐ RAW - Custom Plating	

AromaSteam Steamhead

(3/4" NPT)

 - Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

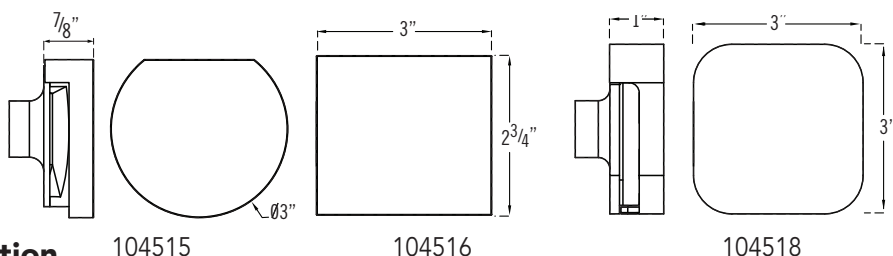

Round & Square Steamhead Installation

(3/4" NPT)

 
IMPORTANT: DO NOT disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.

CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead. Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938 /10398SQ

IMPORTANT NOTE: To preserve steamhead finish, **DO NOT** use wrench or other tools to tighten. **DO NOT** use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

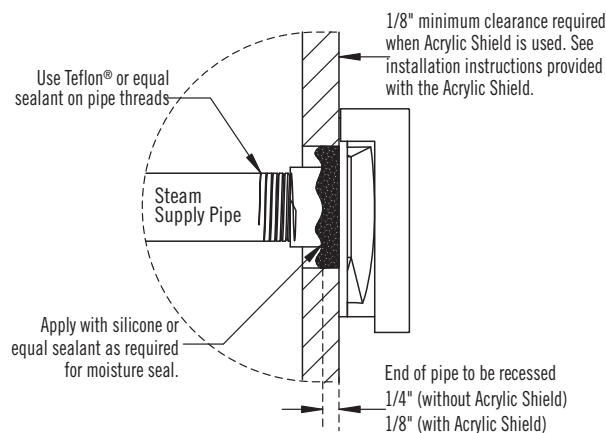

CAUTION Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938/ 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH	PROJECT INFORMATION
☐ 104515	☐ BB Brushed Bronze	Location:
☐ 104516	☐ BL Brilliant Black	Architect:
☐ 104518	☐ BN Brushed Nickel	Engineer:
	☐ MB Matte Black	Contractor:
	☐ NB Nouveau Bronze	Submitted By:
	☐ OB Oil Rubbed Bronze	Date:
	☐ PB Polished Brass	Notes:
	☐ PC Polished Chrome	
	☐ PG Polished Gold	
	☐ PN Polished Nickel	
	☐ SB Satin Brass	
	☐ SG Satin Gold	
	☐ SN Satin Nickel	
	☐ ST Satin Steel	
	☐ WH White Finish	

AutoFlush®

Box Contents

 
- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

AutoFlush Shown Fully Assembled

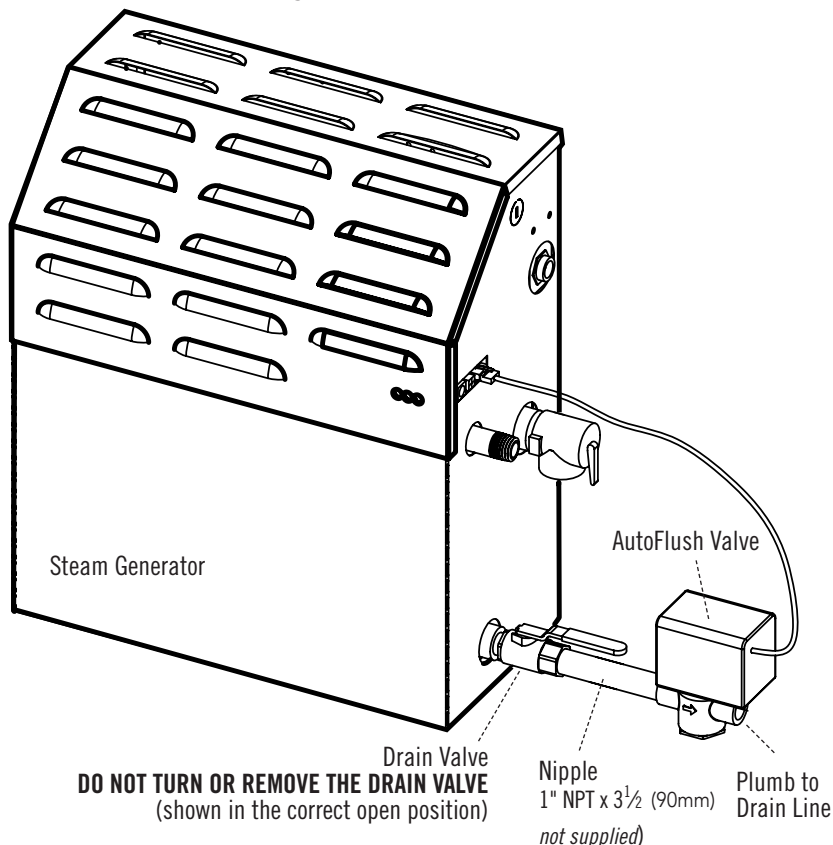

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
MS 81500E	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		

 
Condensation Pan

103867 & 104402

Mr.Steam strongly recommends the use of a condensation pan in the unlikely event of a plumbing leak.

Locate the condensation pan on a solid level surface and place the steam generator inside the condensation pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Condensation pans drain by gravity. The condensation pan is equipped with an integral 3/4" NPT fitting.

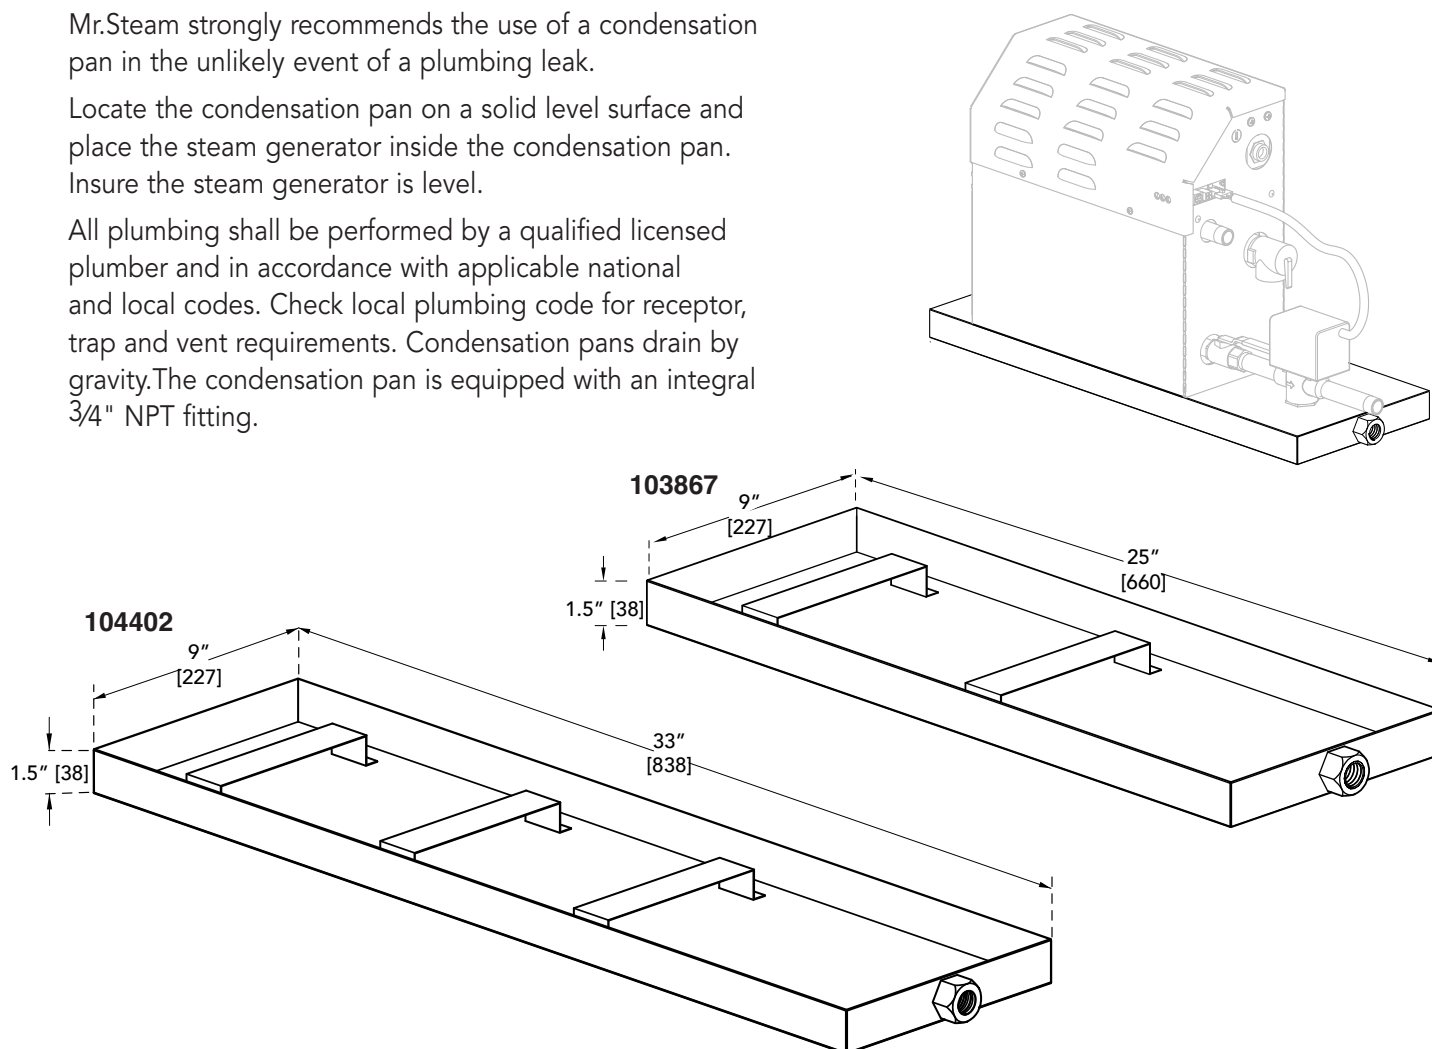

NOTE: For MX4E, MX5E and MX6E use model 104402

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
☐ 103867	Location:	Contractor:
☐ 104402	Architect:	Submitted By:
	Engineer:	Date:
Notes:		