

OPTIONAL ROBE HOOK

Part Number: RHOOK

Installation:

MrSteam recommends installing the Robe Hook after a towel warmer is firmly secured to a wall.


CAUTION Let towel warmer cool before installing the Robe Hook. Towel warmer shall not be energized when installing Robe Hook.

WARNING Do not load robe hook with more than 5 pounds.

IMPORTANT: Robe hook is not a heated surface.

ROBE HOOK KIT CONTENTS

1 Robe Hook 1 Mounting Bracket Set
1 Bolt 1 Set Screw
1 Allen Wrench

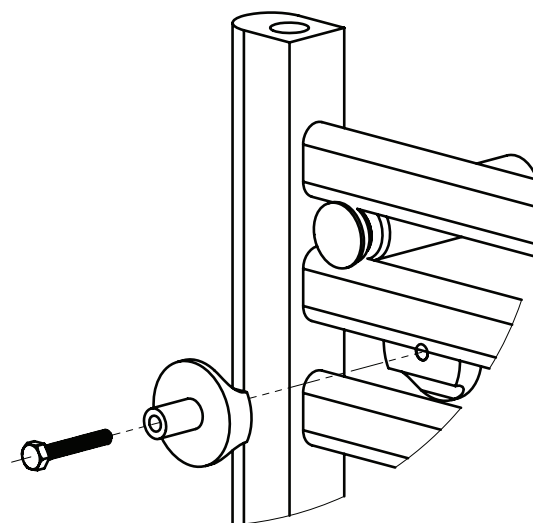

1. Locate where to place the robe hook on your Broadway Collection Towel Warmer.
2. Put the threaded portion of the bracket behind the towel warmer with the hole facing forward. Place the extension portion of the bracket on the front face of the towel warmer.
3. Clamp the portion of the bracket to the towel warmer using the bolt provided.
4. Slide the robe hook over mounting brackets (Note: Robe hook only requires 1 bracket)
5. Use the set screws provided to secure the accessory to the bracket.

WARRANTY

To view or download the MrSteam Towel Warmer Warranty and register your product go to: **blog.mrsteam.com/wr**