

AURORA

Installation guide
Outdoor Sauna: Mira L with CLT

To follow the Mira L CLT installation process by video,
please SCAN HERE:



Table of contents:

Phase 1	Preparation	4
Phase 2	Foundation	17
Phase 3	Flooring	22
Phase 4	Walls	29
Phase 5	Roofing	43
Phase 6	Exterior walls	51
Phase 7	Finishing the interior walls	67
Phase 8	Interior	69
Phase 9	Front glass	80
Phase 10	Finishing the exterior walls	92
Phase 11	Finishing the roof	100

Phase 1:


Preparation



I



Please inspect the packages for any signs of damage before signing for your delivery. Be sure to take pictures of even the slightest damage, and make a note on the delivery receipt as well.

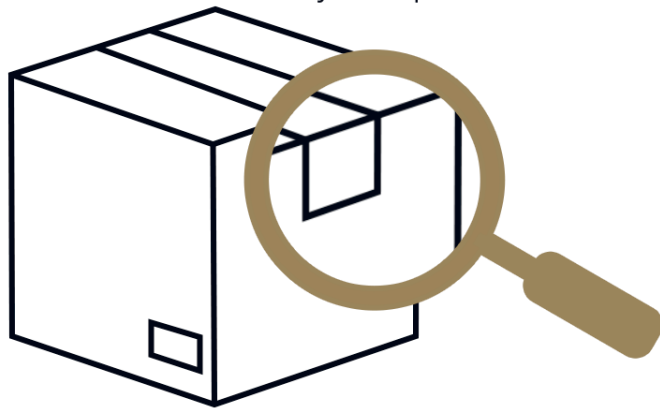

AURROOM

II



Flooring

F-EPDM - EPDM floor (1 pc)

F1 - Floor 1 (1 pc)

F2 - Floor 2 (1 pc)


BB1-BB4 - Base beams (4 pcs)



If anything is missing or damaged, please contact your local Auroom reseller.

Walls

- CL1** - Ceiling 1 (1 pc)
- CL2** - Ceiling 2 (1 pc)
- AIW1** - Interior wall panel A1 (1 pc)
- AIW2** - Interior wall panel A2 (1 pc)
- BIW1** - Interior wall panel B1 (1 pc)
- BIW2** - Interior wall panel B2 (1 pc)
- CIW1** - Interior wall panel C1 (1 pc)
- CIW2** - Interior wall panel C2 (1 pc)
- CP1** - External corner frame CP1 (1 pc)
- CP2** - External corner frame CP2 (1 pc)
- BSB1-BSB3** - Bottom side boards (3 pcs)

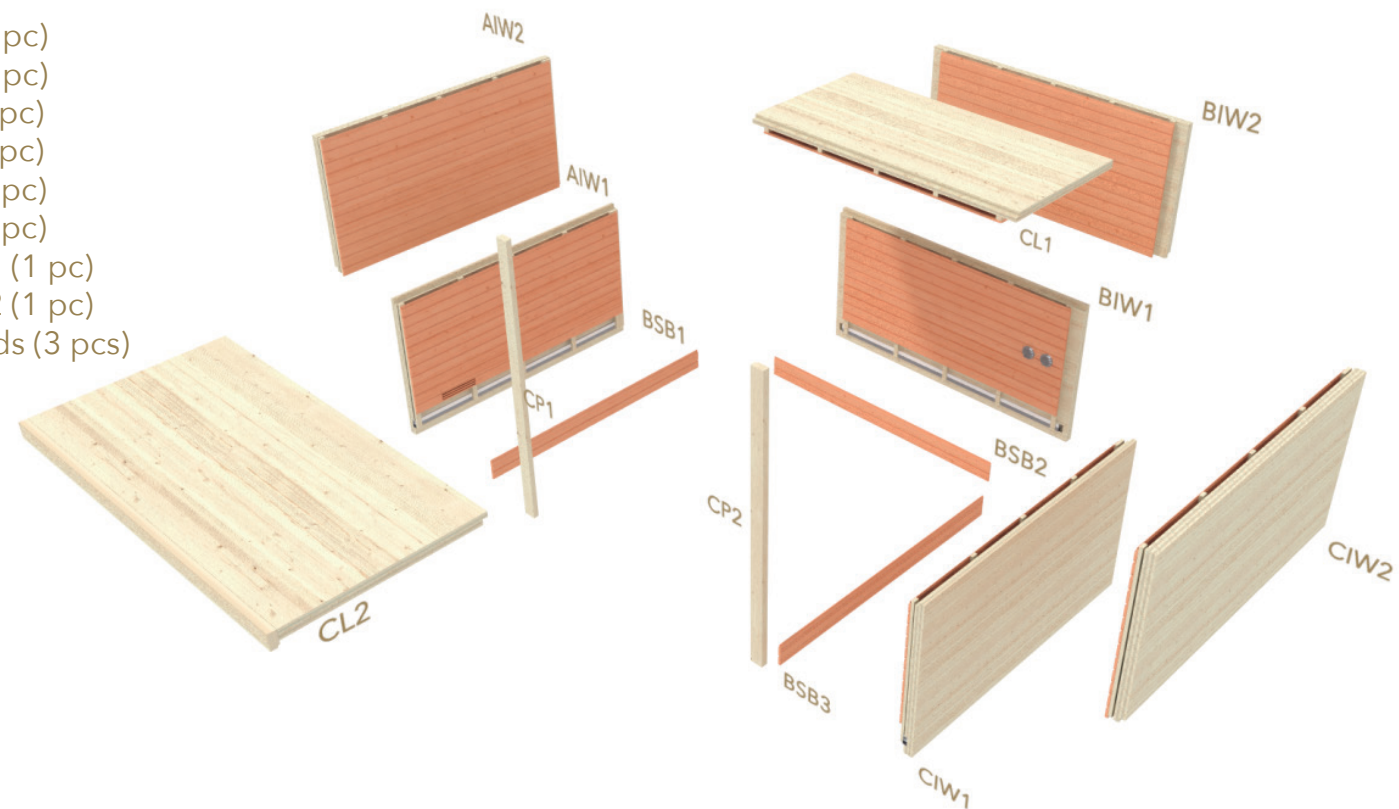

If anything is missing or damaged, please contact your local Auroom reseller.

Roofing

R-EPDM - EPDM roof (1 pc)


RO1/RO2 - Roof OSB boards (2 pcs)

RSB1-RSB5 - Roof sloping beams (5 pcs)

REB1-REB3 - Roof edge beams (3 pcs)

RDE - Roof drip edge (1 pc)


RF1-RF3 - Roof flashings (3 pcs)

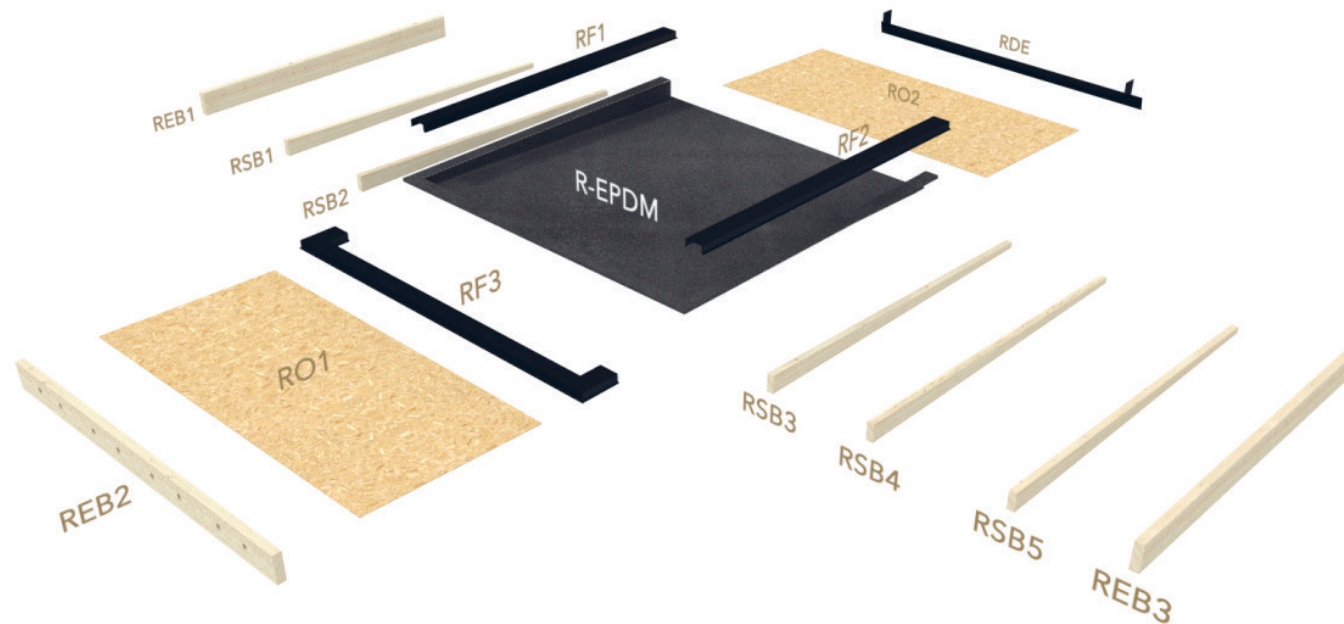

If anything is missing or damaged, please contact your local Auroom reseller.

Exterior walls

- CM1** - External corner moulding CM1 (1 pc)
- CM2** - External corner moulding CM2 (1 pc)
- CM3** - External corner moulding CM3 (1 pc)
- CM4** - External corner moulding CM4 (1 pc)
- AEW1** - Exterior wall panel A1 (1 pc)
- BEW1** - Exterior wall panel B1 (1 pc)
- CEW1** - Exterior wall panel C1 (1 pc)
- AEW2** - Exterior wall panel A2 (1 pc)
- BEW2** - Exterior wall panel B2 (1 pc)
- CEW2** - Exterior wall panel C2 (1 pc)
- AEW3** - Exterior wall panel A3 (1 pc)
- BEW3** - Exterior wall panel B3 (1 pc)
- CEW3** - Exterior wall panel C3 (1 pc)
- DLWS** - Lower panel element D (1 pc)
- DUWS** - Upper panel element D (1 pc)
- DLP** - Left panel element D (1 pc)
- DRP** - Right panel element D (1 pc)
- RBB** - Rear wall bottom board (1 pc)
- RTB** - Rear wall top board (1 pc)
- SBB1/SBB2** - Side wall bottom boards (2 pcs)
- STB1/STB2** - Side wall top boards (2 pcs)
- FSB1-FSB6** - Front wall small loose boards (6 pcs)

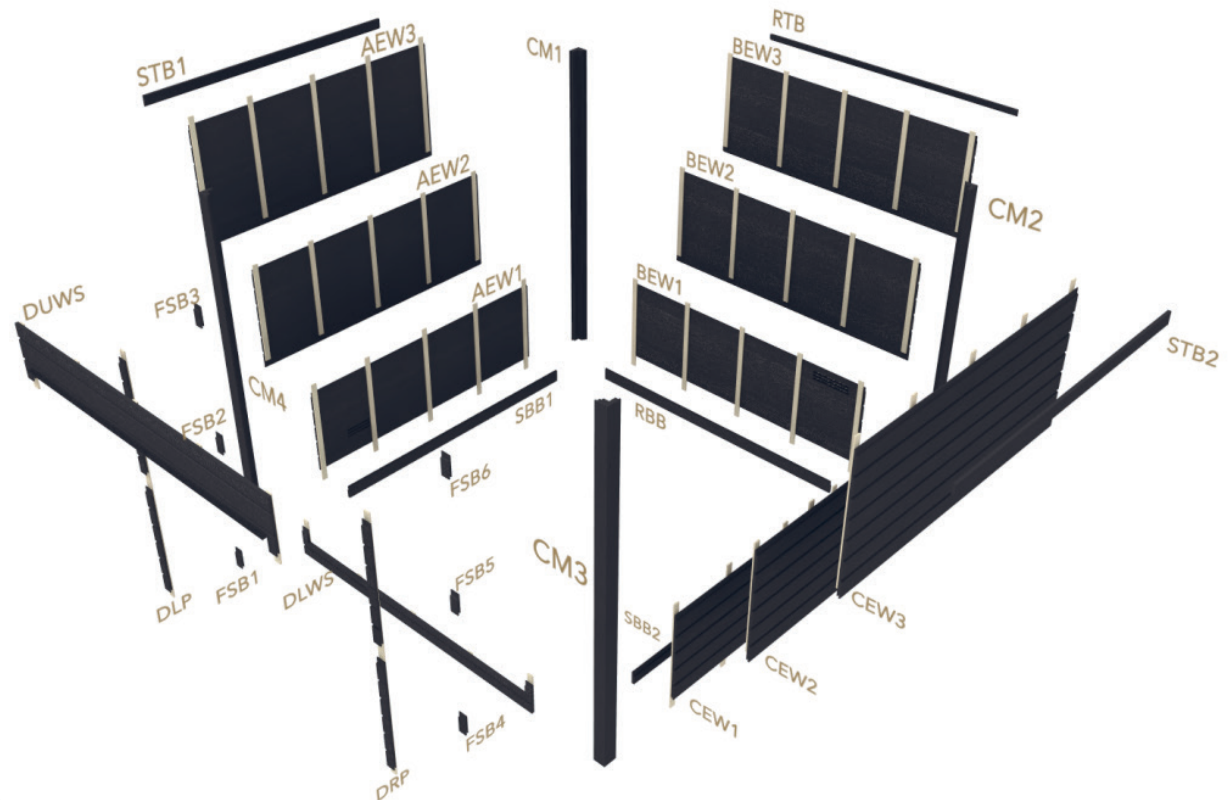

If anything is missing or damaged, please contact your local Auroom reseller.

Interior

HG - Heater guard (1 pc)

US1/US2 - Upper bench supports (2 pcs)

LS1/LS2 - Lower bench supports (2 pcs)

FG1-FG6 - Floor grates (6 pcs)

BF1 - Bench frame 1 (1 pc)

BF2 - Bench frame 2 (1 pc)

BG1 - Bench grid 1 (1 pc)


BG2 - Bench grid 2 (1 pc)

BS - Bench skirt (1 pc)

BR - Backrest (1 pc)

BRS1-BRS3 - Backrest supports (3 pcs)


HGH1/HGH2 - Heater guard holders (2 pcs)

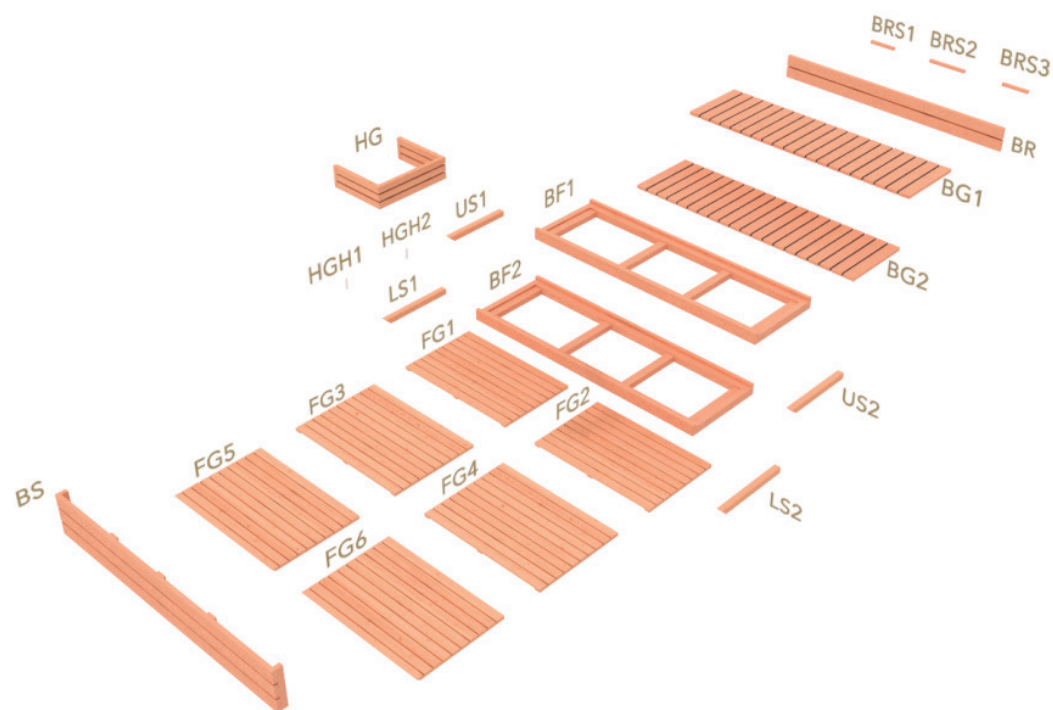

If anything is missing or damaged, please contact your local Auroom reseller.

Front glass

- W1** - Window 1 (1 pc)
- W2** - Window 2 (1 pc)
- DG** - Door glass (1 pc)
- DW1/DW2** - Door frame details (2 pcs)
- DH** - Door handle (1 pc)
- GDS** - Glass door stopper (1 pc)
- GDH1/GDH2** - Glass door hinges (2 pcs)
- GDG1/GDG2** - Glass door gaskets (2 pcs)

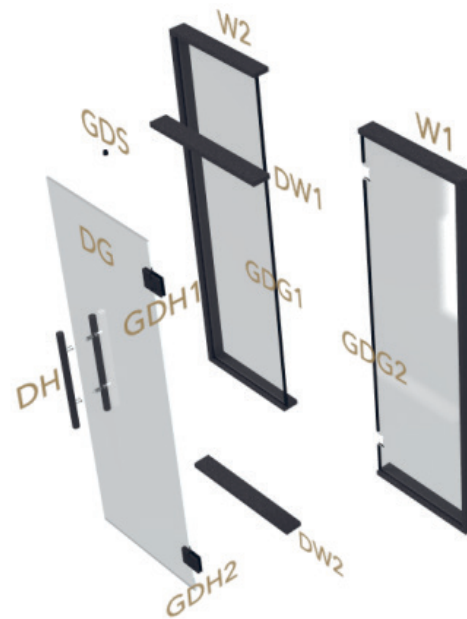

If anything is missing or damaged, please contact your local Auroom reseller.



**THE SAUNA PACKAGE
INCLUDES:**

.....
Firestone EPDM Adhesive
.....

.....
Firestone EPDM QuickPrime
.....

.....
Repair paint
.....

.....
EPDM Tape
.....

.....
Tape for wind barrier fabric
.....

.....
EXTRA material and screw set
.....

NOTE: If anything is missing or damaged,
please contact your local Auroom reseller.

**THE NECESSARY TOOLS
FOR INSTALLING EPDM RUBBER:**

.....
Penny roller and rubber roller
.....

.....
Roller for gluing
.....

.....
Sweeping brush
.....

.....
Cutter
.....

**THE NECESSARY TOOLS
FOR SAUNA INSTALLATION:**

.....
Cordless drill
.....

.....
TORX driver bit set
.....

.....
Drill bit set
.....

.....
Ladder
.....

.....
Claw lever
.....

.....
Spirit level
.....

.....
Tape Measure
.....

.....
Hammer
.....

.....
Hex key
.....

.....
Screwdriver set
.....

.....
Indicator screwdriver
.....



STAINLESS STEEL TORX SCREWS:	TORX HEAD REQUIRED:	TOTAL QUANTITY:	REQUIRED FOR:	QUANTITY REQUIRED:
6 x 120 mm: (0.24 x 4.72 in)	T 30	130 pcs	Floor elements Wall corners Ceiling elements Bench frames (BF1/BF2) Roof beams (RSB+REB)	20 pcs 30 pcs 20 pcs 15 pcs 32 pcs
5 x 80 mm: (0.2 x 3.15 in)	T 25	60 pcs	Element joints Bench supports (US/LS) Roof beams (RSB)	15 pcs 12 pcs 20 pcs
5 x 60 mm: (0.2 x 2.36 in)	T 25	120 pcs	Bench grids (BG1/BG2) Exterior cladding Glass wall (WDW)	16 pcs 70 pcs 20 pcs
4 x 45 mm: (0.16 x 1.77 in)	T 20	30 pcs	Backrest supports (BRS) Backrest (BR) Bench skirt (BS) Heater guard (HGH)	6 pcs 3 pcs 4 pcs 4 pcs
4 x 30 mm: (0.16 x 1.18 in)	T 20	35 pcs	OSB boards (RO1/2)	30 pcs
Brown screws:	T 20	15 pcs	Loose cladding (BSB)	9 pcs
Exterior screws:	T 20	85 pcs	Corner mouldings (CM) Exterior cladding (*BB/*TB/*SB)	32 pcs 35 pcs
Sealed roof screws:	T 20	35 pcs	Roof flashings (RF)	25 pcs
Roof flat screws:	T 20	15 pcs	Roof drip edge (RDE)	12 pcs
Flat wooden screw covers:		22 pcs	Glass wall (W/DW)	20 pcs

NOTE: The package contains extra screws and nails.

Mira L with CLT | Installation team & Reminders



Professional carpenters required: 2-4



Professional electricians required: 1



Handle the wood panels with care



Maintain cleanliness




Take safety precautions

Phase 2:


Foundation




Mira L with CLT | Foundation

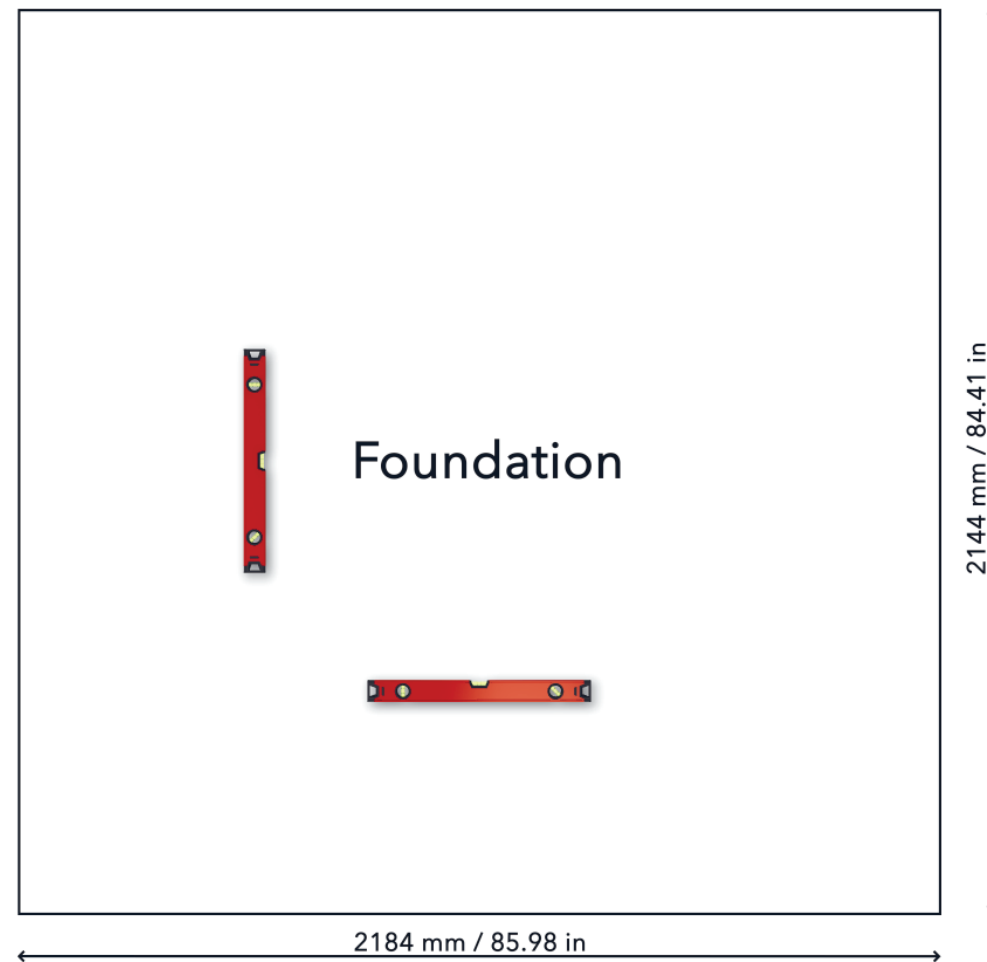


Front side

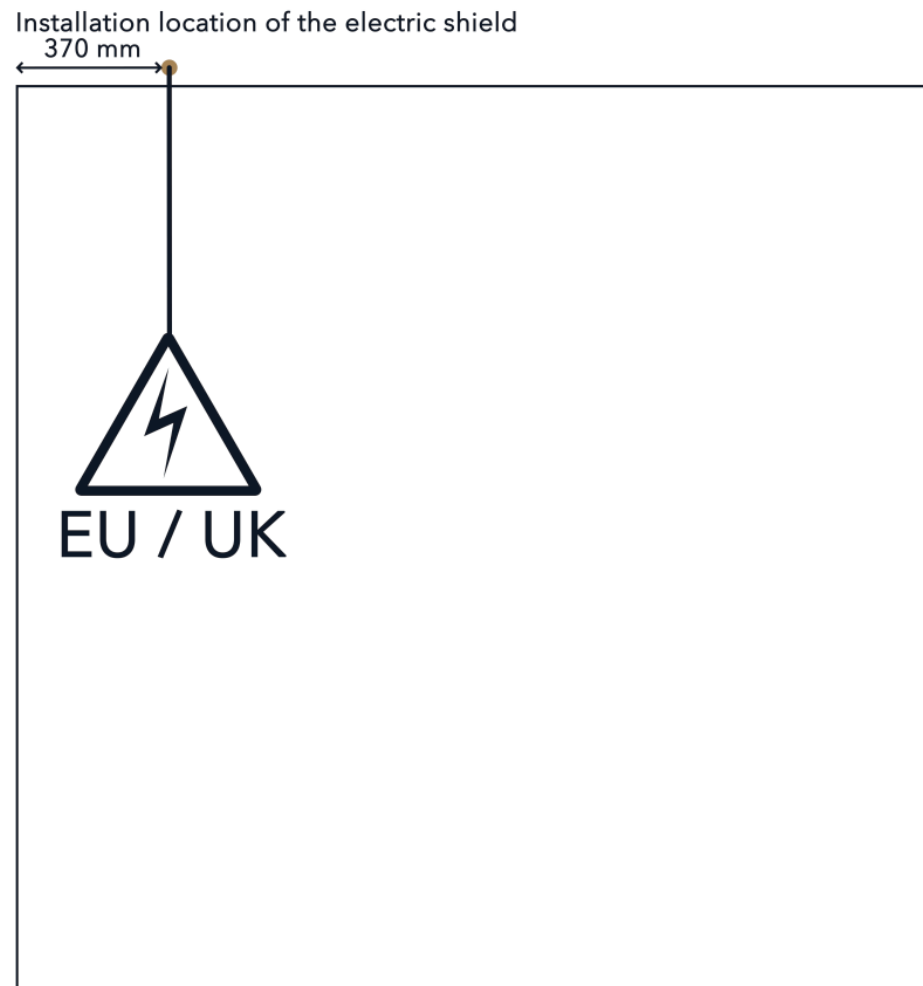

Front side

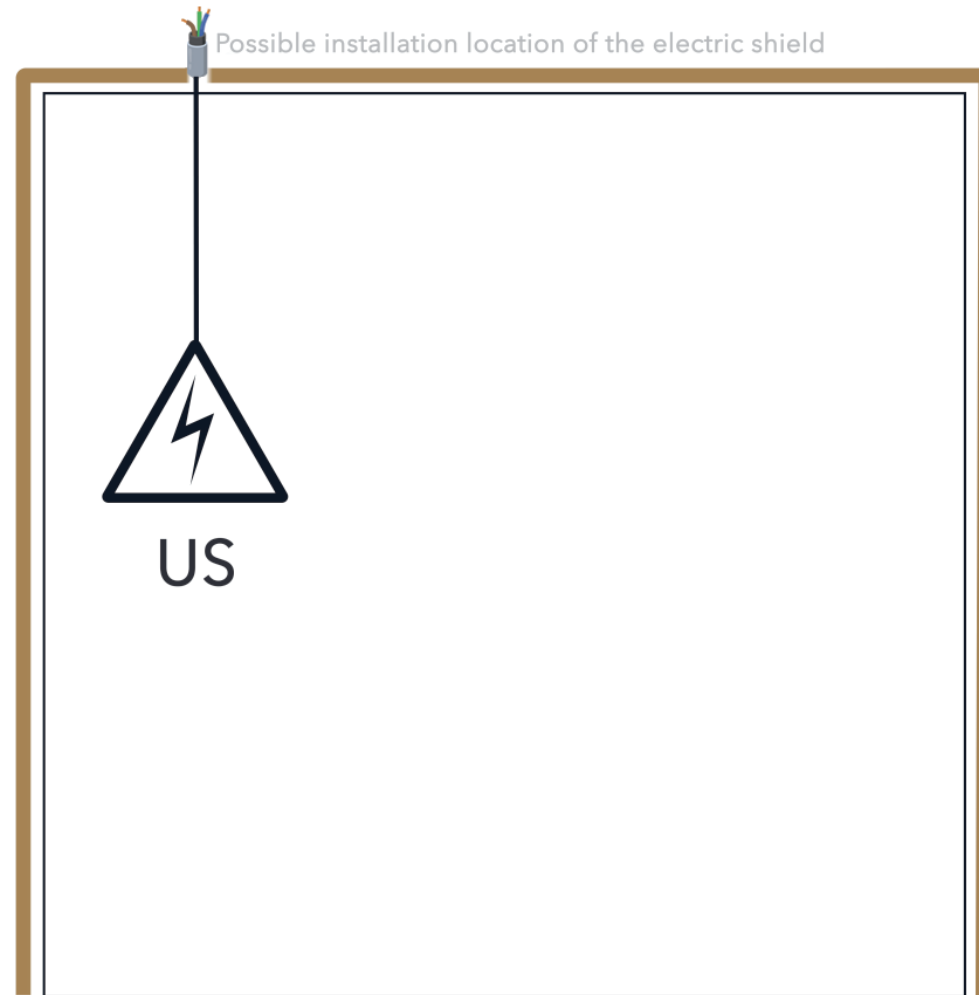


Front side

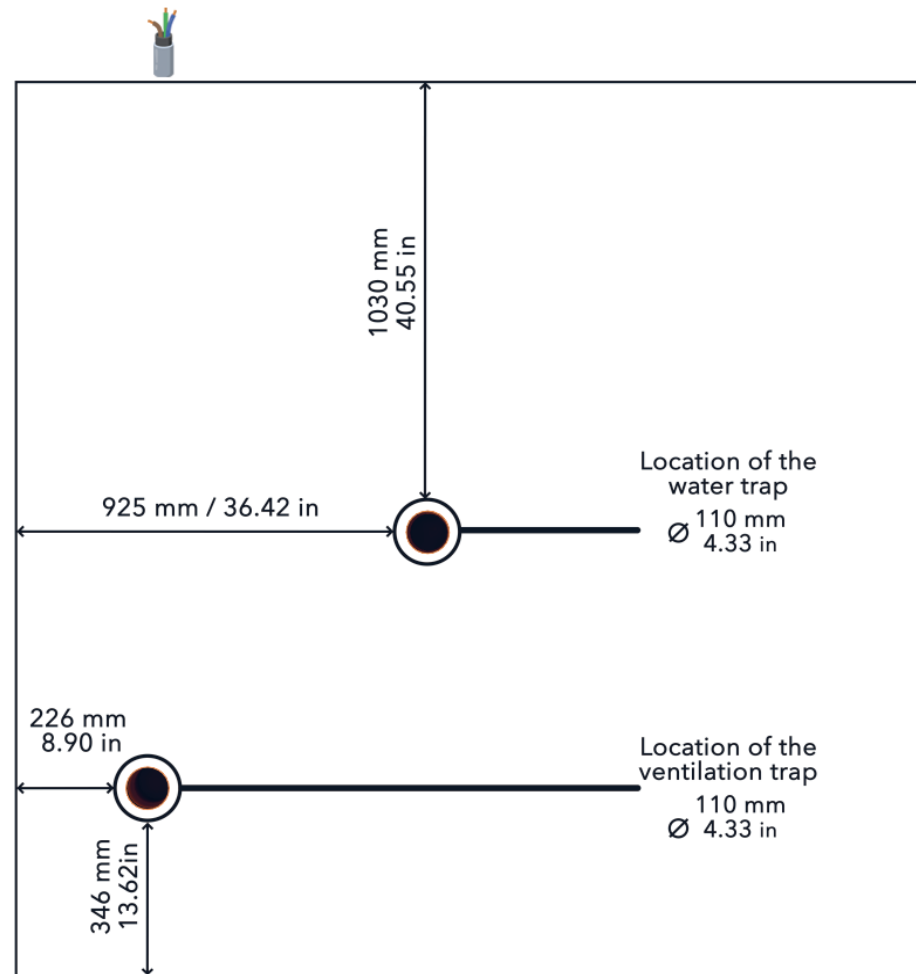


Front side


Phase 3: **Flooring**

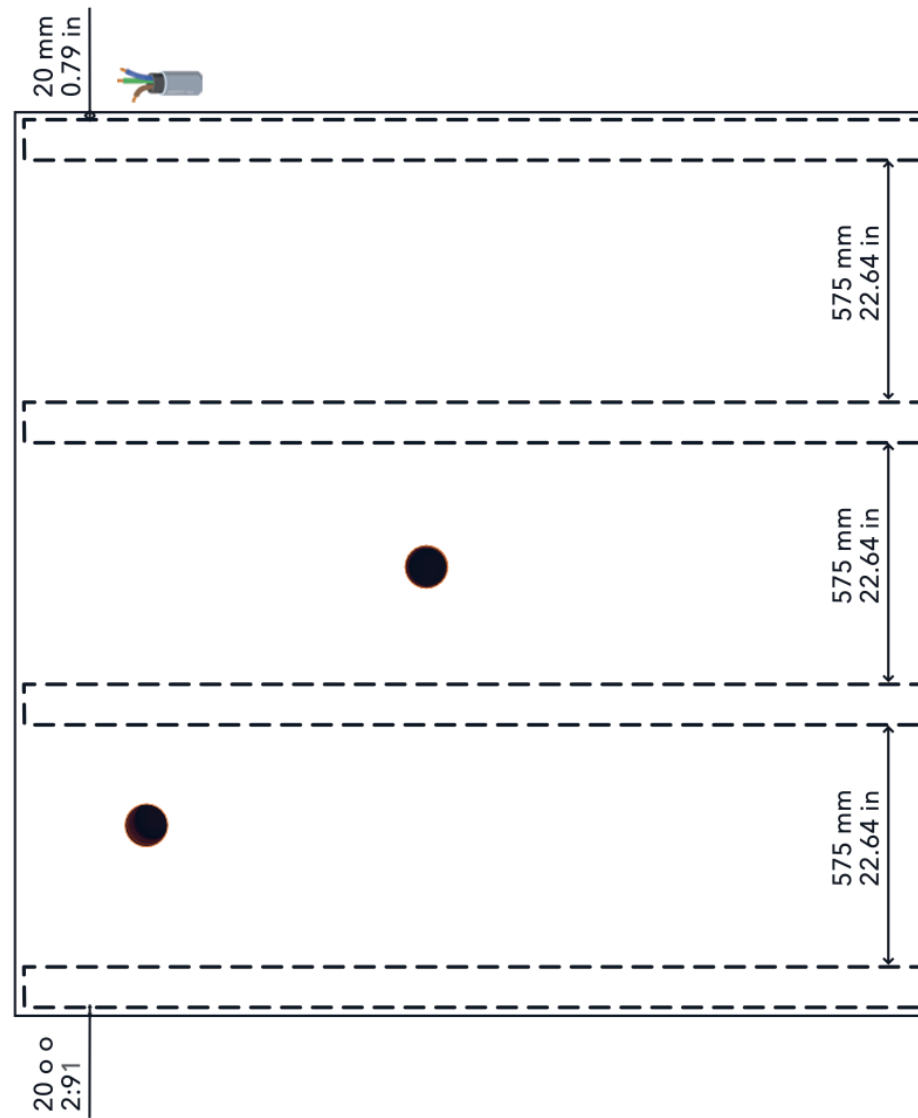

Front side

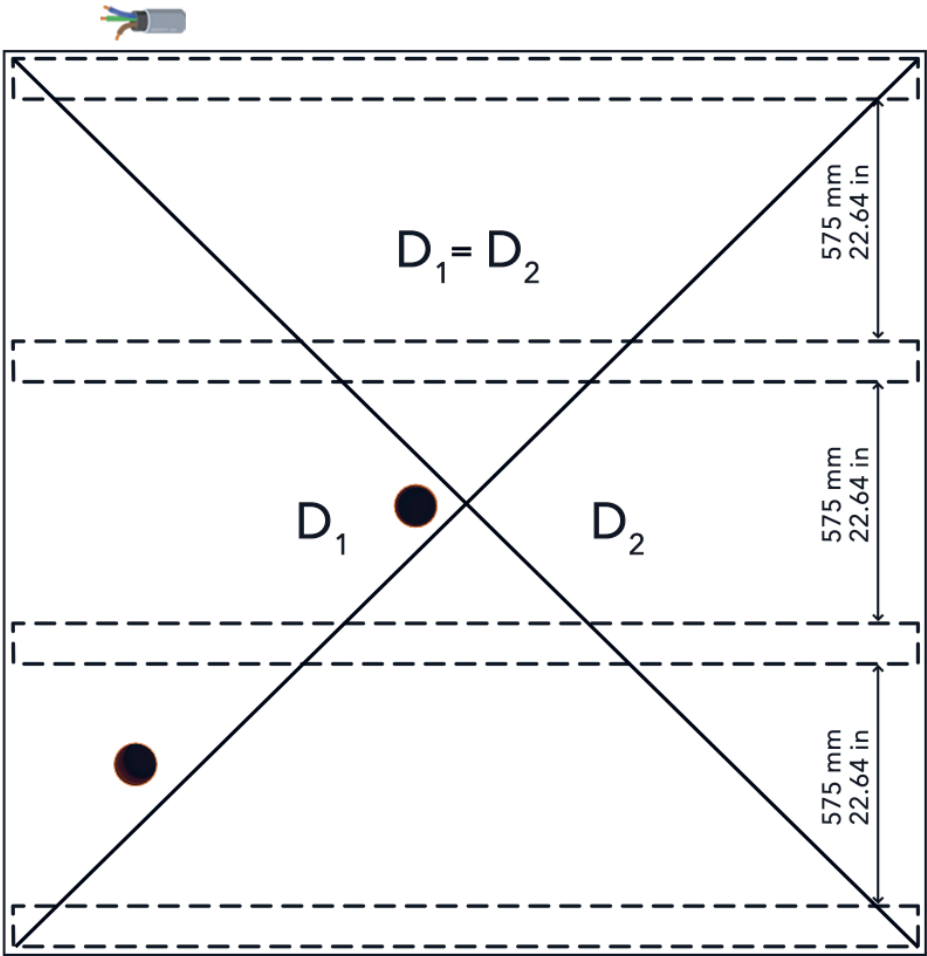


Front side

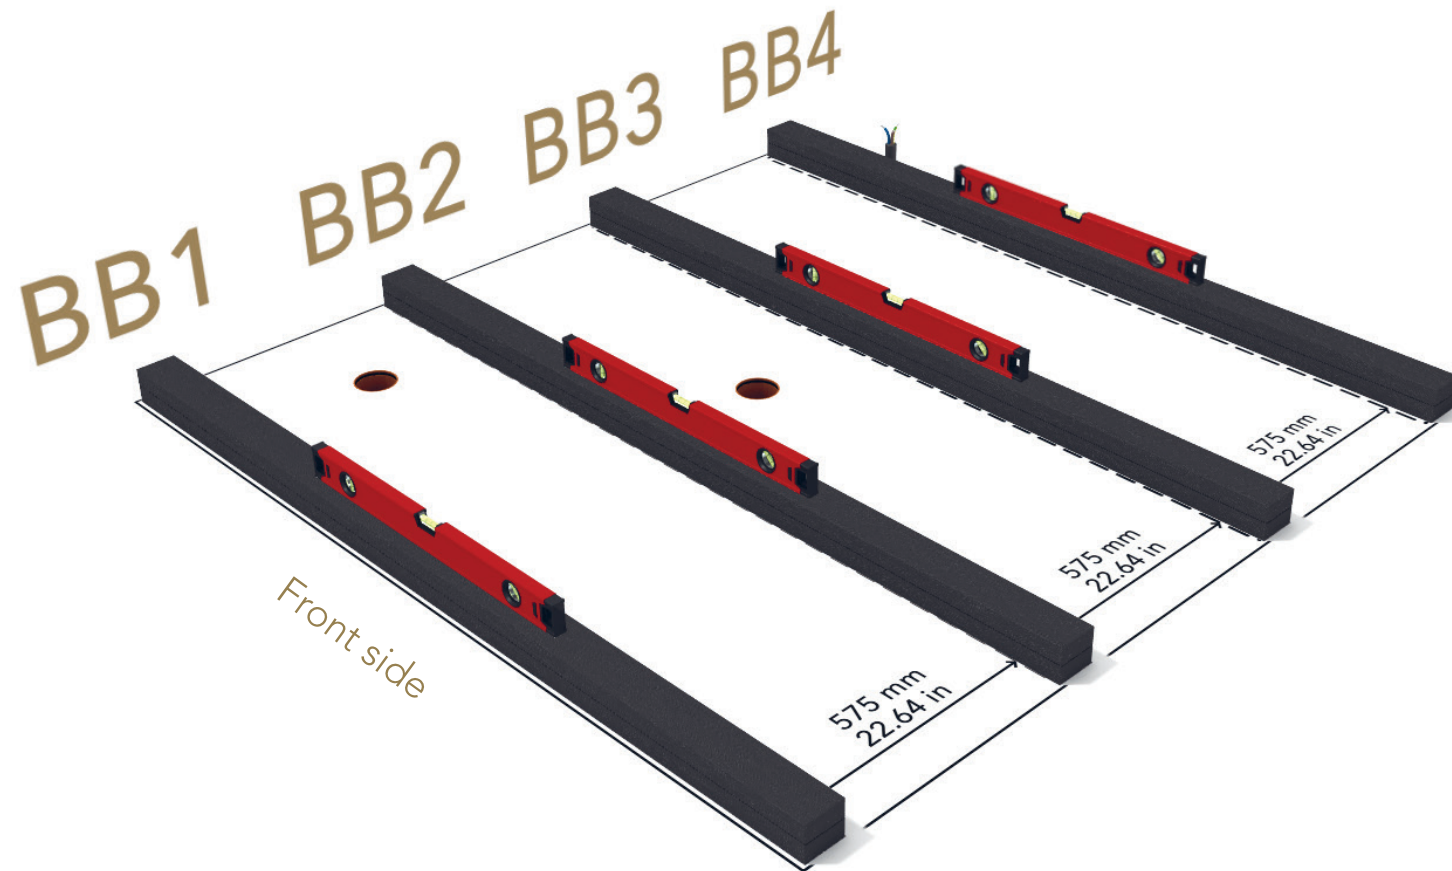

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ BB4
- F1
- F2
- F-EPDM

Mira L with CLT | Flooring

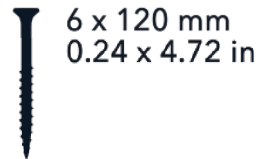

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ BB4
- ✓ F1
- ✓ F2
- F-EPDM

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.

Mira L with CLT | **Flooring**

! Please follow safety precautions for EPDM rubber installation.




Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ BB4
- ✓ F1
- ✓ F2
- ✓ F-EPDM



AURROOM

Mira L with CLT | Flooring

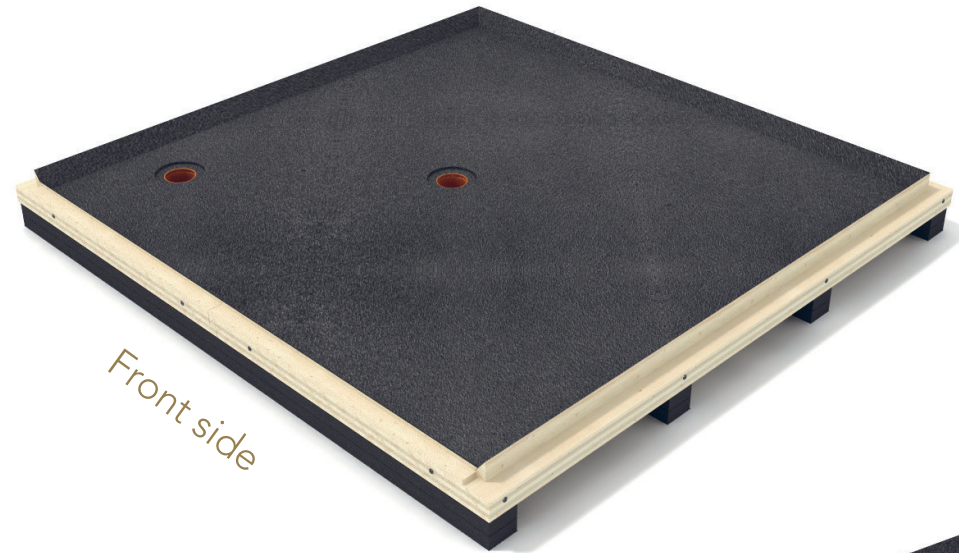


Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ BB4
- ✓ F1
- ✓ F2
- ✓ F-EPDM

Phase 4:
Walls




Mira L with CLT | Walls

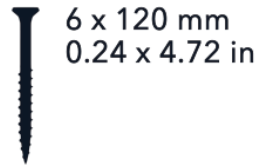

Checklist

- ✓ BIW1
- AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



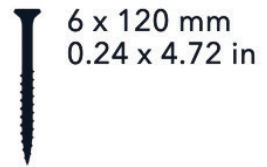


Checklist

- ✓ BIW1
- ✓ AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2




Mira L with CLT | Walls

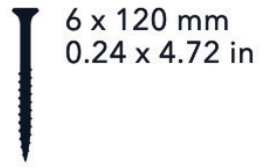

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



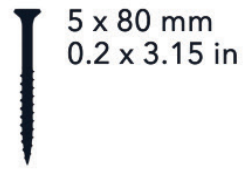


Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



Mira L with CLT | Walls

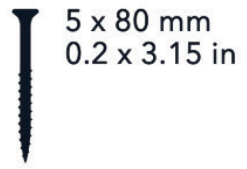

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



After installation, apply tape to seal the joints between the elements.


Mira L with CLT | Walls

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2




Mira L with CLT | Walls

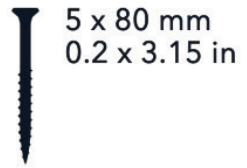

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2



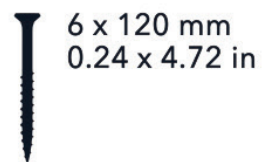

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2

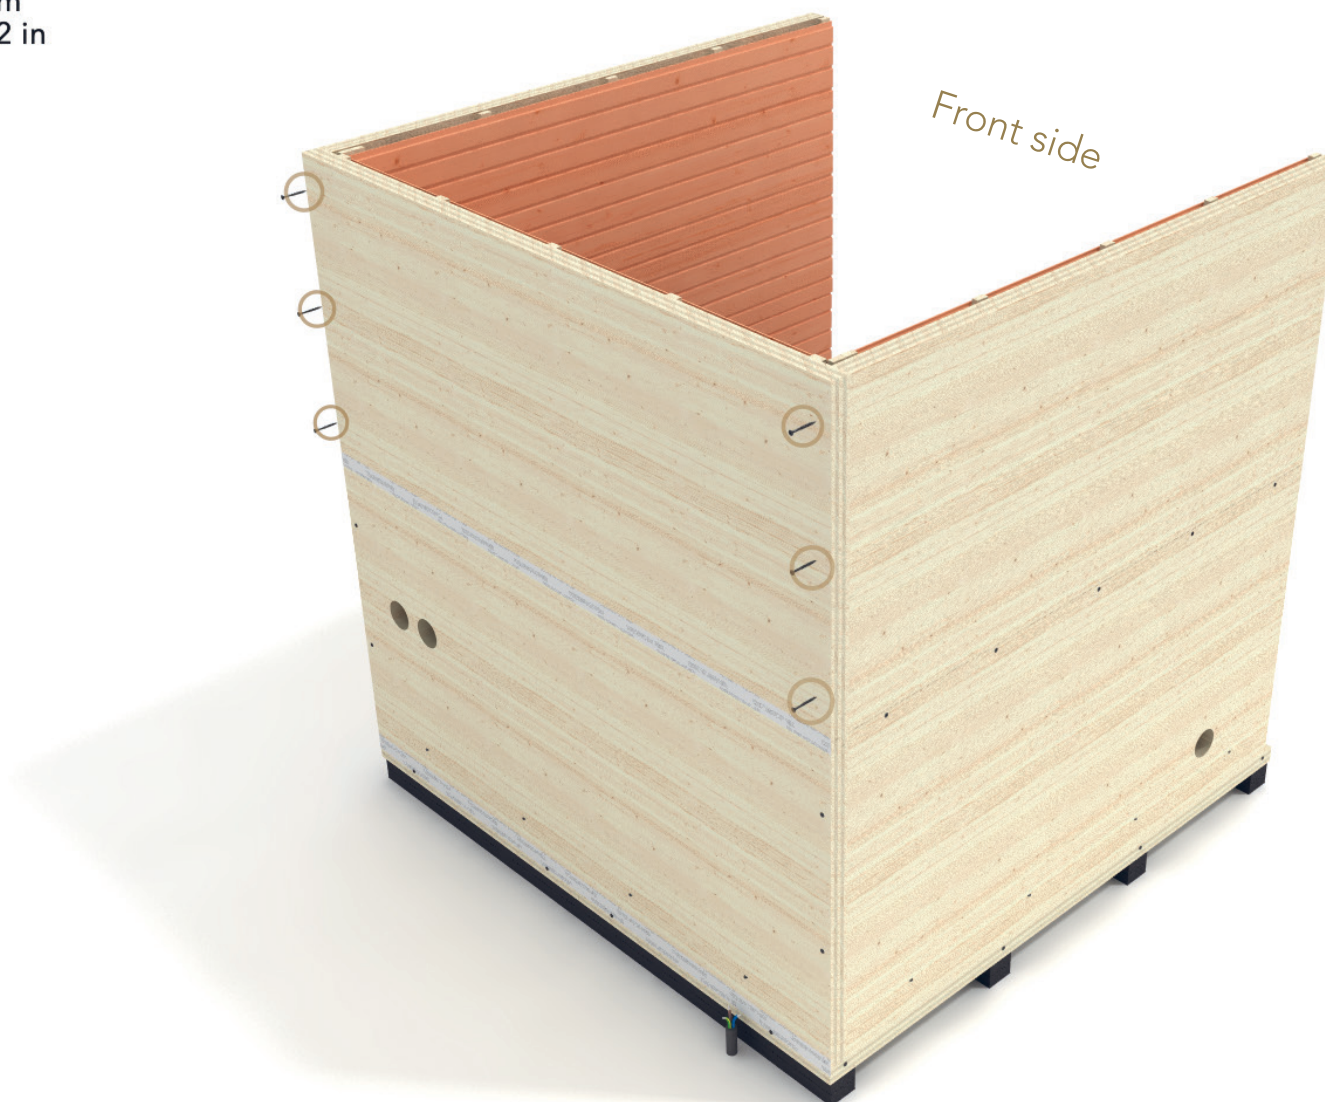

Mira L with CLT | Walls


After installation, apply tape to seal the joints between the elements.

Front side

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2



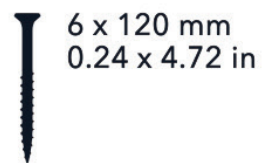

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2

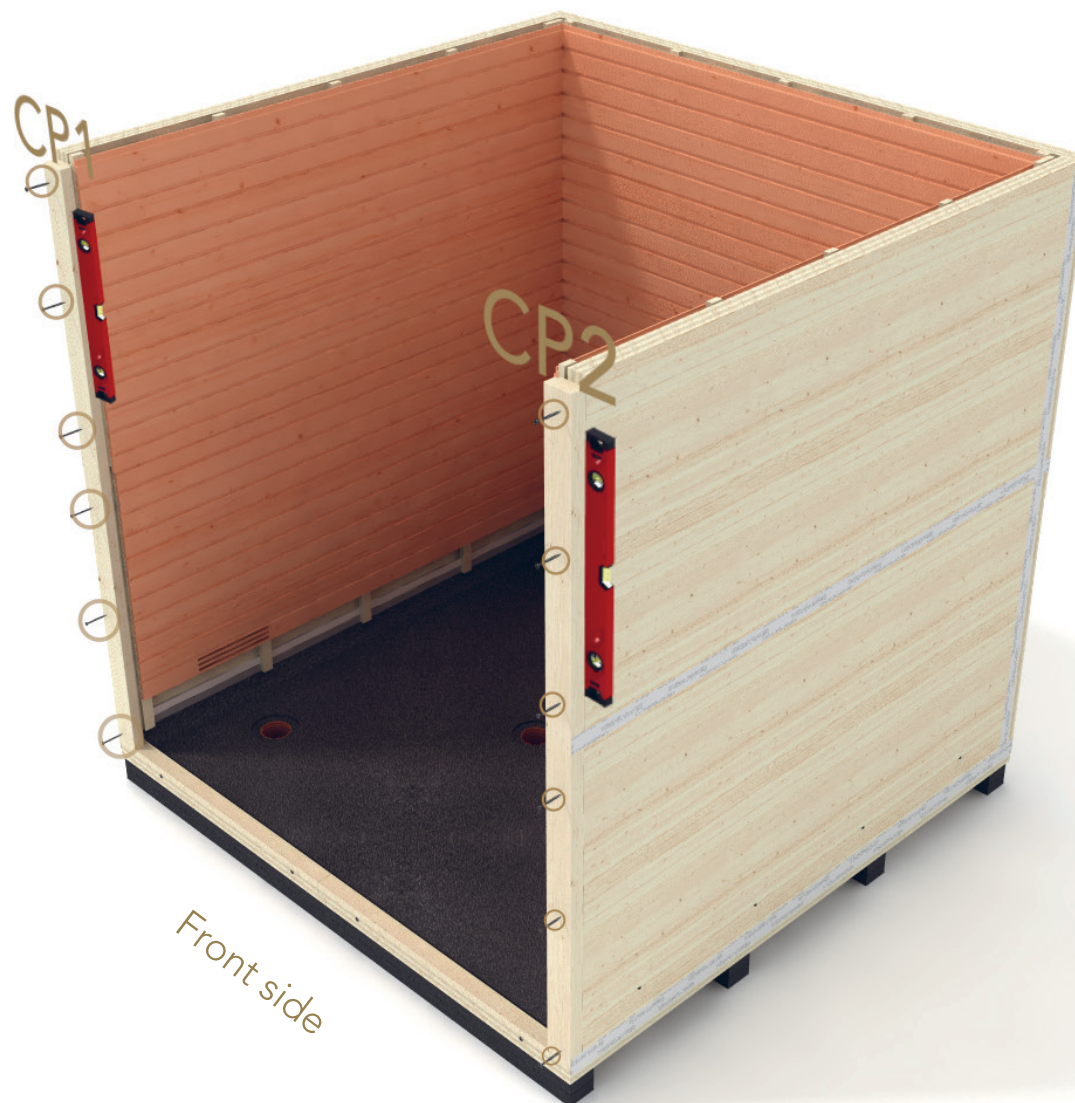


Mira L with CLT | Walls

After installation, apply tape to seal the joints between the elements.

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2



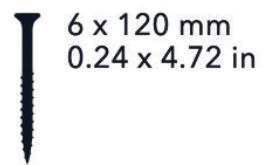


Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2

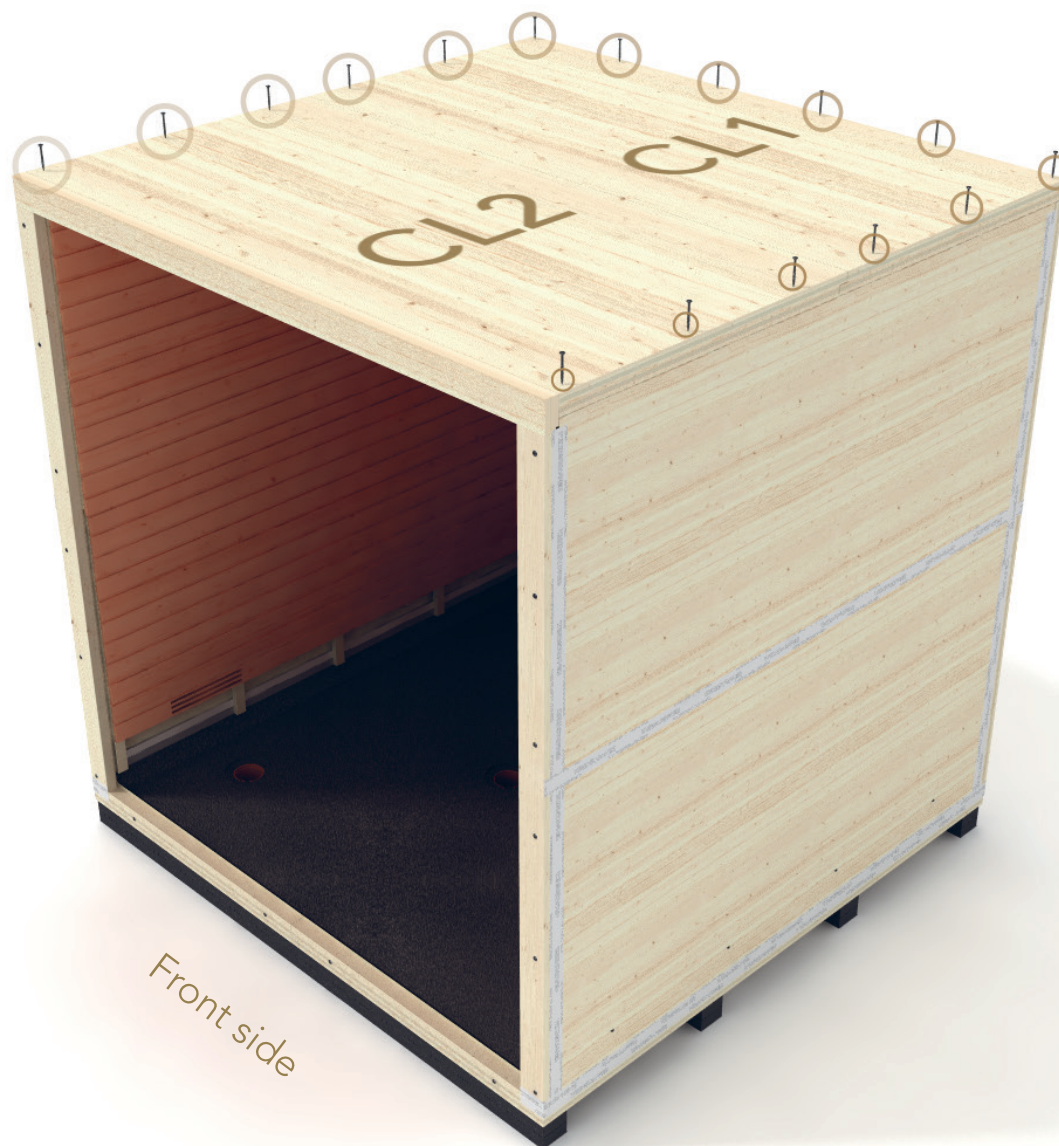

Mira L with CLT | Walls

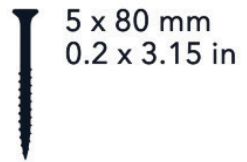

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2




Phase 5:

Roofing




Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- RO1
- RO2

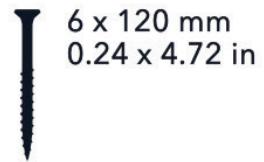


Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- RO1
- RO2

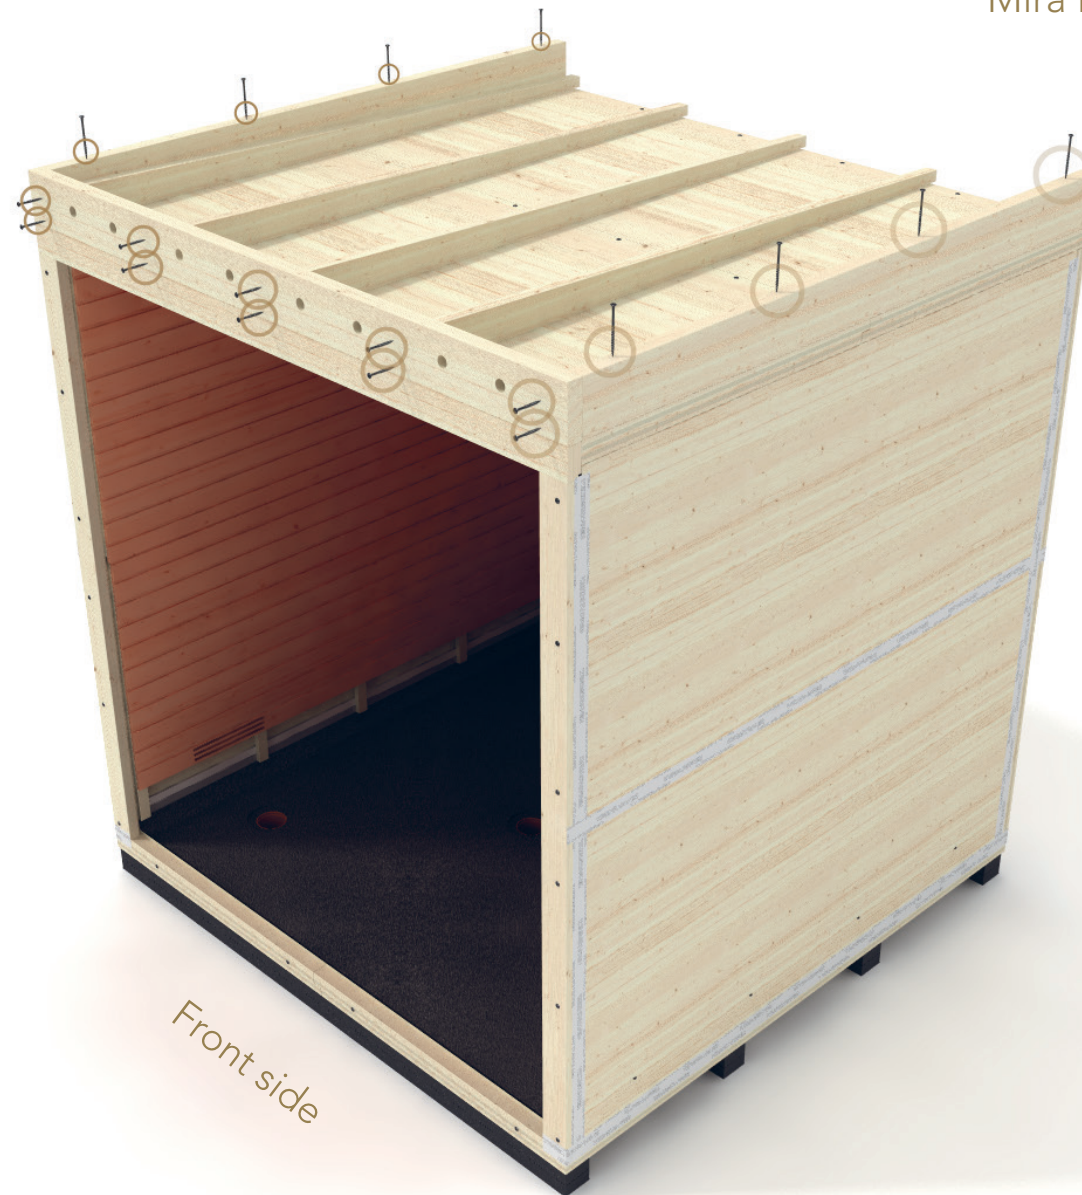


Mira L with CLT | Roofing

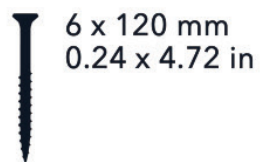

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- RO1
- RO2



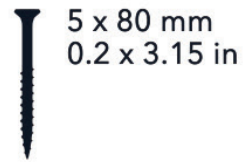


Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- RO1
- RO2



Mira L with CLT | Roofing

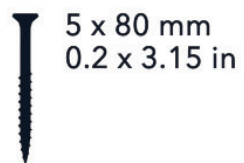


Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- RO1
- RO2




Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- ✓ RO1
- ✓ RO2

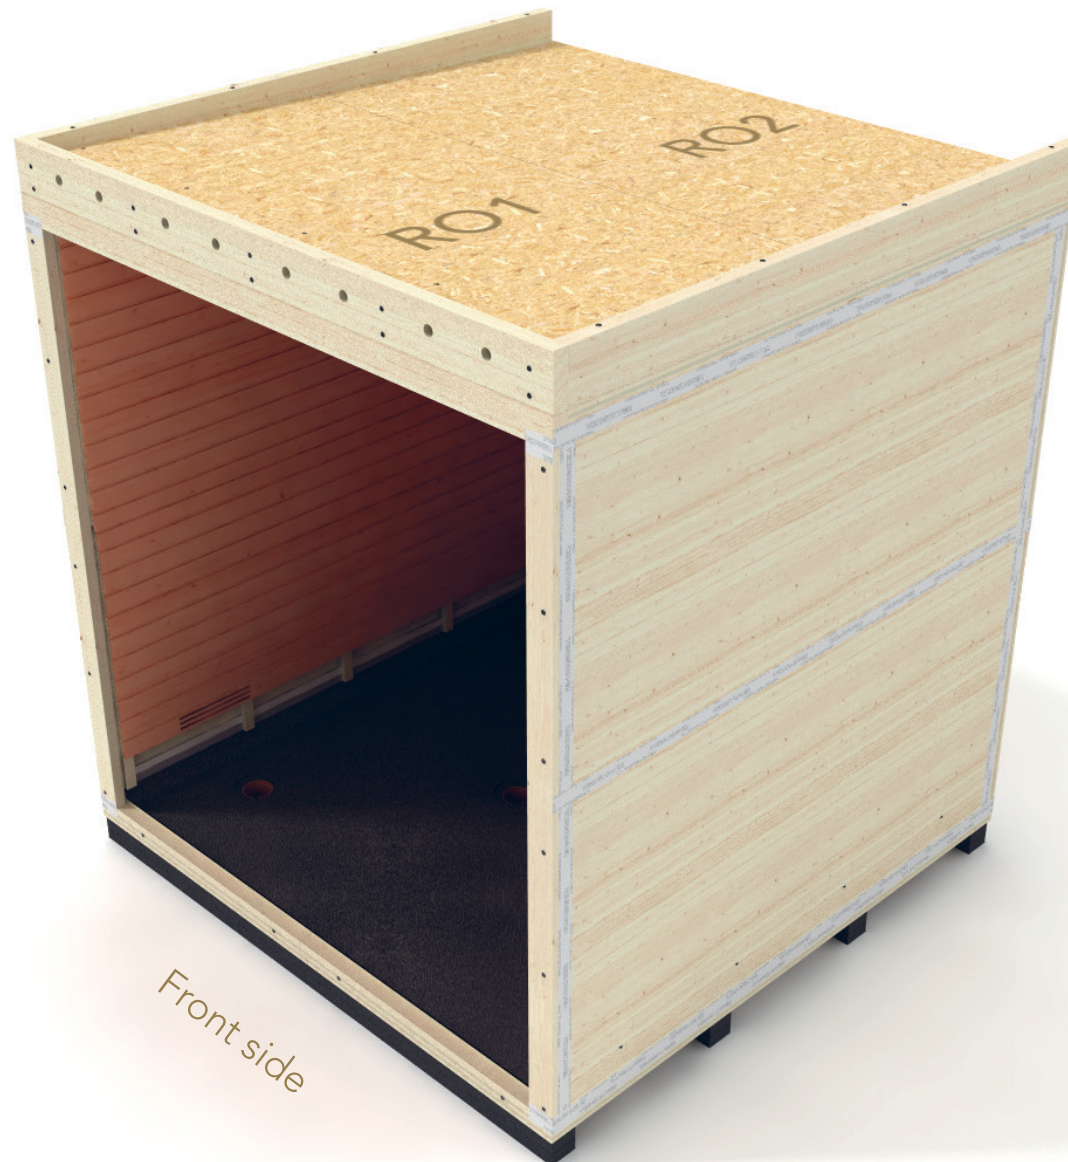


Mira L with CLT | Roofing

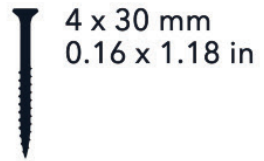

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RSB5
- ✓ RO1
- ✓ RO2

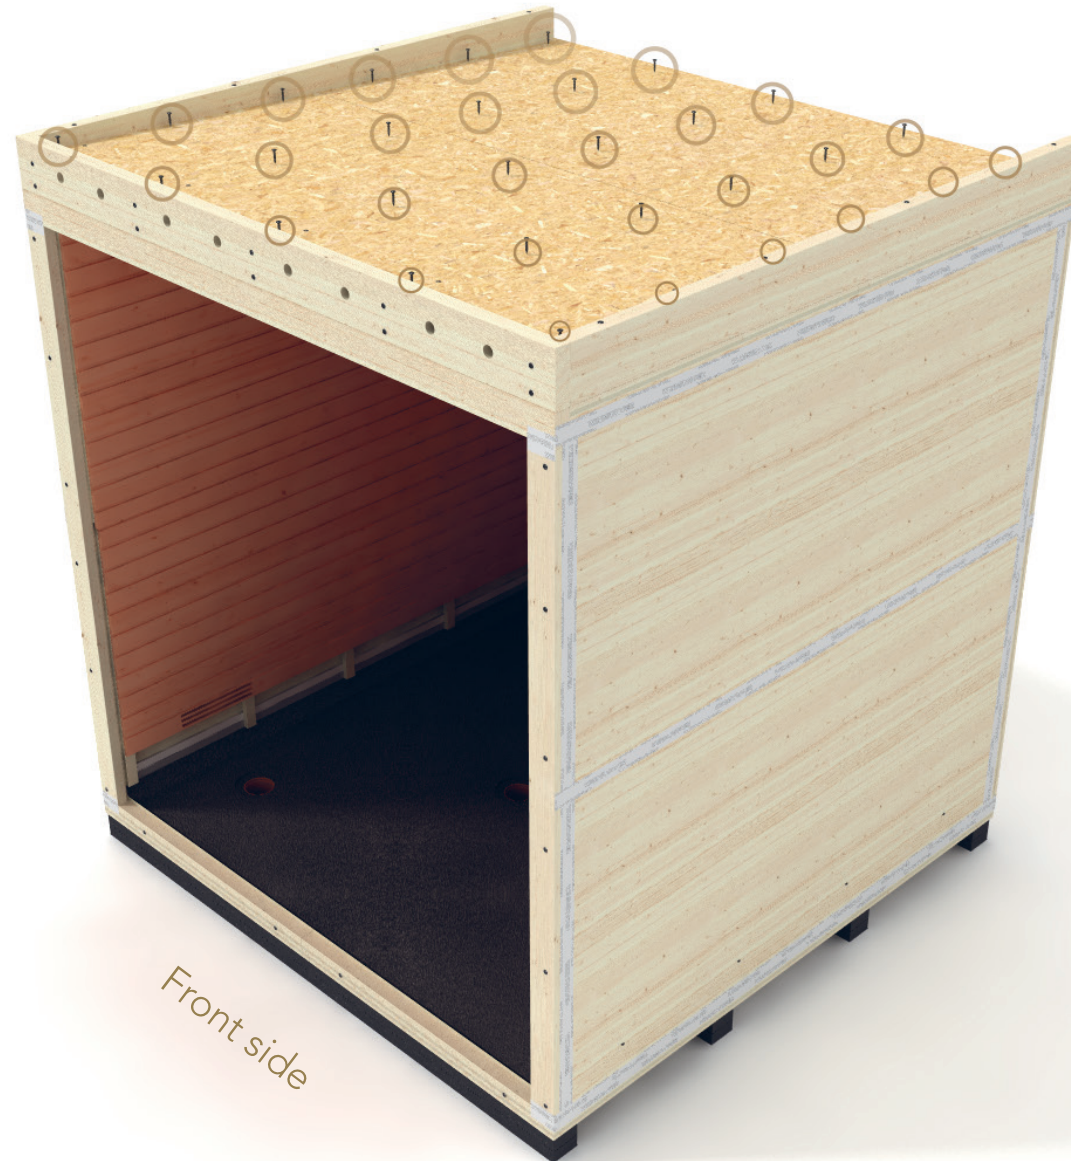


Phase 6:

Exterior walls




Mira L with CLT | Exterior walls

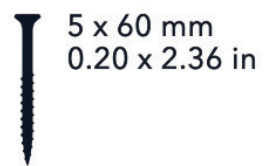


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1

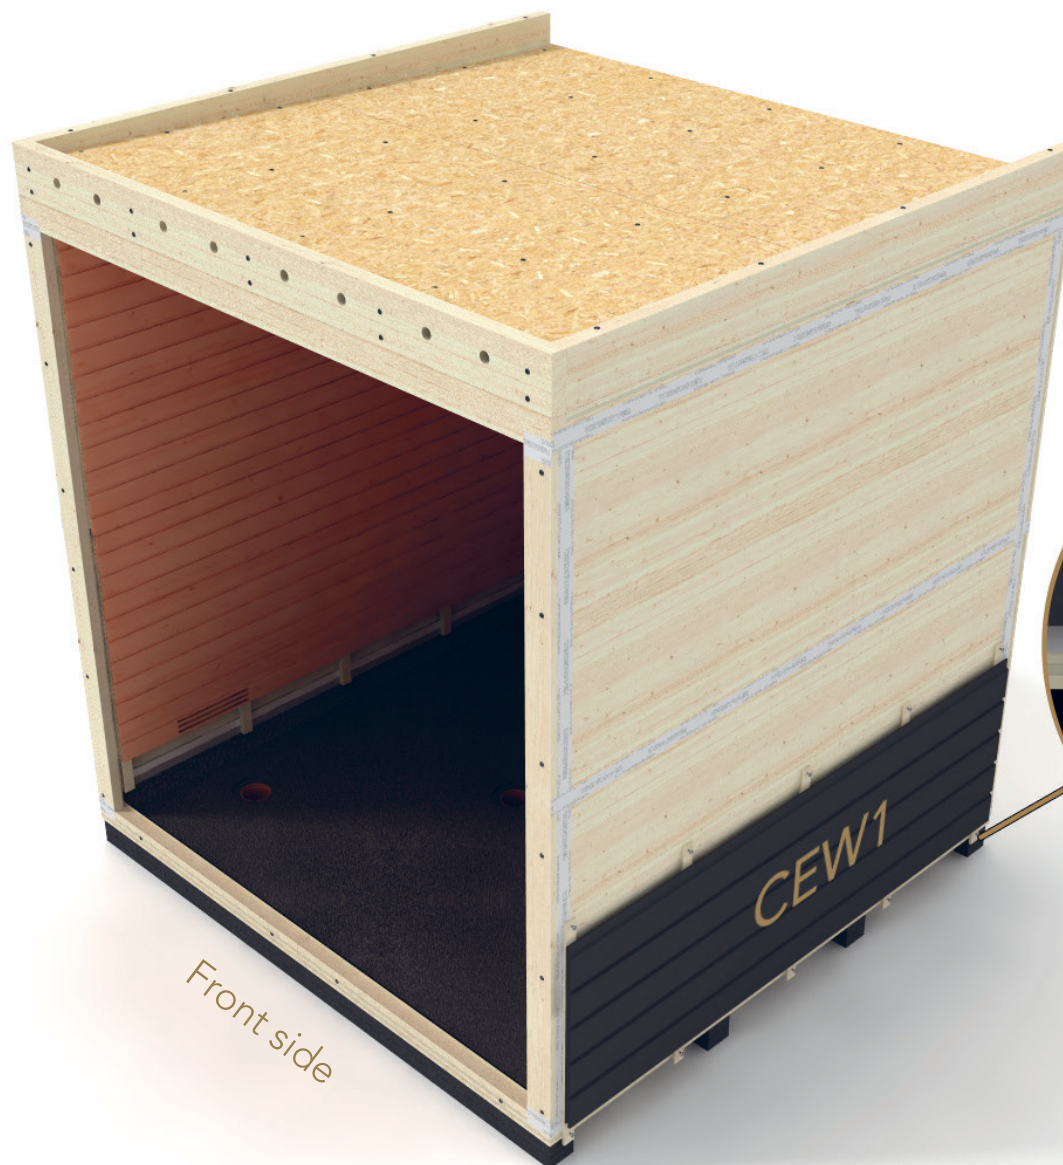


36 mm / 1.42 in

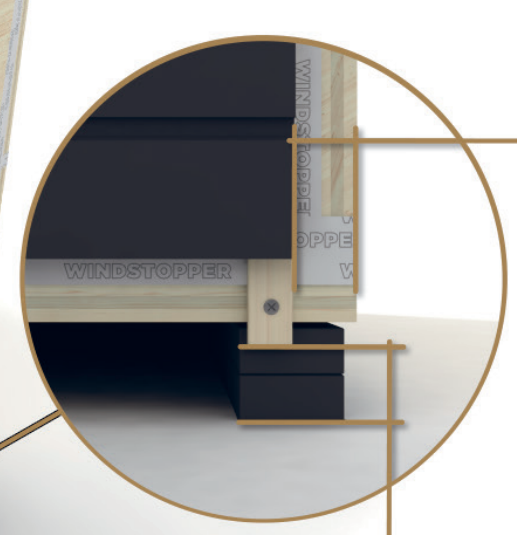

70 mm / 2.76 in


AURROOM

Mira L with CLT | Exterior walls

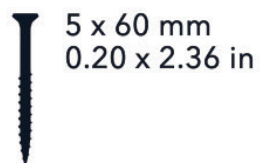


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- ✓ SBB1
- ✓ STB1

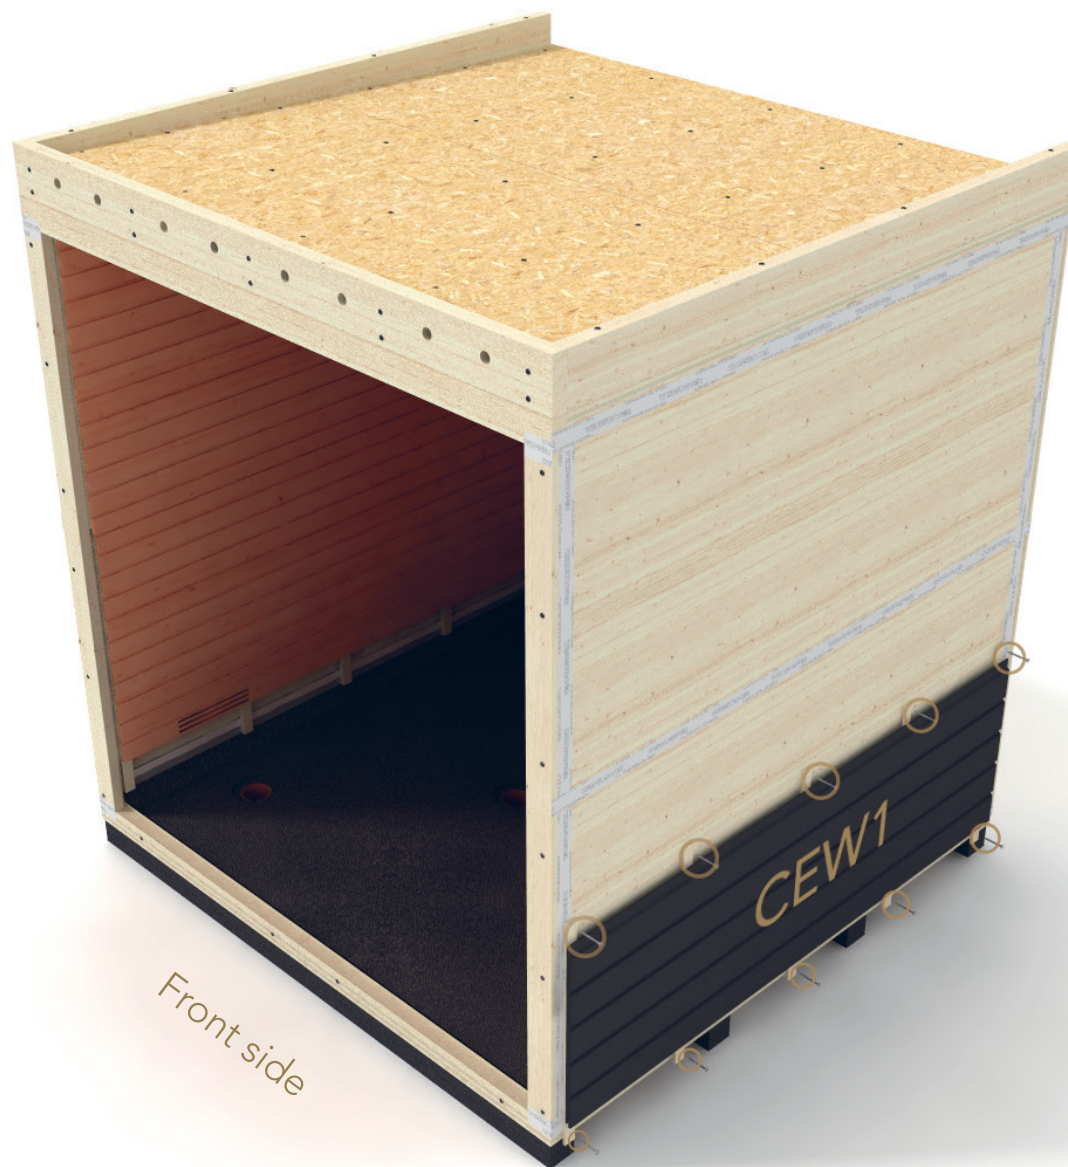

AURROOM


Mira L with CLT | Exterior walls

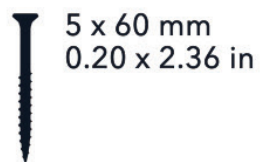

Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



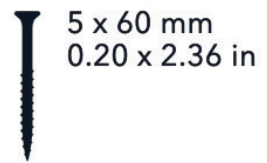


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1





Mira L with CLT | Exterior walls

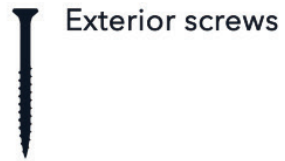

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1

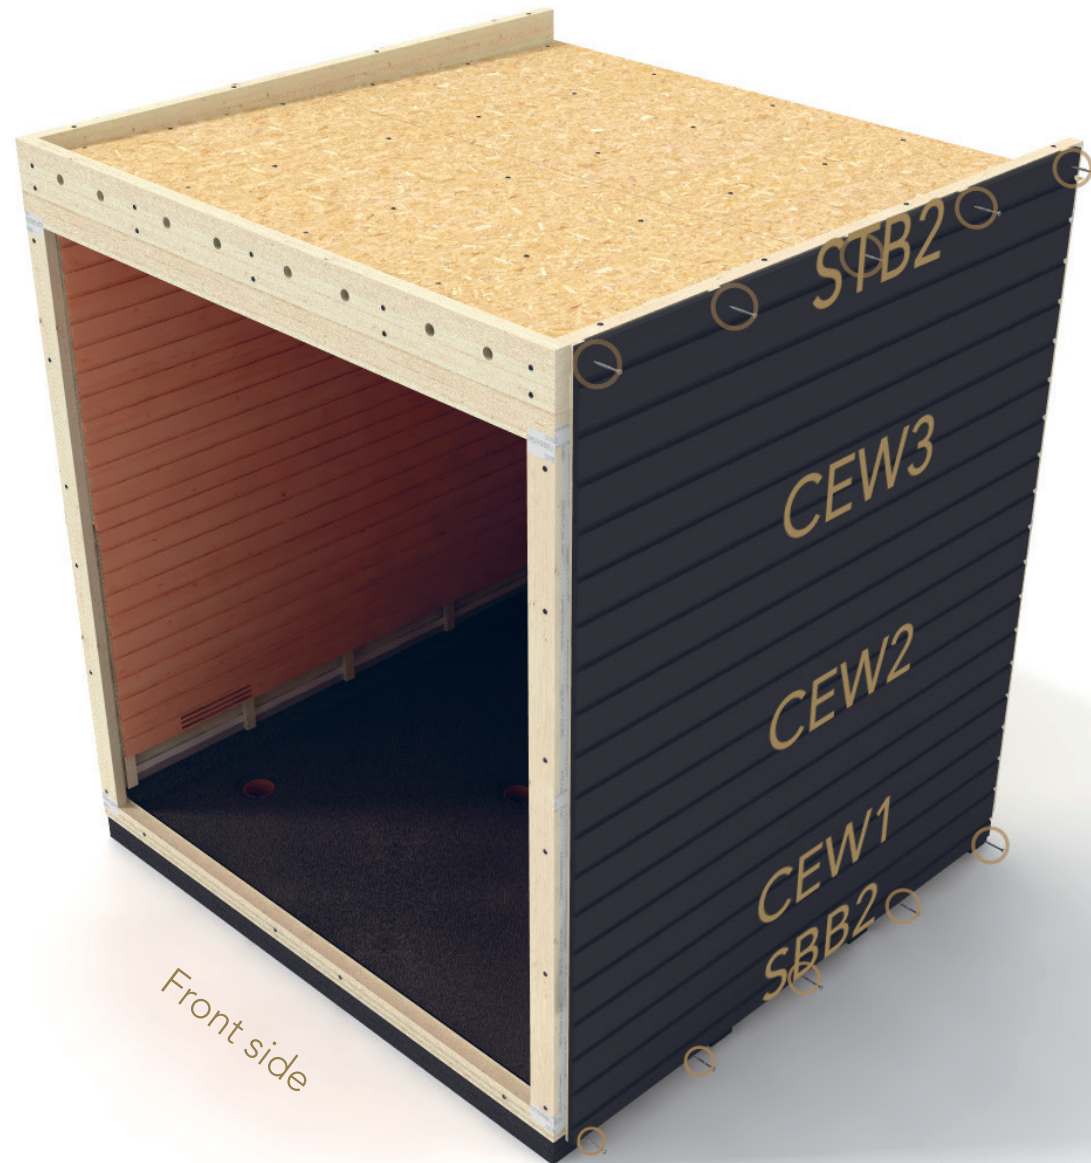

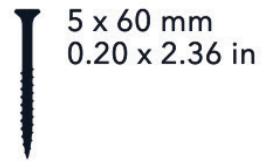


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira L with CLT | Exterior walls

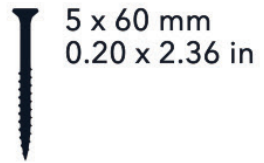

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



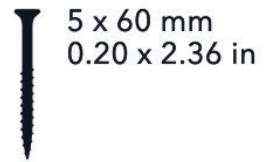

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



Mira L with CLT | Exterior walls




Exterior screws

Checklist


- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



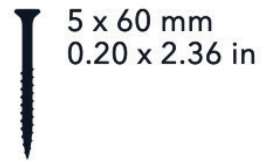


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- AEW2
- AEW3
- SBB1
- STB1

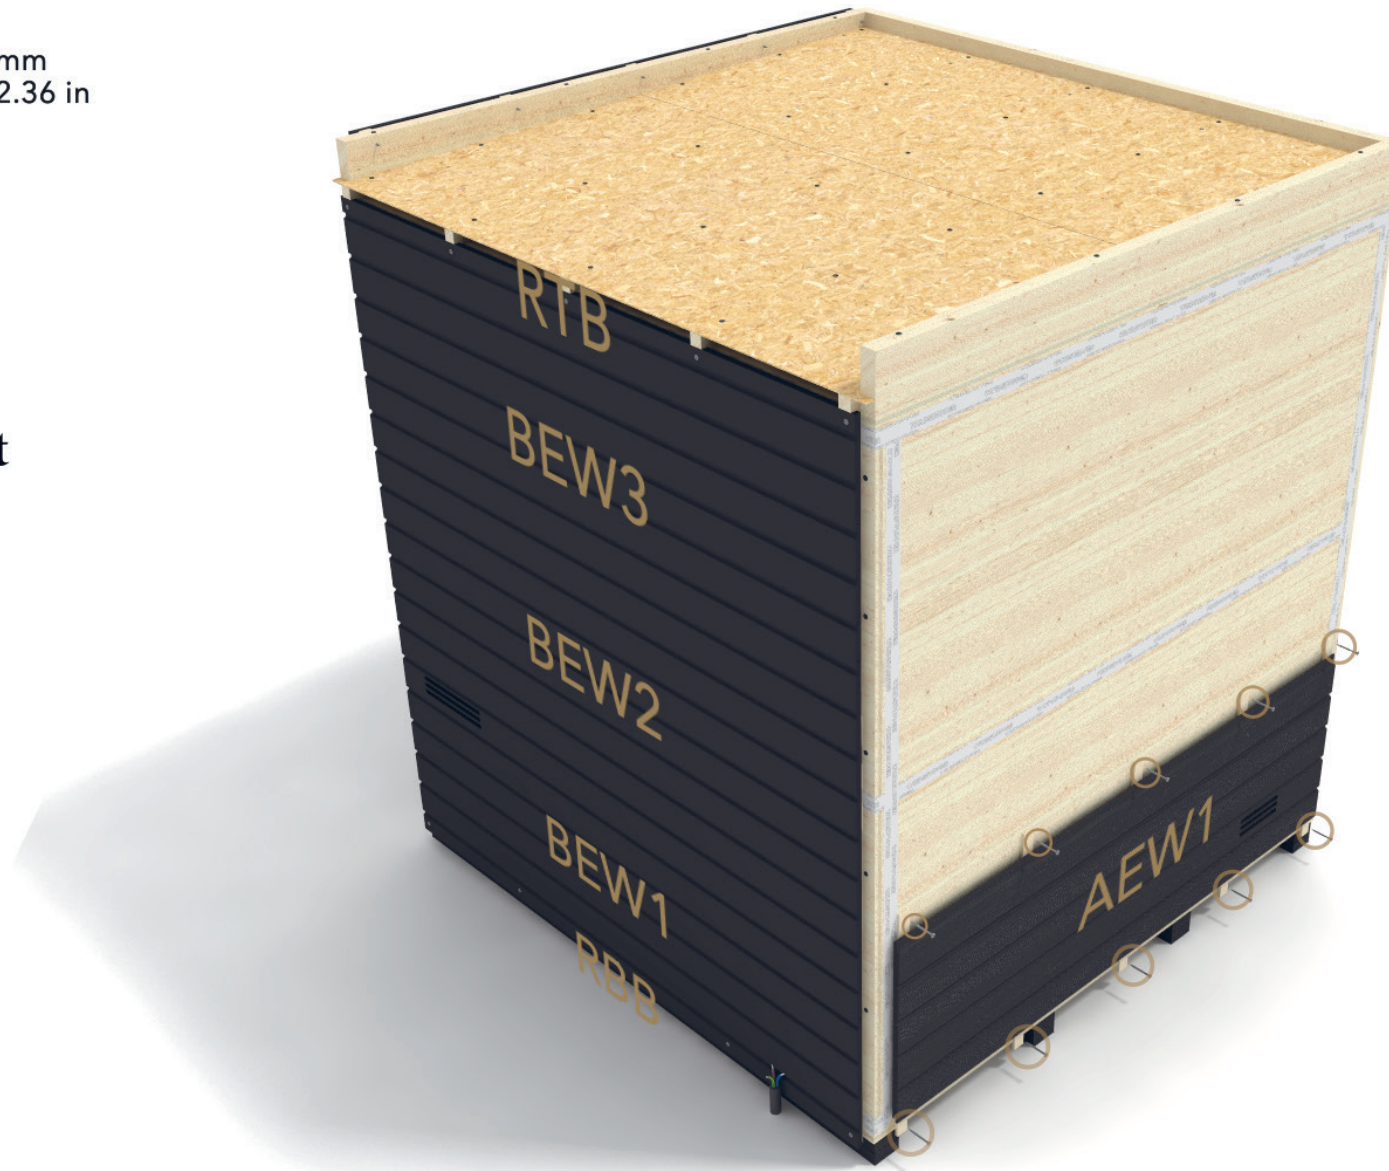



Mira L with CLT | Exterior walls

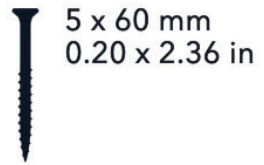

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- AEW3
- SBB1
- STB1

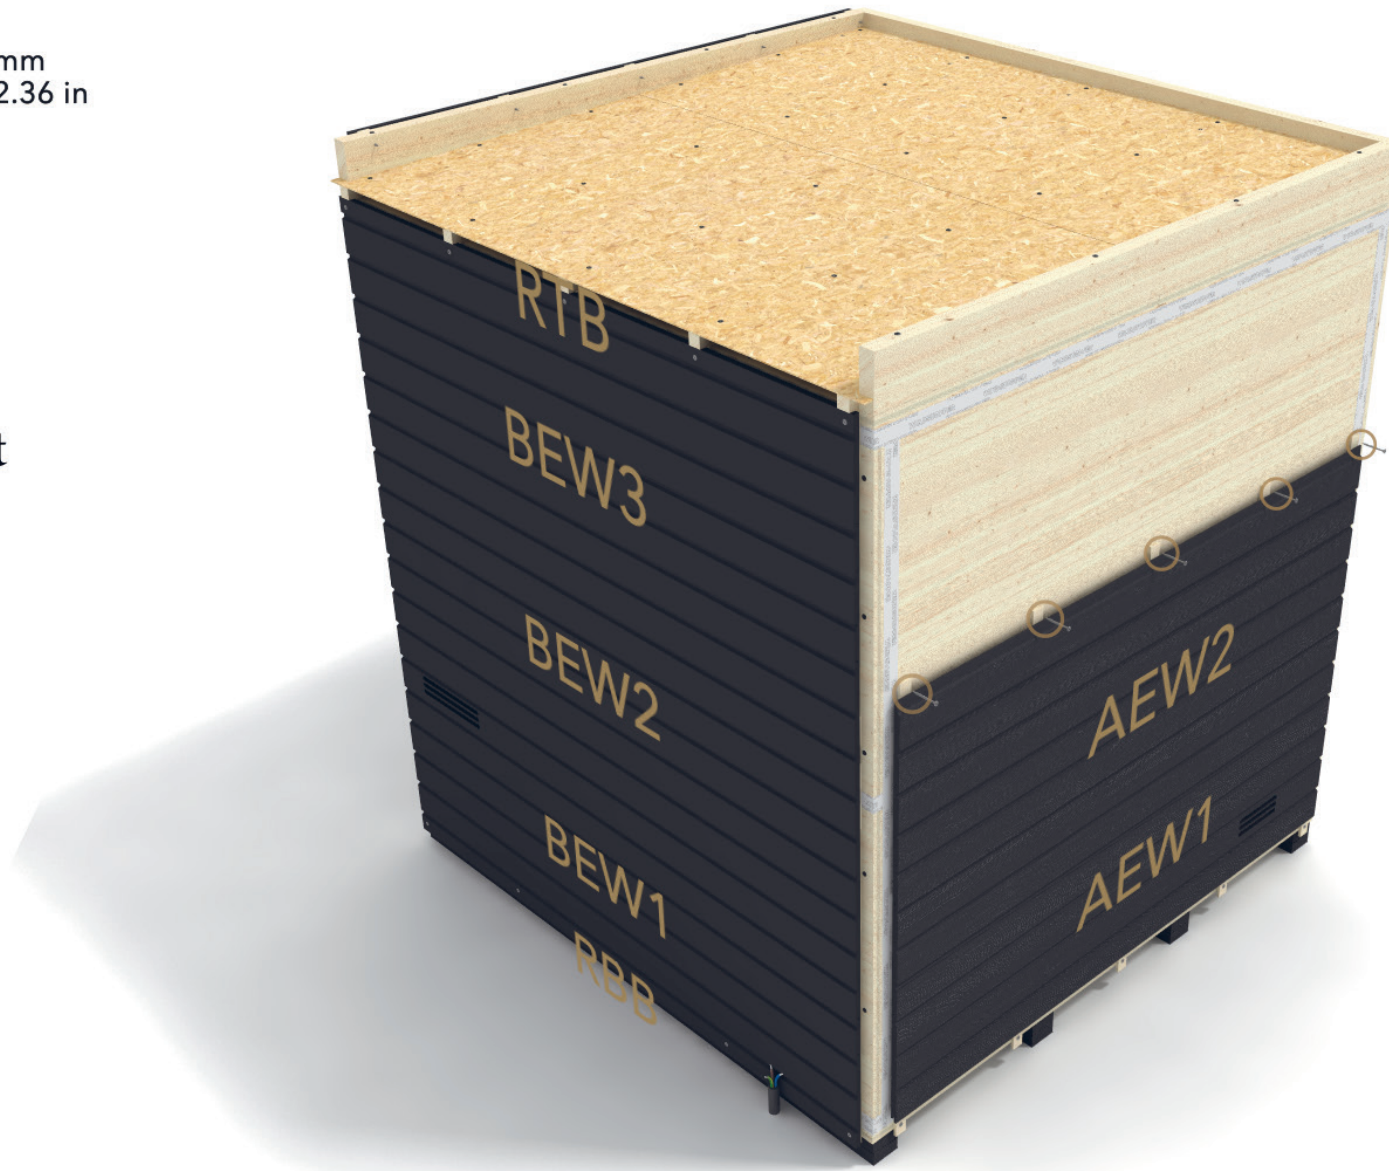

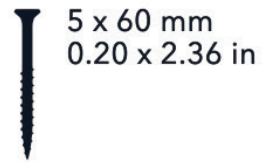

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- SBB1
- STB1



Mira L with CLT | Exterior walls




Exterior screws


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- ✓ SBB1
- ✓ STB1



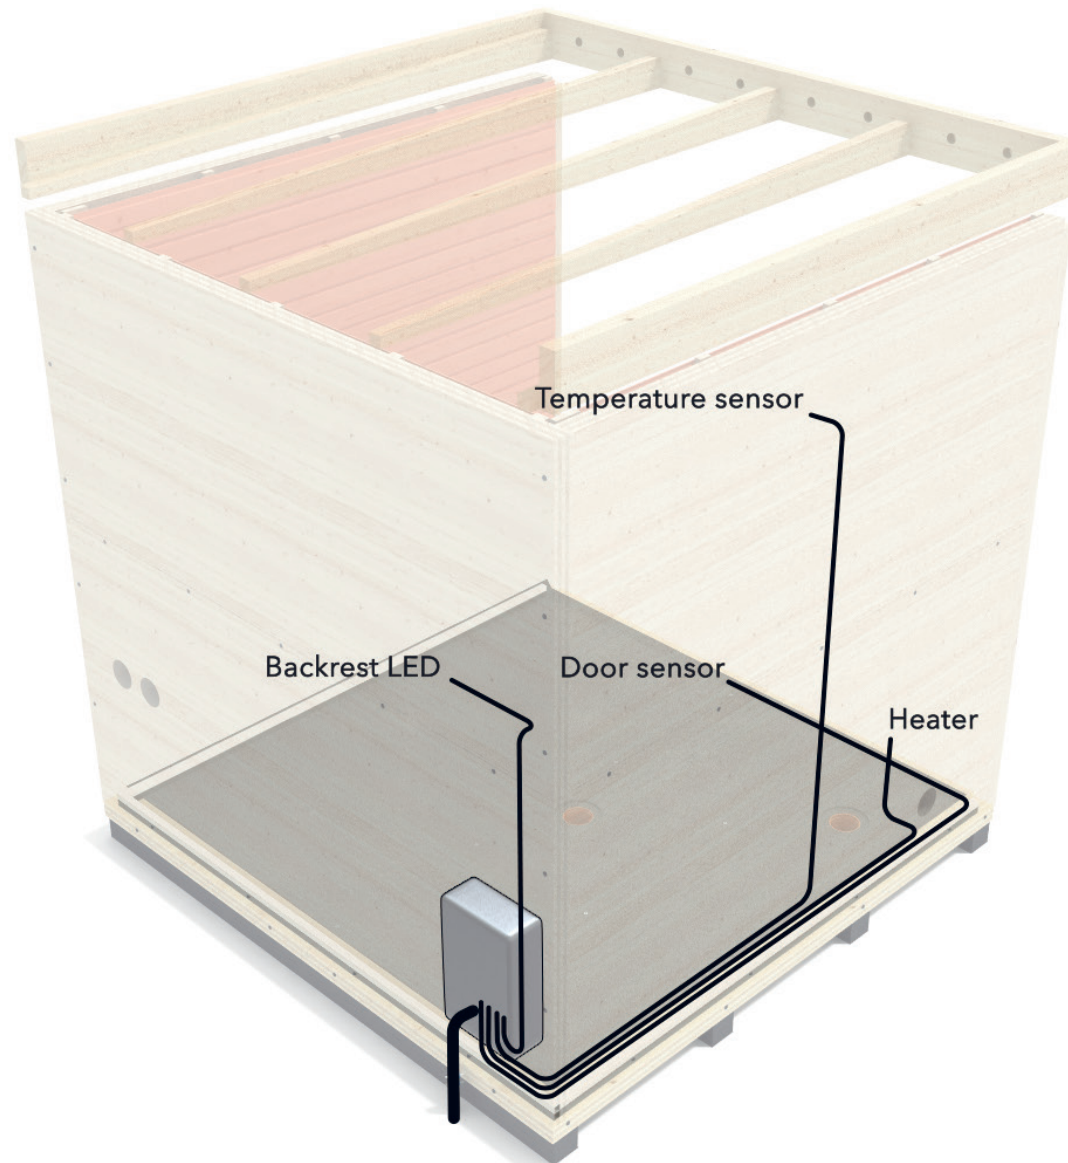

Mira L with CLT | Exterior walls

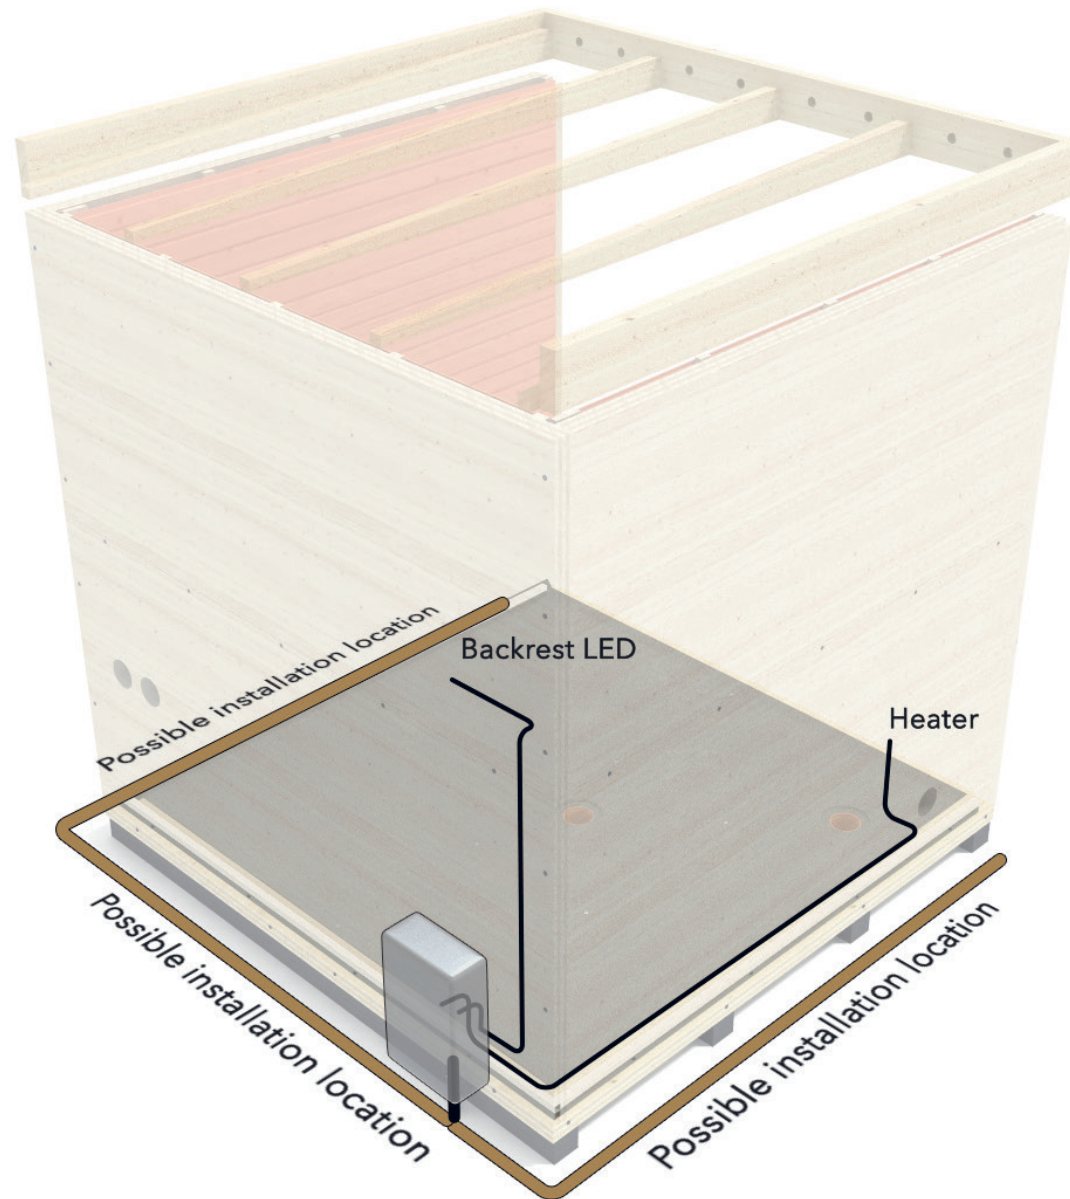

Phase 7:

Finishing the interior walls



Mira L with CLT | Interior walls

Ensure that all electrical cables are installed before attaching or securing the loose boards.



Brown screws




Checklist

- ✓ BSB2
- ✓ BSB1
- ✓ BSB3

Phase 8:

Interior


Mira L with CLT | Interior

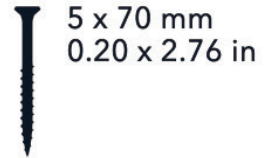

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- FG1 - FG6
- BF1
- BF2
- BS
- BG1
- BG2
- BRS1
- BRS2
- BRS3
- BR
- HGH1
- HGH2
- HG

The height of the bench supports is given from the bottom edge of the interior cladding to the bottom edge of the bench support.

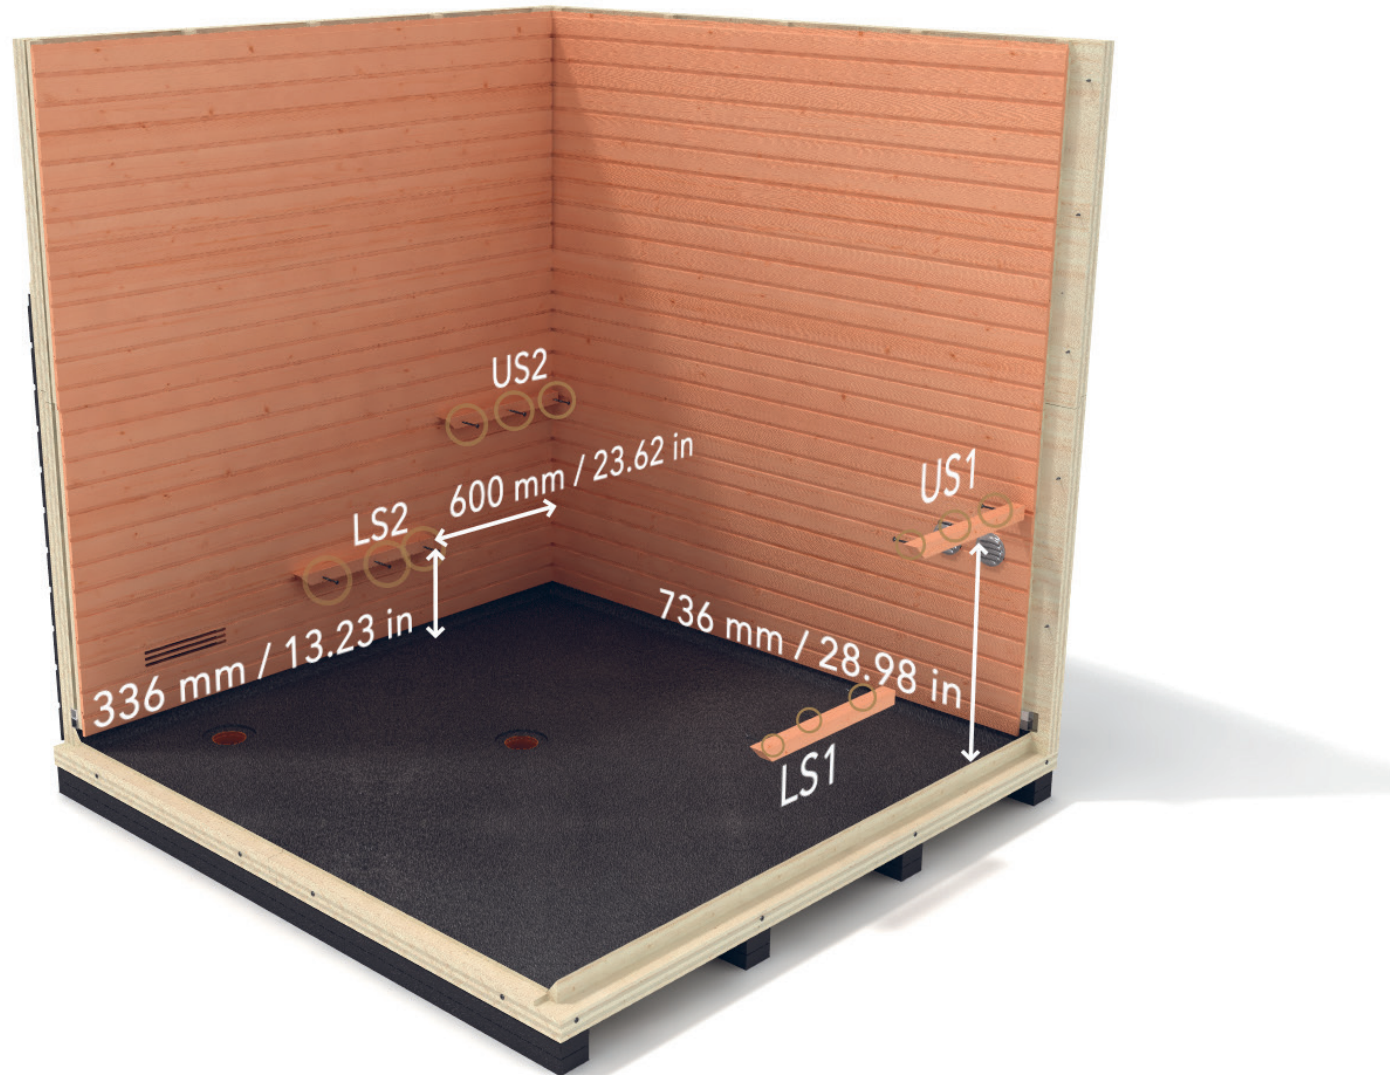

It is recommended to cover the installed floor grids during installation to prevent scratches and dirt.


Mira L with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
 - BF1
 - BF2
 - BS
 - BG1
 - BG2
 - BRS1
 - BRS2
 - BRS3
 - BR
 - HGH1
 - HGH2
 - HG




Mira L with CLT | Interior

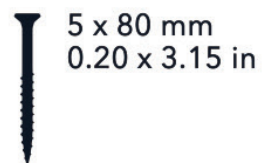

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- BS
- BG1
- BG2
- BRS1
- BRS2
- BRS3
- BR
- HGH1
- HGH2
- HG



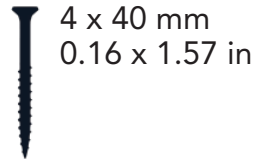

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
 - BG1
 - BG2
 - BRS1
 - BRS2
 - BRS3
 - BR
 - HGH1
 - HGH2
 - HG




Mira L with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
- ✓ BG1
- ✓ BG2
- BRS1
- BRS2
- BRS3
- BR
- HGH1
- HGH2
- HG



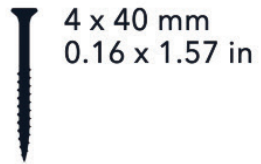


Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
- ✓ BG1
- ✓ BG2
- ✓ BRS1
- ✓ BRS2
- ✓ BRS3
- BR
- HGH1
- HGH2
- HG



Mira L with CLT | Interior

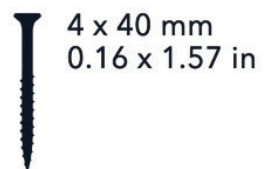

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
- ✓ BG1
- ✓ BG2
- ✓ BRS1
- ✓ BRS2
- ✓ BRS3
- ✓ BR
- HGH1
- HGH2
- HG




Do not use the heater guard if it doesn't conform with the safety distances given by the heater manufacturer.



Mira L with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
- ✓ BG1
- ✓ BG2
- ✓ BRS1
- ✓ BRS2
- ✓ BRS3
- ✓ BR
- ✓ HGH1
- ✓ HGH2
- HG

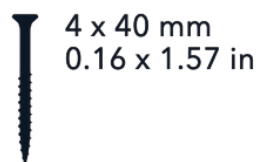

Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ LS2
- ✓ FG1 - FG6
- ✓ BF1
- ✓ BF2
- ✓ BS
- ✓ BG1
- ✓ BG2
- ✓ BRS1
- ✓ BRS2
- ✓ BRS3
- ✓ BR
- ✓ HGH1
- ✓ HGH2
- ✓ HG



Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.


Phase 9:

Front glass



Checklist


- ✓ W1
- ✓ W2
- DW1
- DW2
- DG
- GDH1
- GDH2
- DH
- GDG1
- GDG2

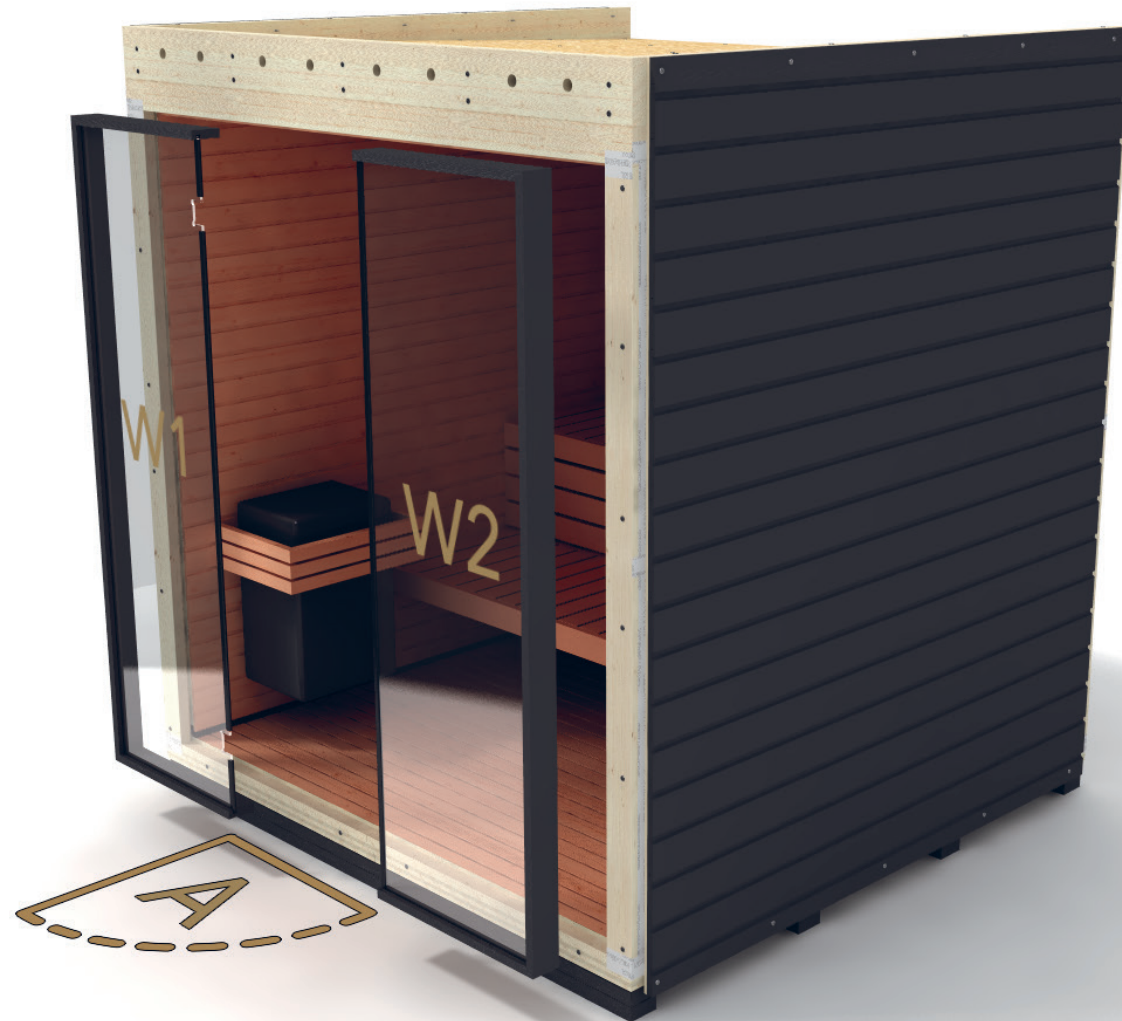

Mira L with CLT | Front glass

Checklist

- ✓ W1
- ✓ W2
- DW1
- DW2
- DG
- GDH1
- GDH2
- DH
- GDG1
- GDG2

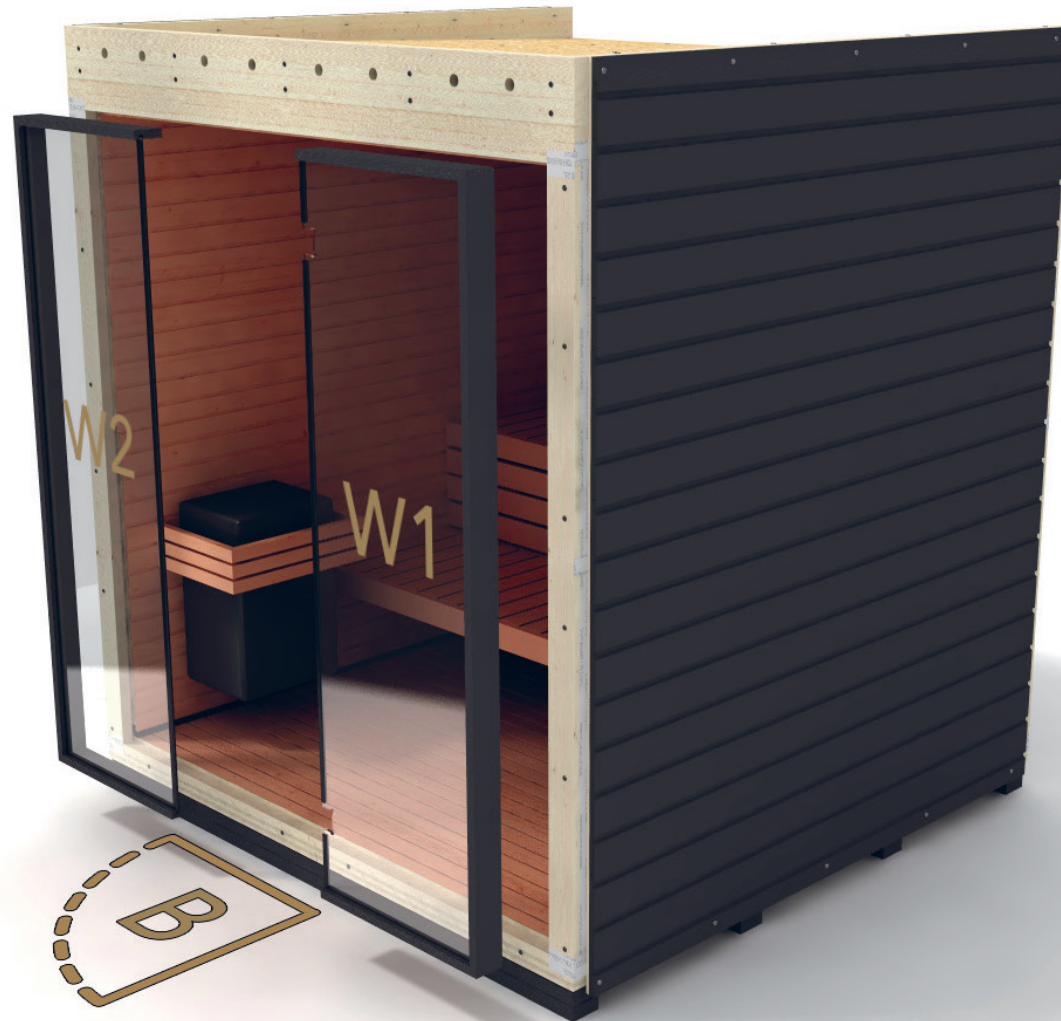

Mira L with CLT | Front glass

Checklist

- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- DG
- GDH1
- GDH2
- DH
- GDG1
- GDG2



Glass Wall Installation Guide


Install the glass wall in the center of the opening.
Ensure there is an equal gap between the frame and the wall on both sides of the glass wall.

Mira L with CLT | Front glass




Checklist

- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- DG
- GDH1
- GDH2
- DH
- GDG1
- GDG2

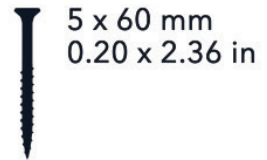

Checklist

- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- DG
- GDH1
- GDH2
- DH
- GDG1
- GDG2

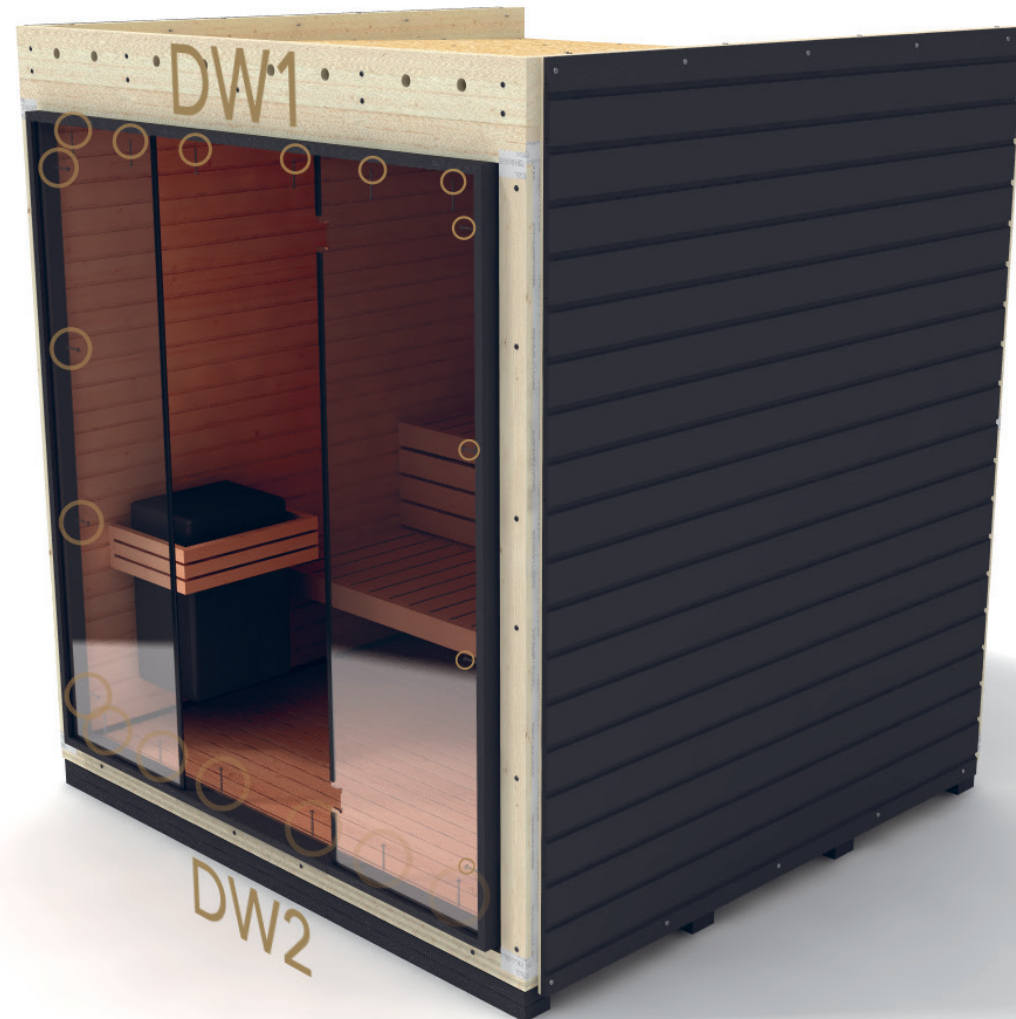

Mira L with CLT | Front glass

A



Checklist


- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- ✓ DG
- ✓ GDH1
- ✓ GDH2
- DH
- GDG1
- GDG2

B



ADROOM

A

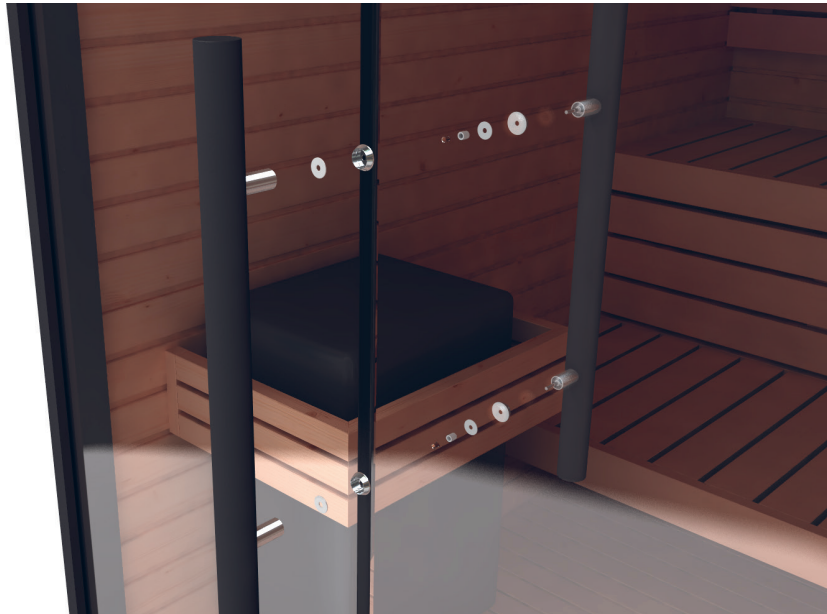

Checklist

- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- ✓ DG
- ✓ GDH1
- ✓ GDH2
- ✓ DH
 - GDG1
 - GDG2

B




AURUM

Mira L with CLT | Front glass

Checklist



- ✓ W1
- ✓ W2
- ✓ DW1
- ✓ DW2
- ✓ DG
- ✓ GDH1
- ✓ GDH2
- ✓ DH
- ✓ GDG1
- ✓ GDG2



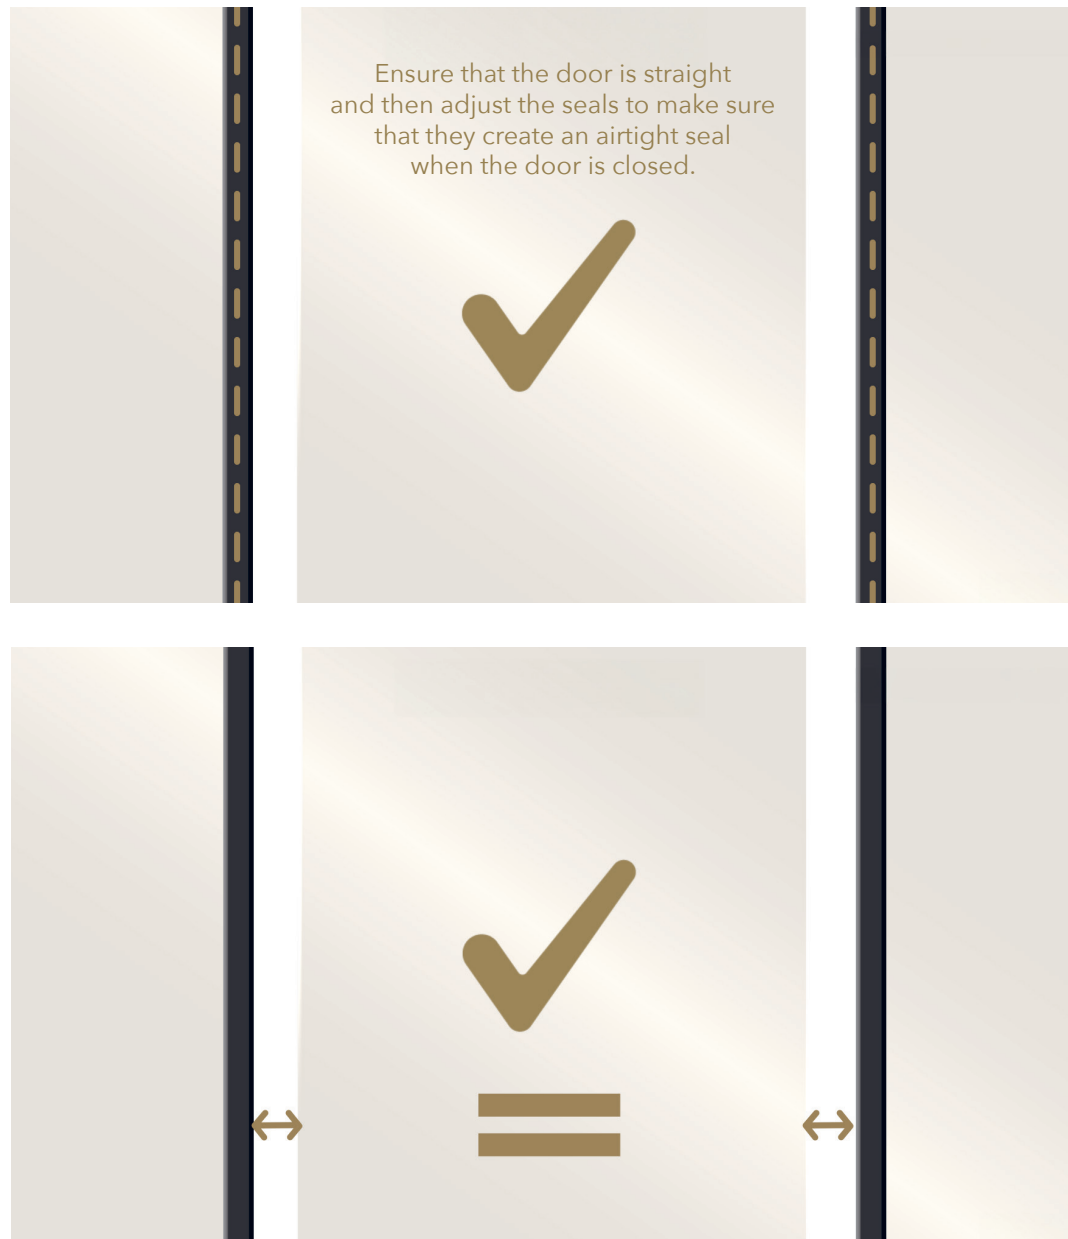

Mira L with CLT | Front glass

Adjust the door glass before gluing the seal.
The soft lip of the seal can be shortened by tearing off part of it.
Adjust the height of the seal to match the gap between the glass and the doorframe.

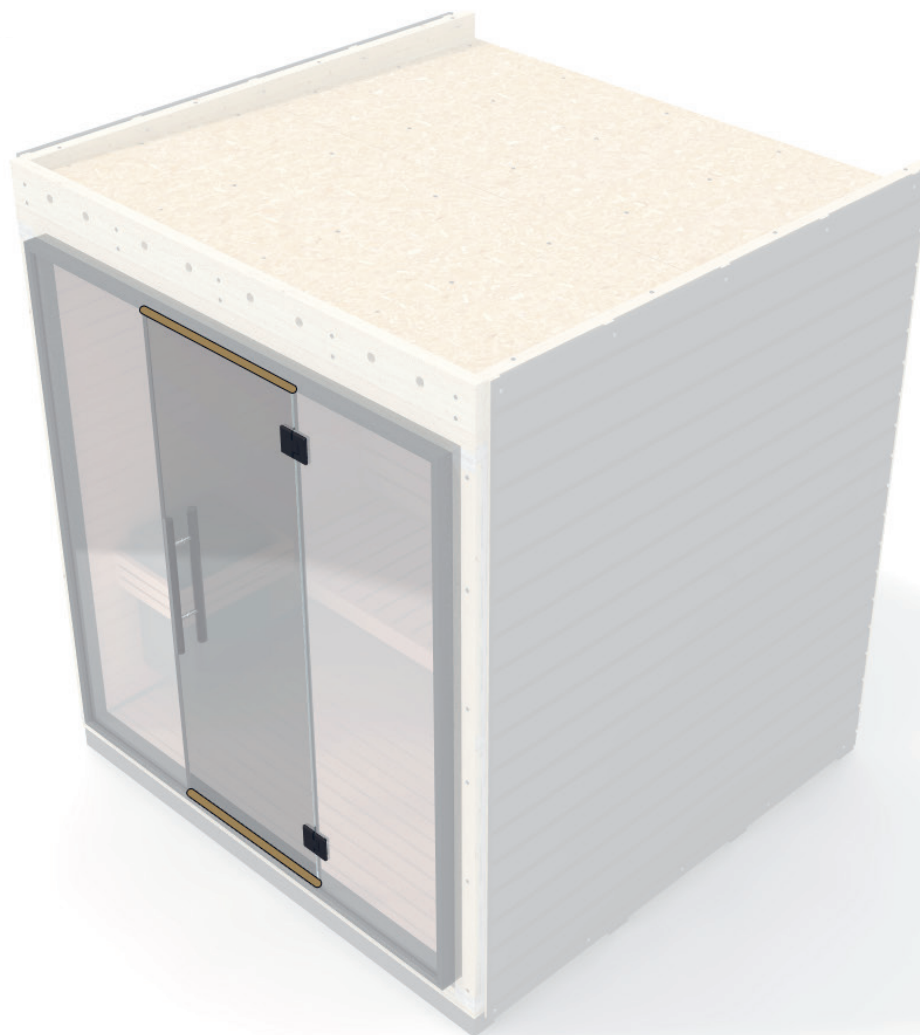
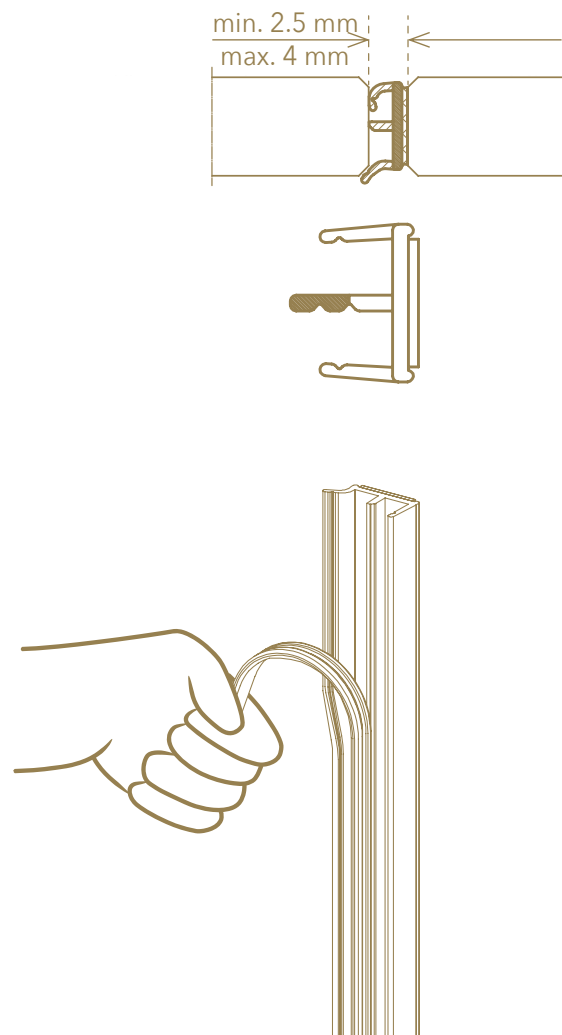


Tape Installation Guide

Positioning the Tape: Ensure there is a 20 mm (0.8 inch) gap between the tape and the edge of the glass wall frame. This ensures the tape remains hidden after installing the external cladding panels.

Mira L with CLT | Front glass


Right Side View

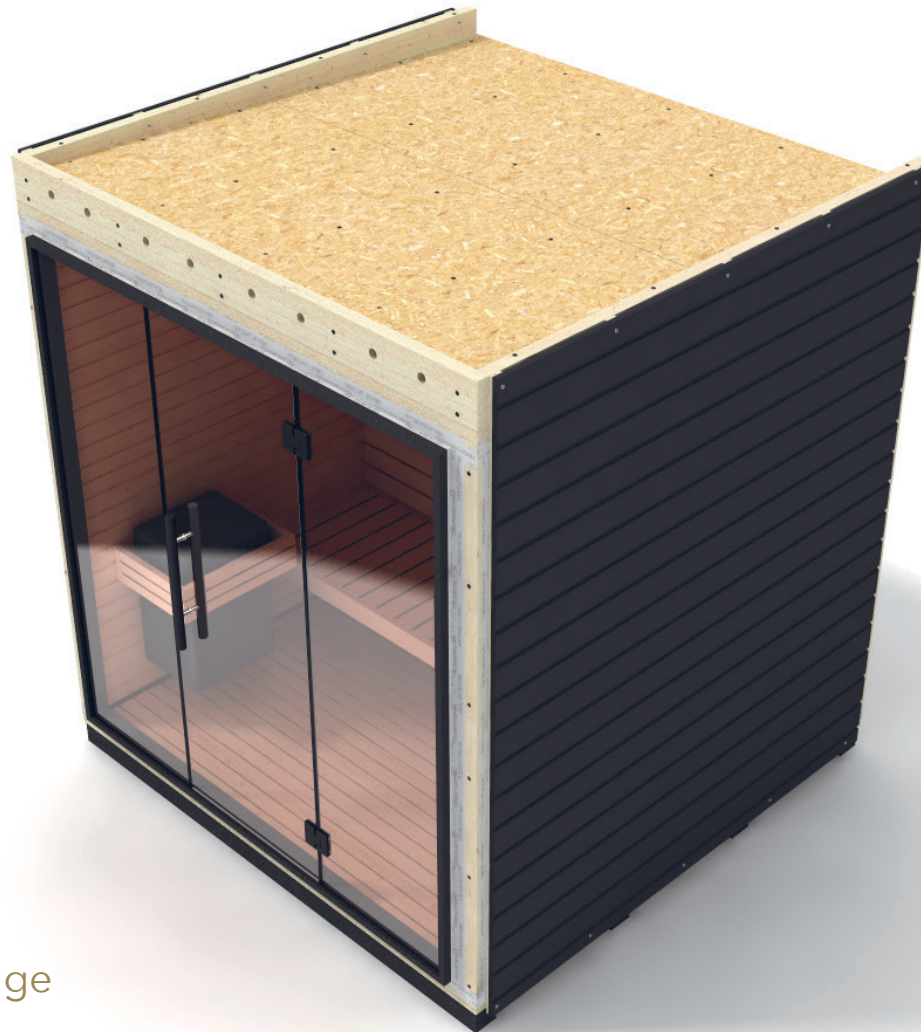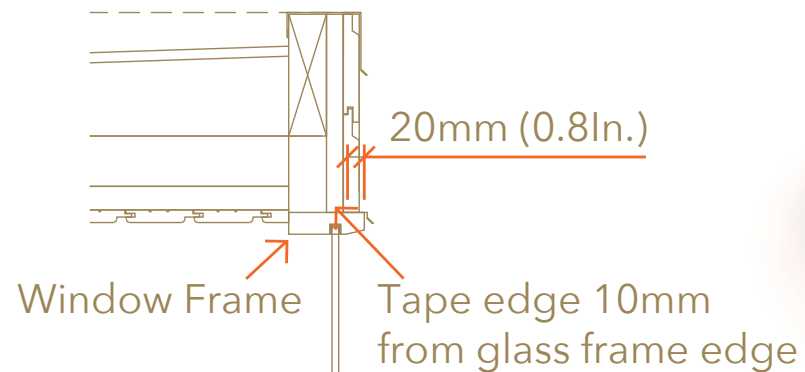

Phase 10:

Finishing the exterior walls



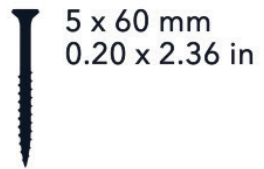

Checklist

✓ DLWS

DRP

DLP

DUWS

FSB1

FSB2

FSB3

FSB4

FSB5


FSB6

CM1

CM2

CM3

CM4

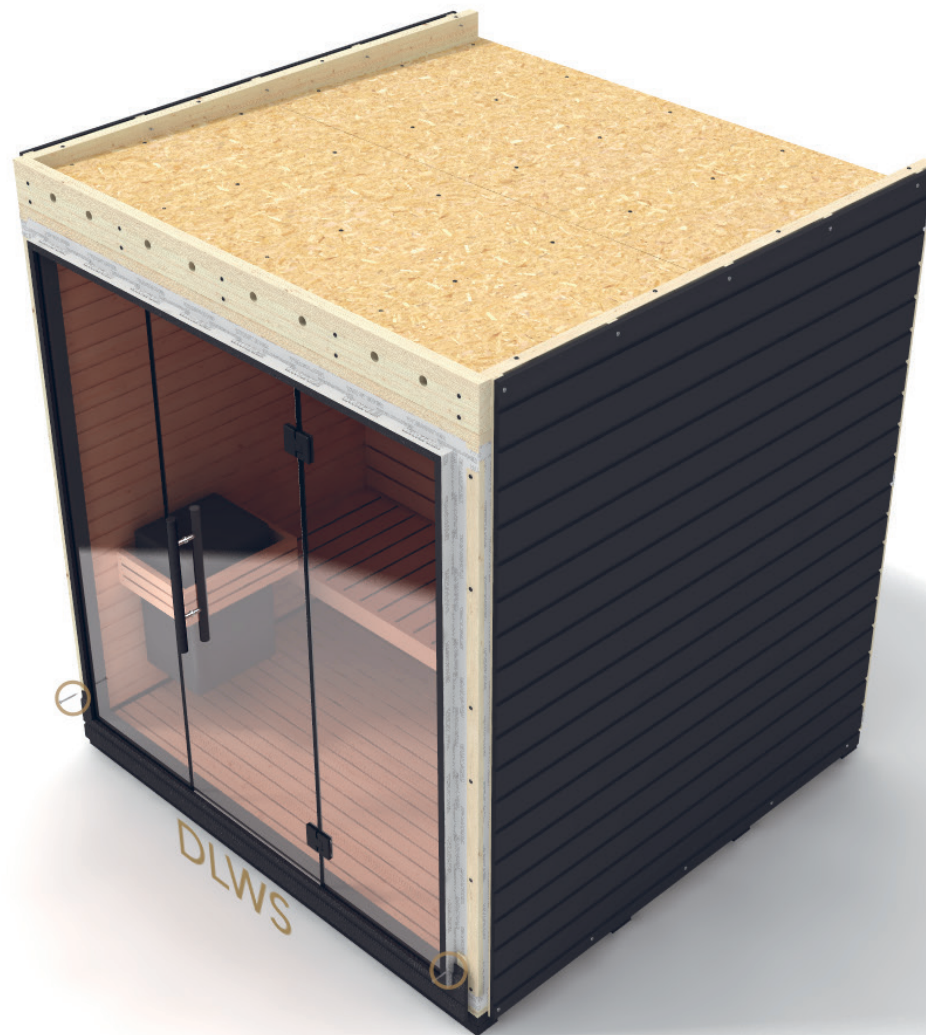

AURROOM

Mira L with CLT | Exterior walls





Exterior screws

Checklist

✓ DLWS

- DRP
- DLP
- DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

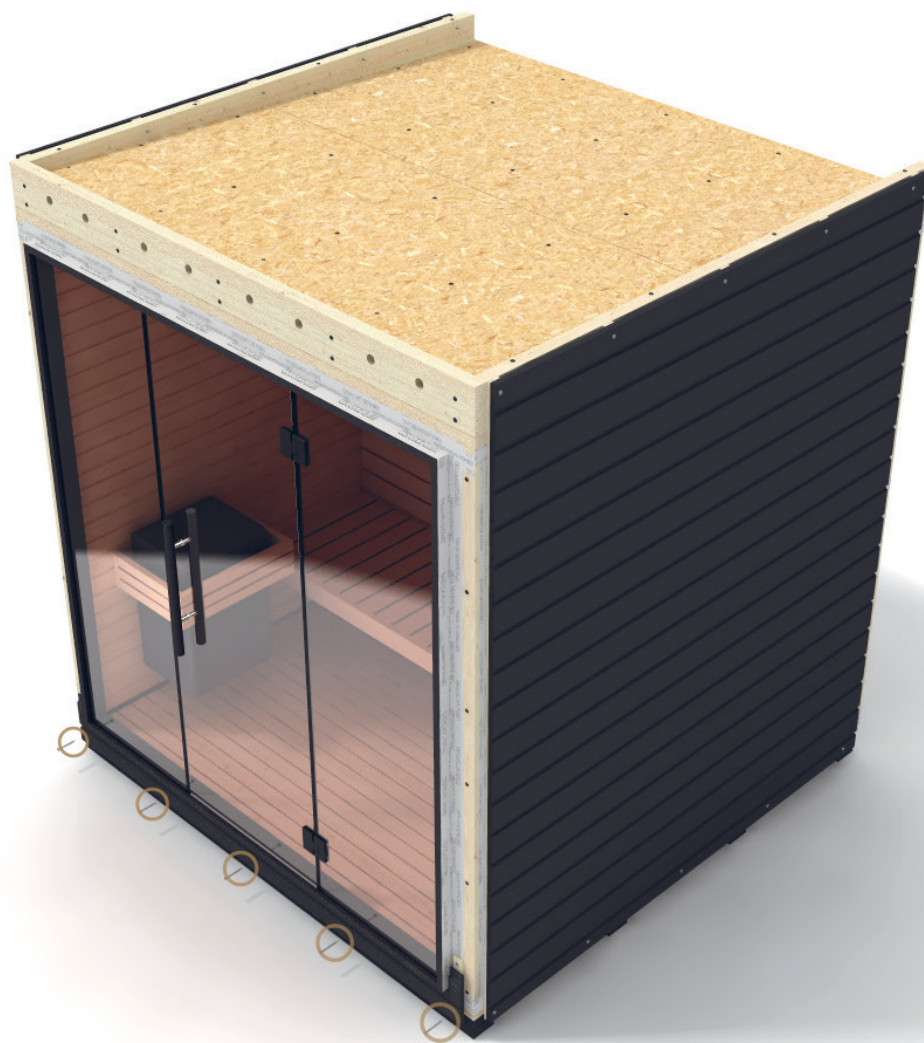

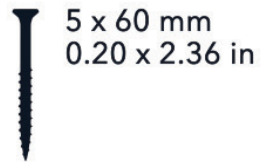

Checklist

✓ DLWS

✓ DRP

✓ DLP

DUWS

FSB1

FSB2

FSB3

FSB4

FSB5


FSB6

CM1

CM2


CM3

CM4

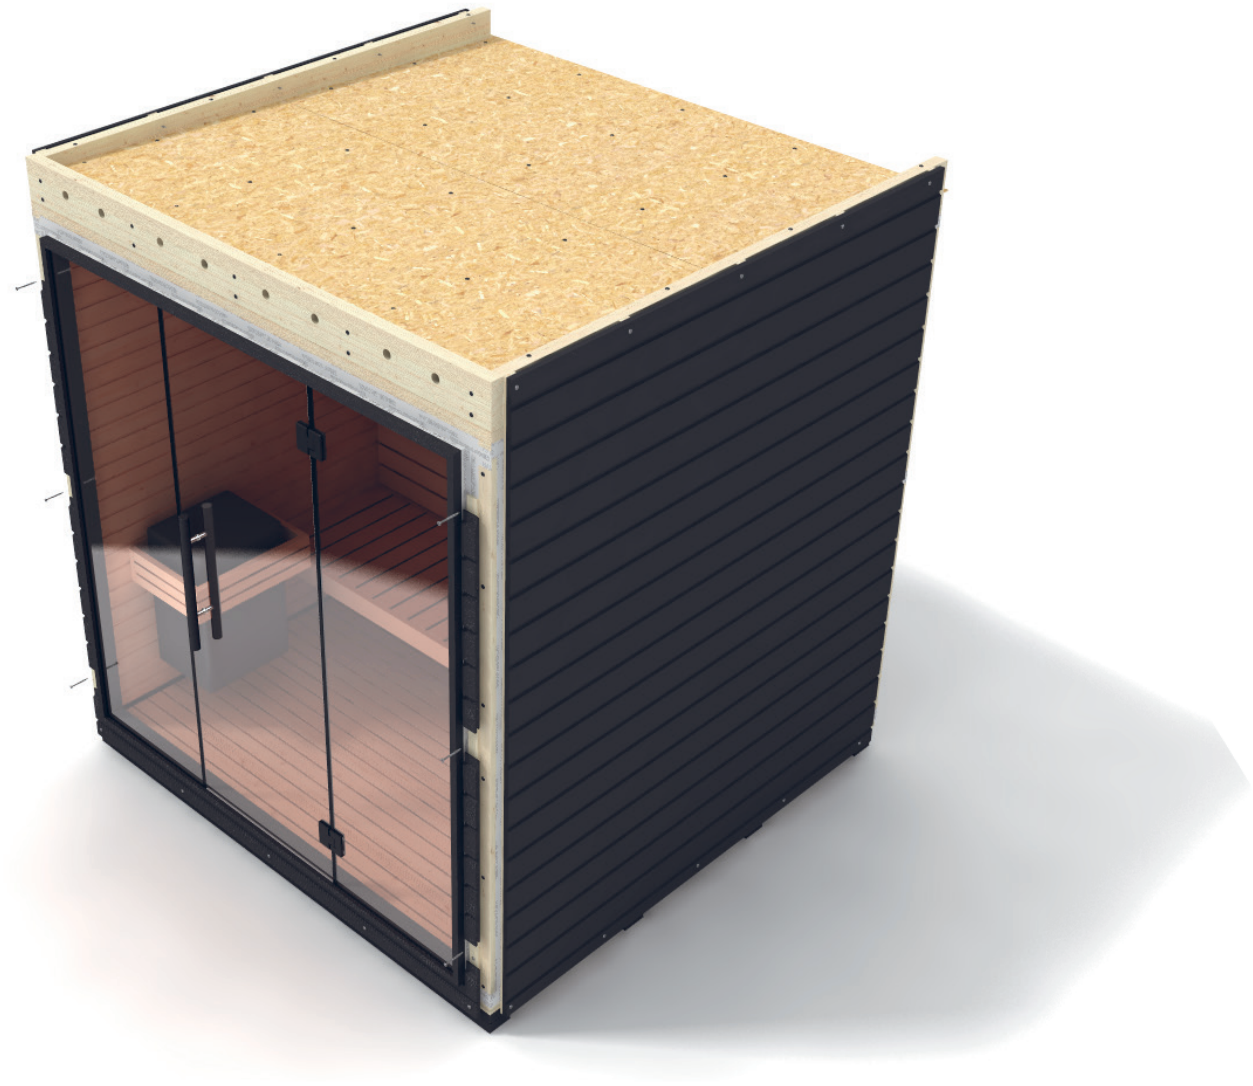


AURROOM


Mira L with CLT | Exterior walls

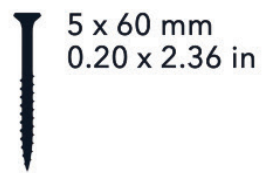

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

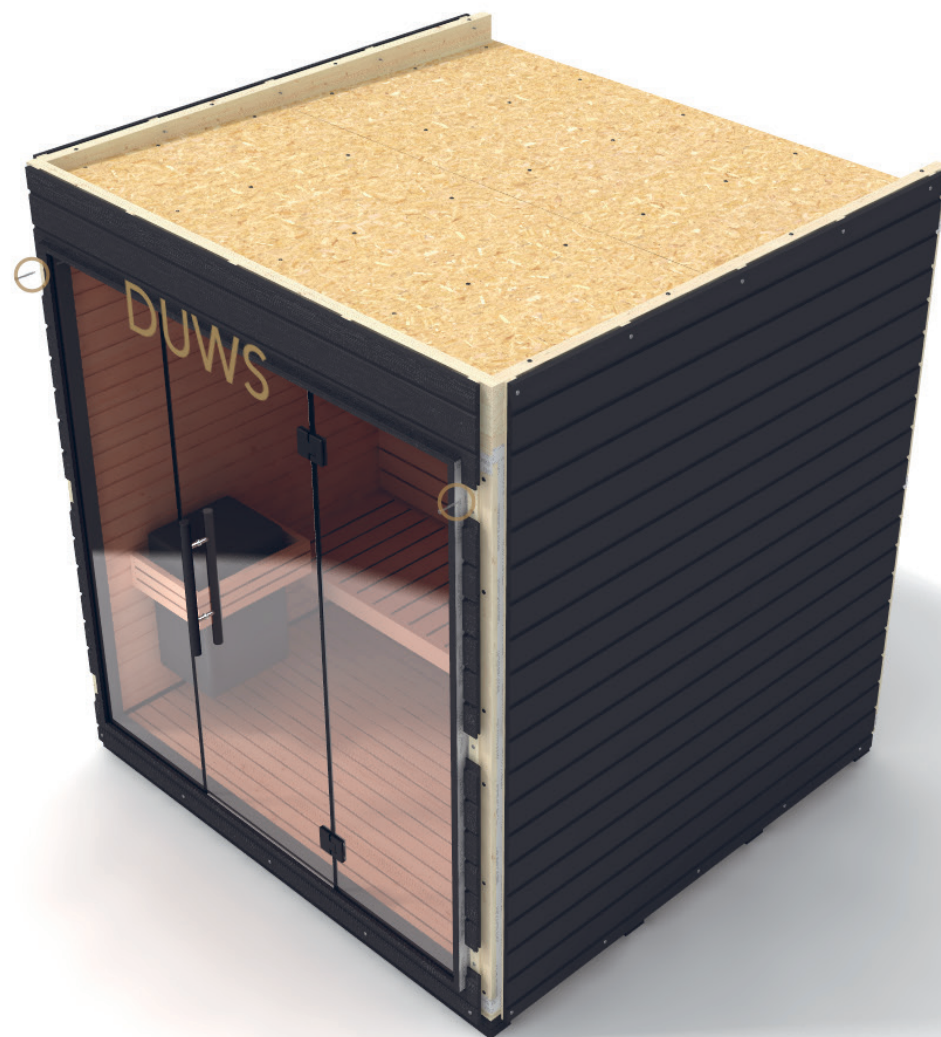

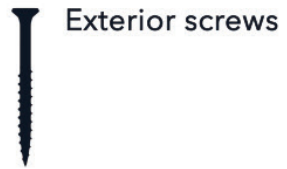

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

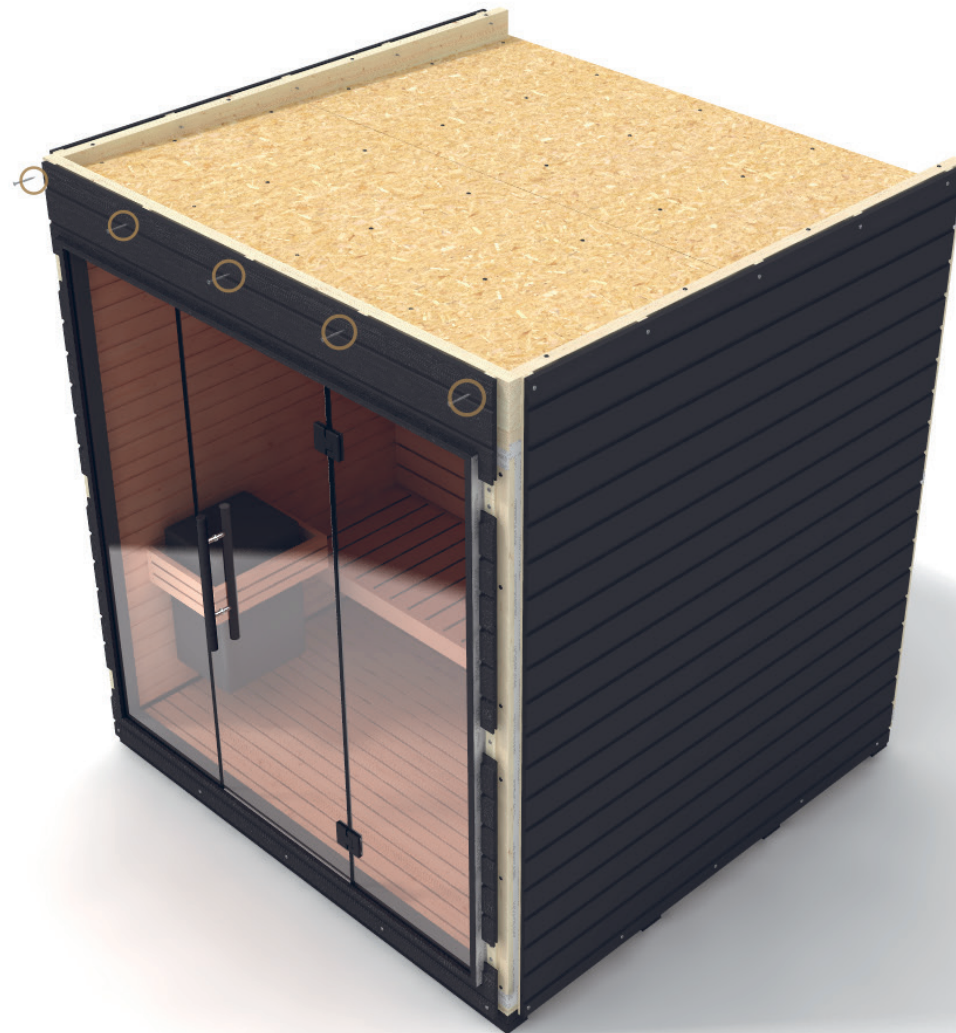


Mira L with CLT | Exterior walls

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- ✓ FSB5
- ✓ FSB6
- CM1
- CM2
- CM3
- CM4

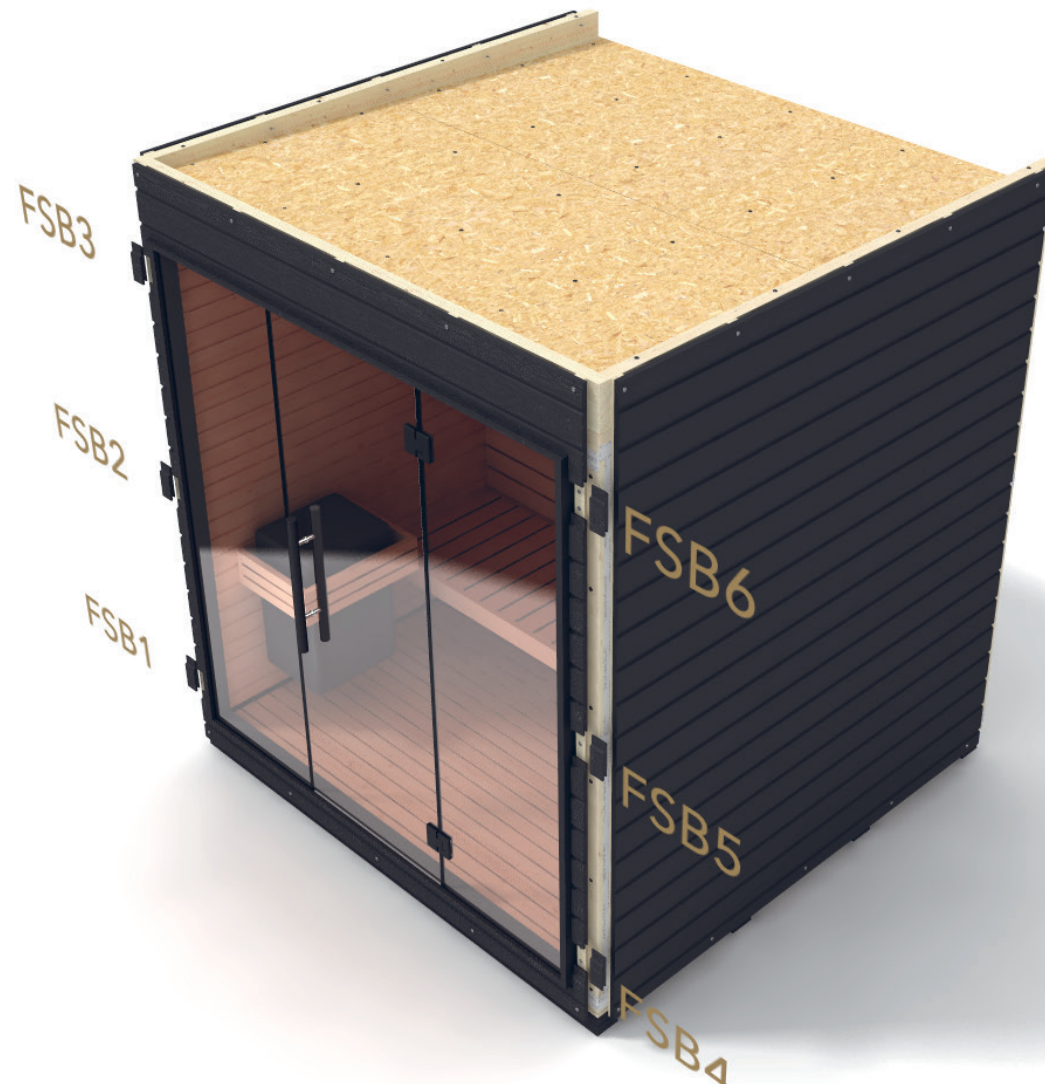

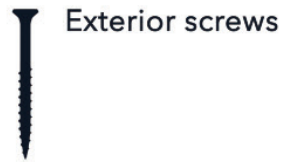

Checklist



- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- ✓ FSB5
- ✓ FSB6
- ✓ CM1
- ✓ CM2
- ✓ CM3
- ✓ CM4

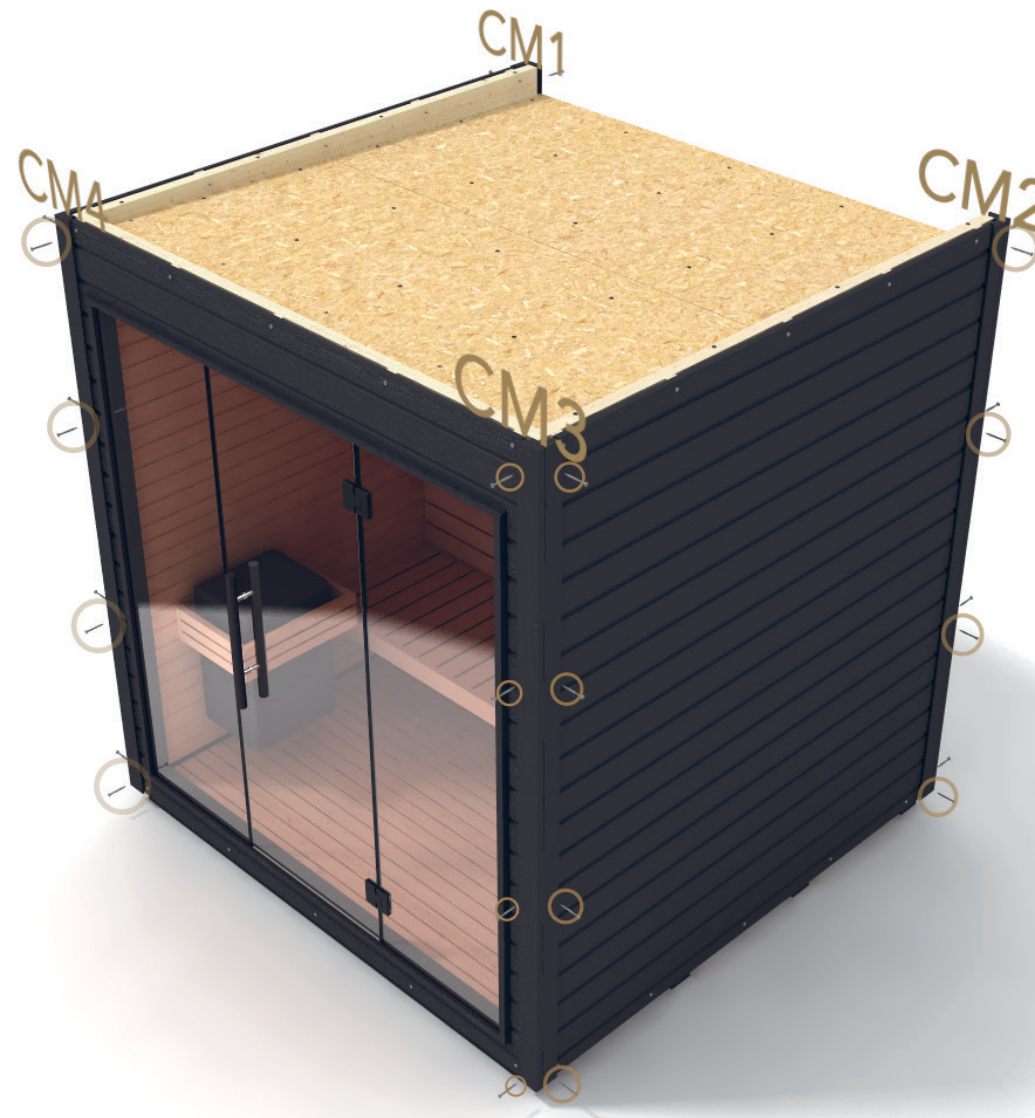

Phase 11:

Finishing the roof



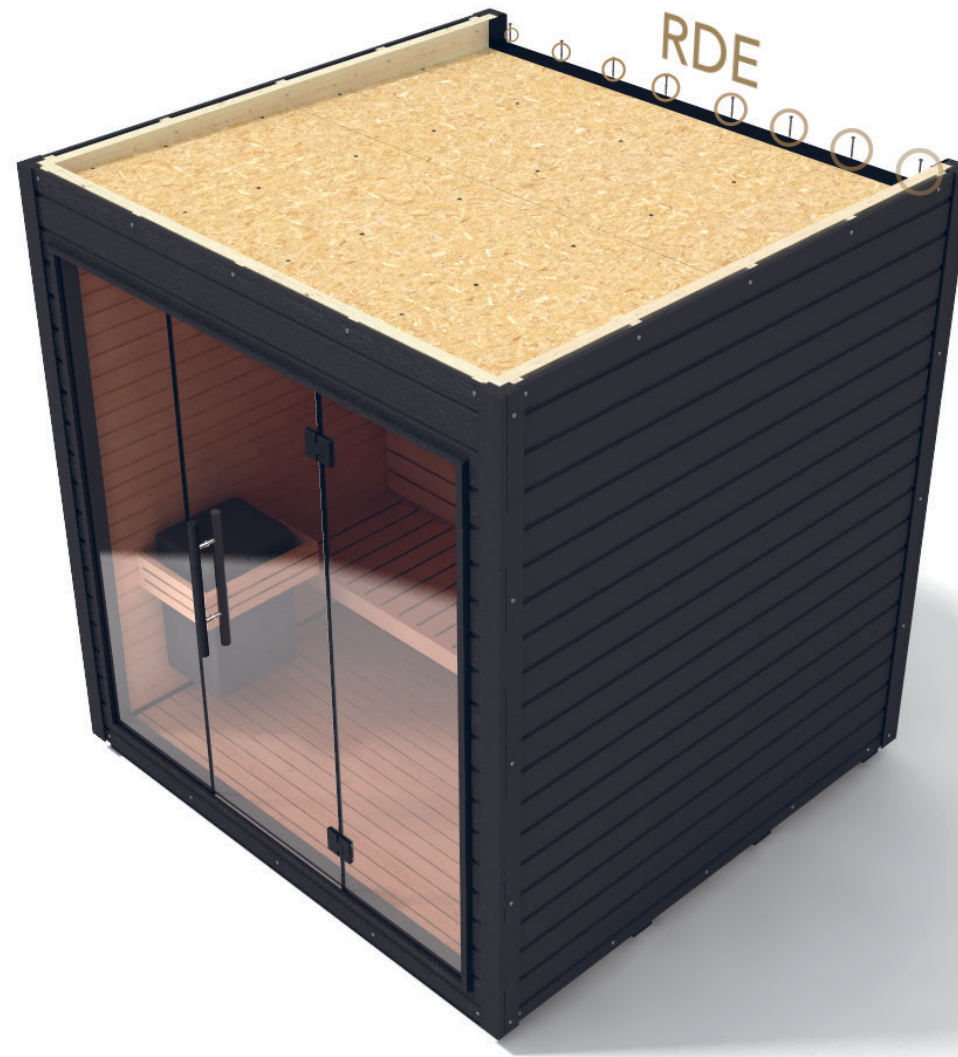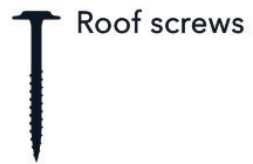

Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3


AURROOM

Mira L with CLT | Roofing

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.




Please follow safety precautions for EPDM rubber installation.

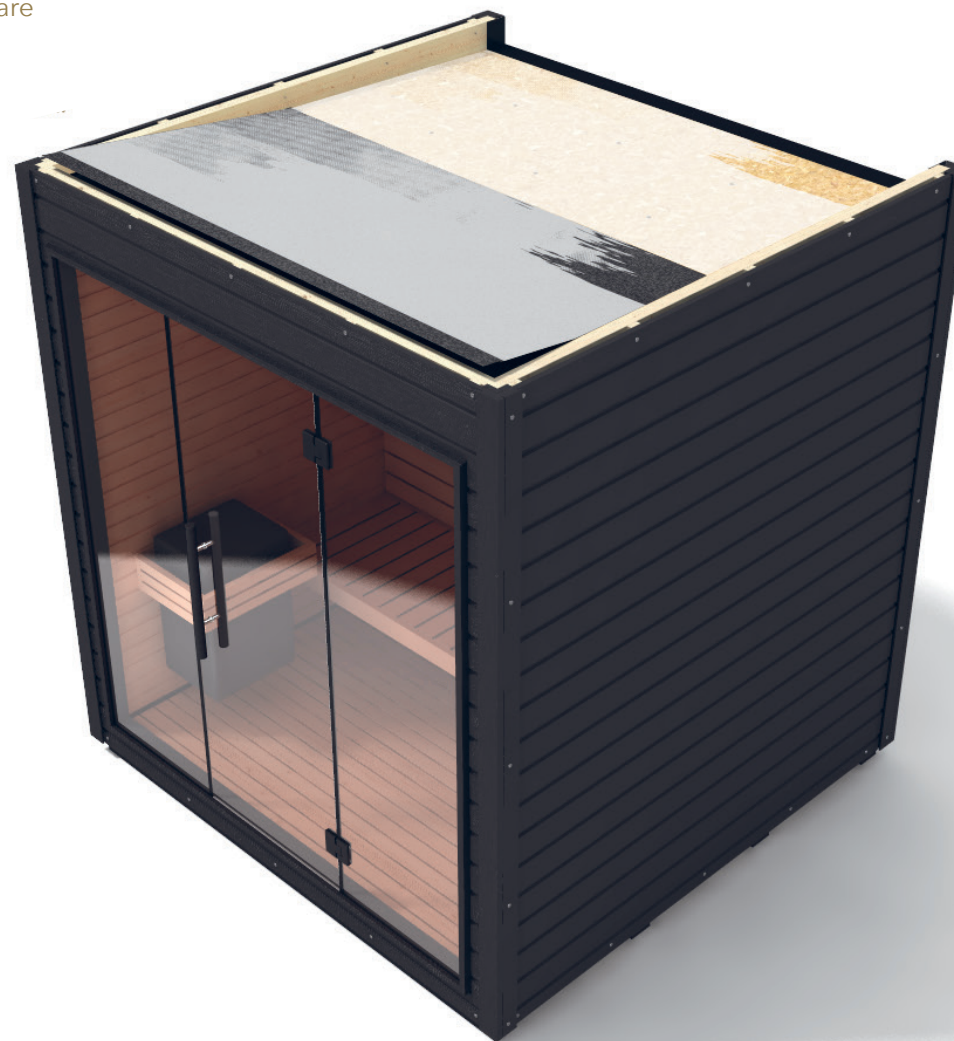

Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3

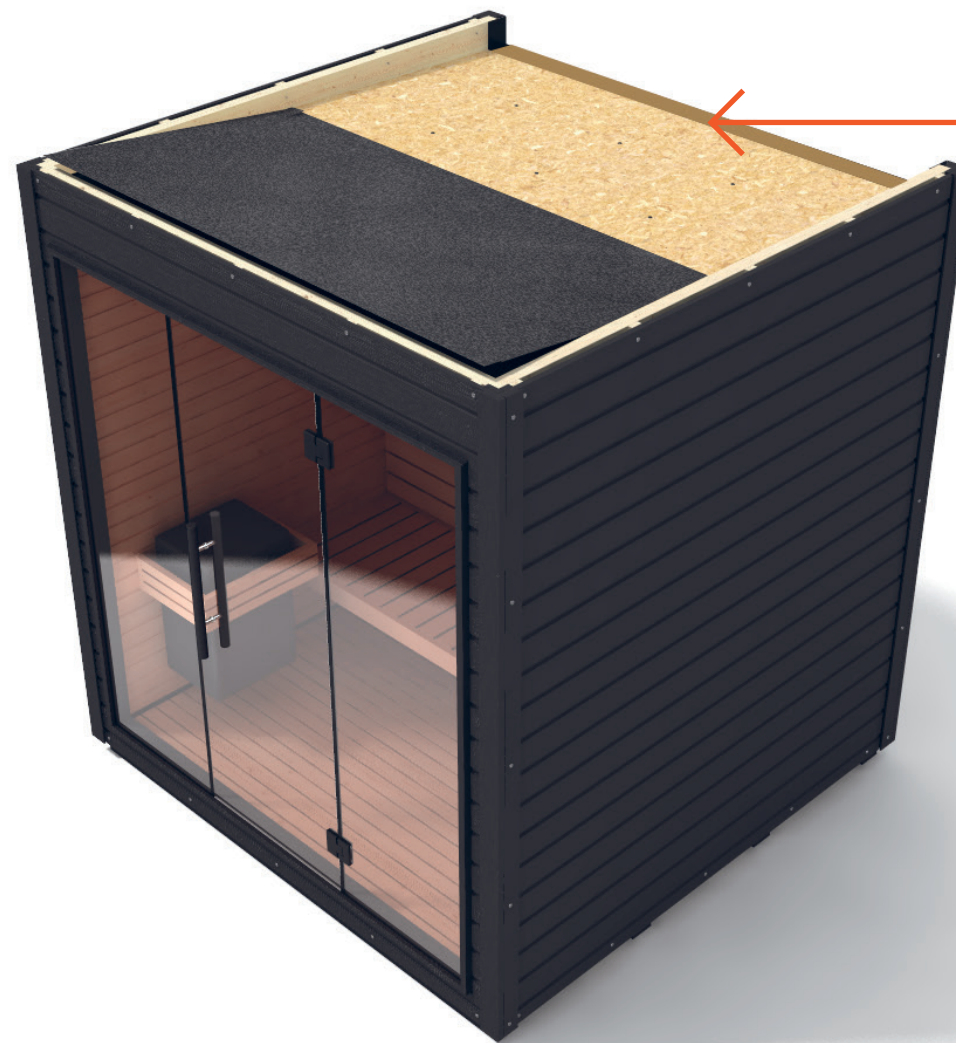


Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3


Mira L with CLT | Roofing

EPDM tape

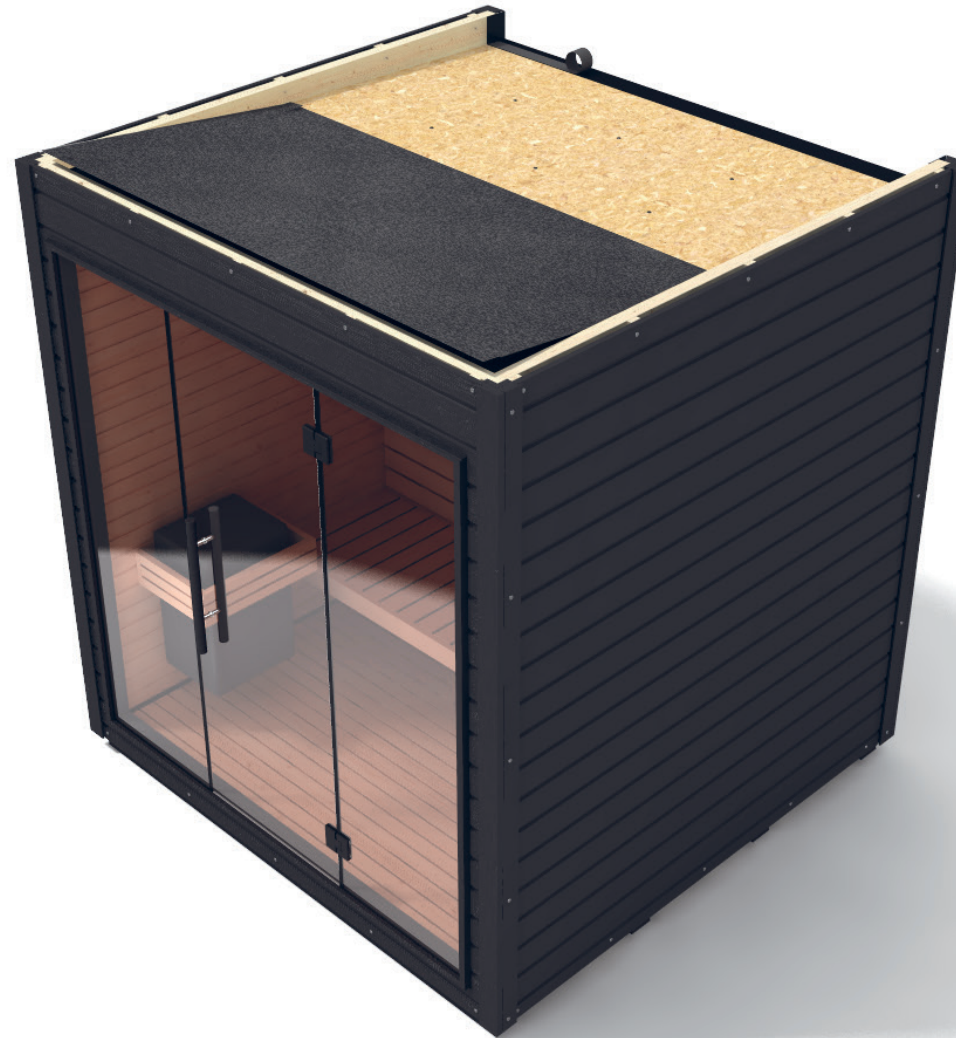

Checklist


- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3

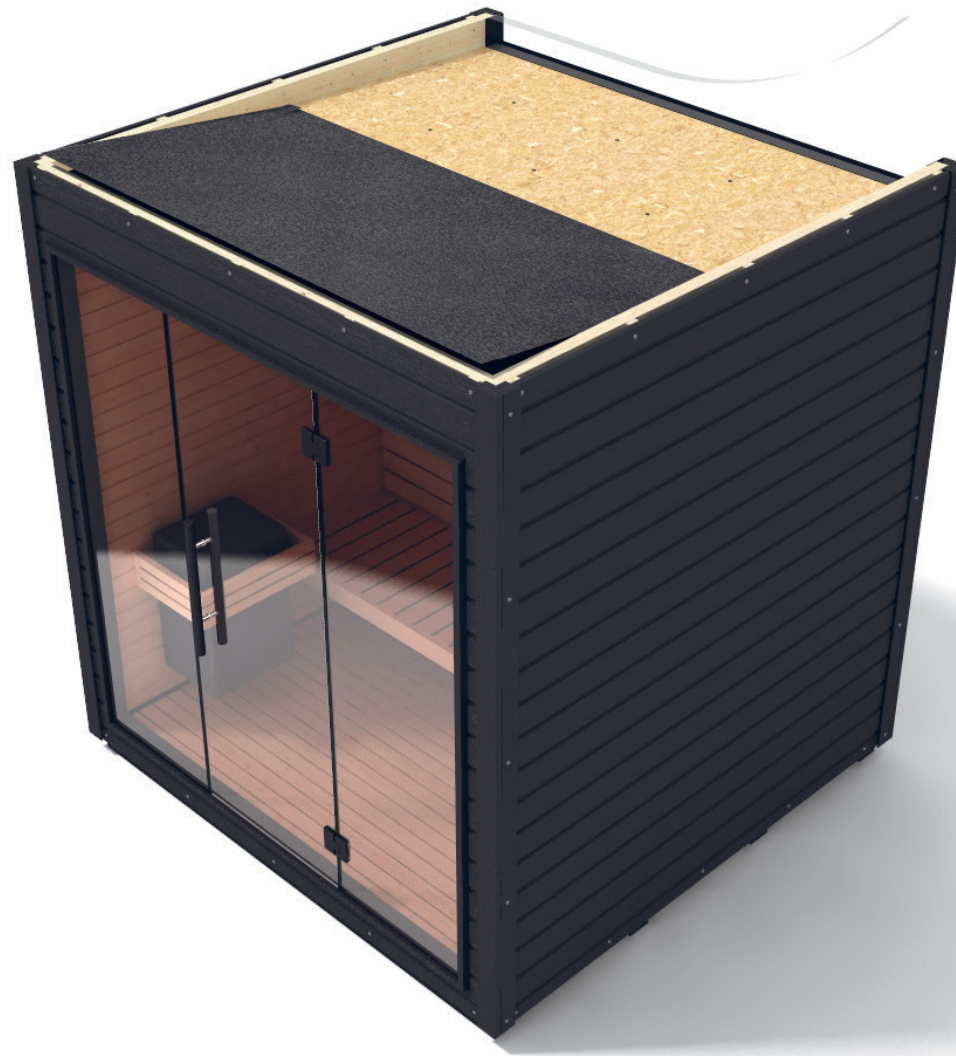

Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3

Mira L with CLT | Roofing

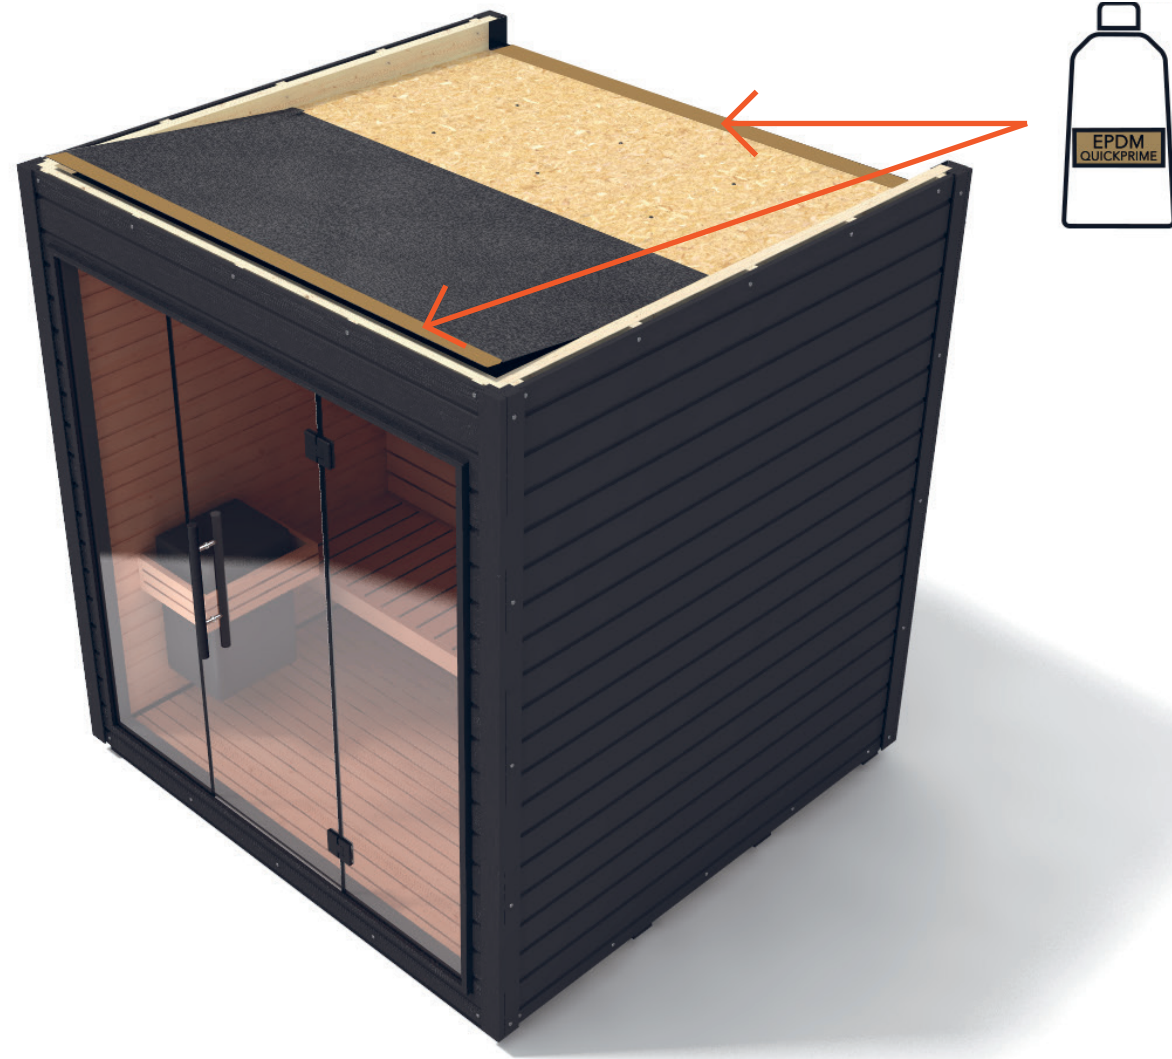

Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.

! Please follow safety precautions for EPDM rubber installation.

Mira L with CLT | Roofing



Checklist

- ✓ RDE
- ✓ R-EPDM
 - RF1
 - RF2
 - RF3

Mira L with CLT | Roofing





Sealed roof screws



Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- RF3

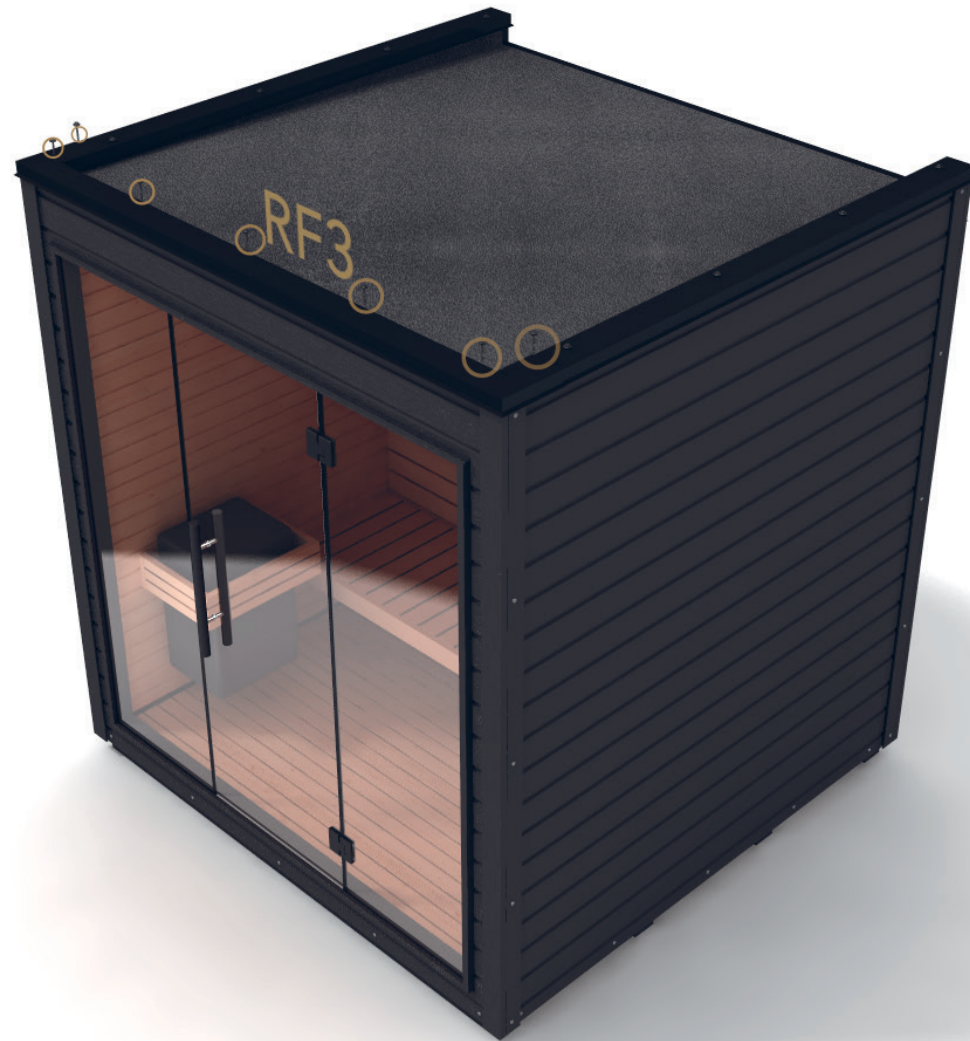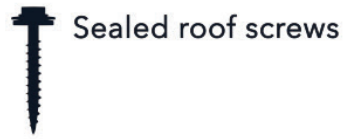

Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- ✓ RF3

Mira L with CLT | Roofing



AUROOM

Moments of wellbeing



auroomwellness.com

Saunas carefully crafted by Auroom OÜ.
Location: Vana-Kastre 62313, Estonia