

AURROOM

Installation guide
Outdoor Sauna: Mira S with CLT

To follow the Mira S CLT installation process by video,
please SCAN HERE:

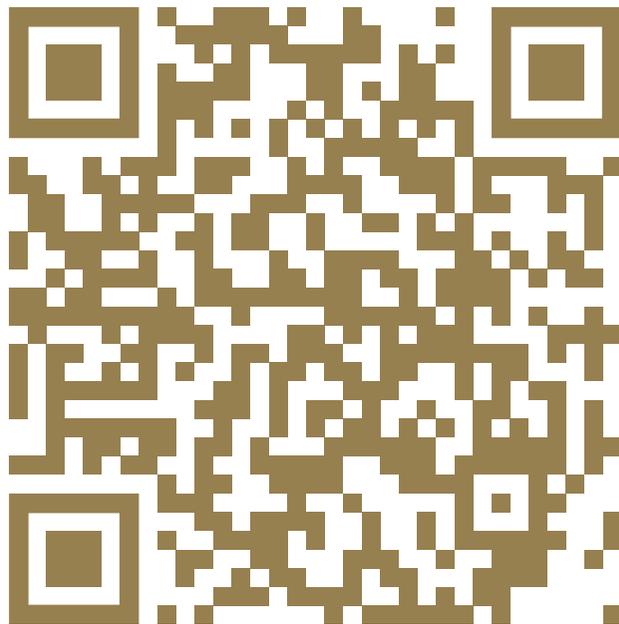


Table of contents:

Phase 1	Preparation	4
Phase 2	Foundation	17
Phase 3	Flooring	22
Phase 4	Walls	29
Phase 5	Roofing	43
Phase 6	Exterior walls	51
Phase 7	Finishing the interior walls	67
Phase 8	Interior	69
Phase 9	Front glass	80
Phase 10	Finishing the exterior walls	94
Phase 11	Finishing the roof	102

Phase 1:


Preparation



I



Please inspect the packages for any signs of damage before signing for your delivery. Be sure to take pictures of even the slightest damage, and make a note on the delivery receipt as well.

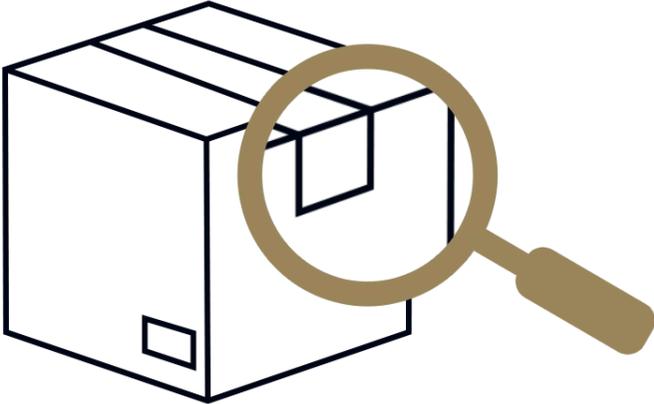

II



Flooring

F-EPDM - EPDM floor (1 pc)

F1 - Floor 1 (1 pc)

F2 - Floor 2 (1 pc)

BB1-BB3 - Base beams (3 pcs)


DTC - Drain cover (2 pcs)



If anything is missing or damaged, please contact your local Auroom reseller.

Walls

- CL1** - Ceiling 1 (1 pc)
- CL2** - Ceiling 2 (1 pc)
- AIW1** - Interior wall panel A1 (1 pc)
- AIW2** - Interior wall panel A2 (1 pc)
- BIW1** - Interior wall panel B1 (1 pc)
- BIW2** - Interior wall panel B2 (1 pc)
- CIW1** - Interior wall panel C1 (1 pc)
- CIW2** - Interior wall panel C2 (1 pc)
- CP1** - External corner frame CP1 (1 pc)
- CP2** - External corner frame CP2 (1 pc)
- BSB1-BSB3** - Bottom side boards (3 pcs)

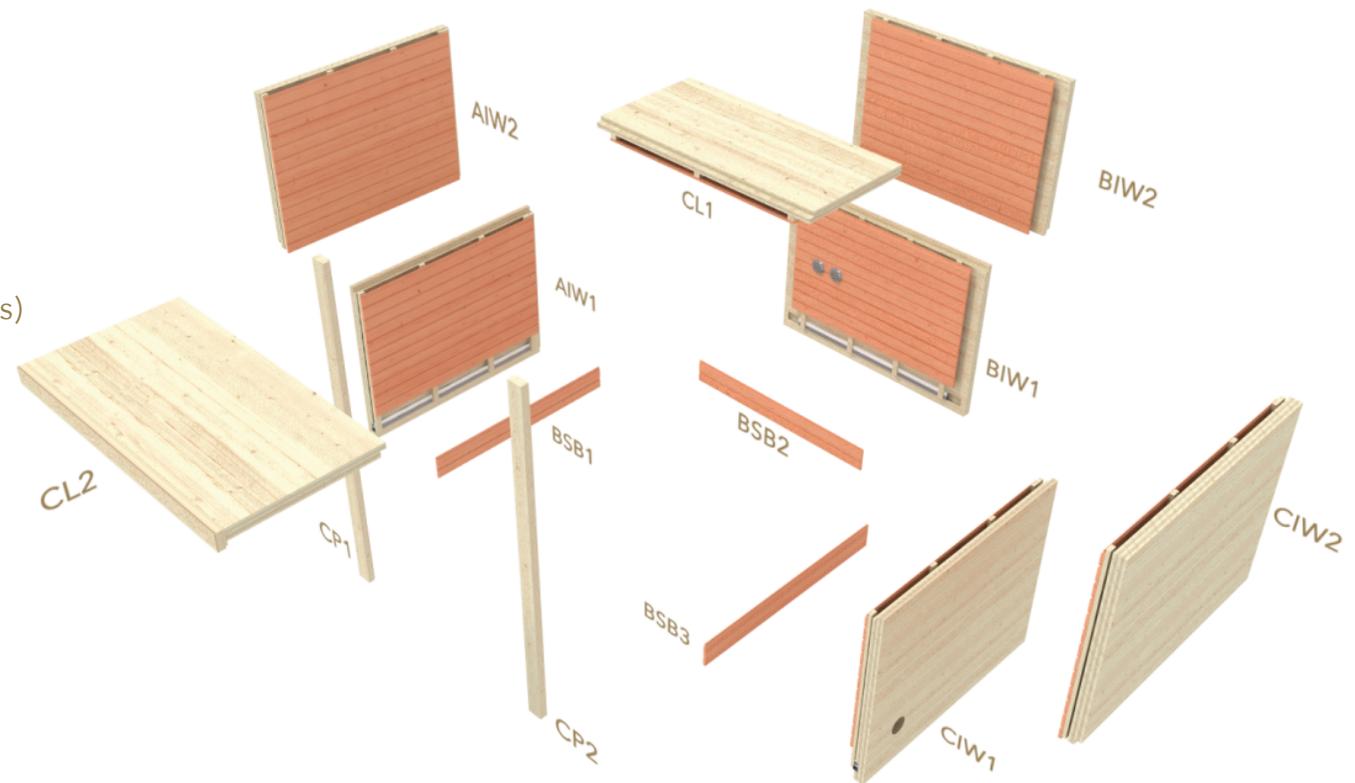

If anything is missing or damaged, please contact your local Auroom reseller.

Roofing

R-EPDM - EPDM roof (1 pc)


RO1/RO2 - Roof OSB boards (2 pcs)

RSB1-RSB4 - Roof sloping beams (4 pcs)

REB1-REB3 - Roof edge beams (3 pcs)

RDE - Roof drip edge (1 pc)


RF1-RF3 - Roof flashings (3 pcs)

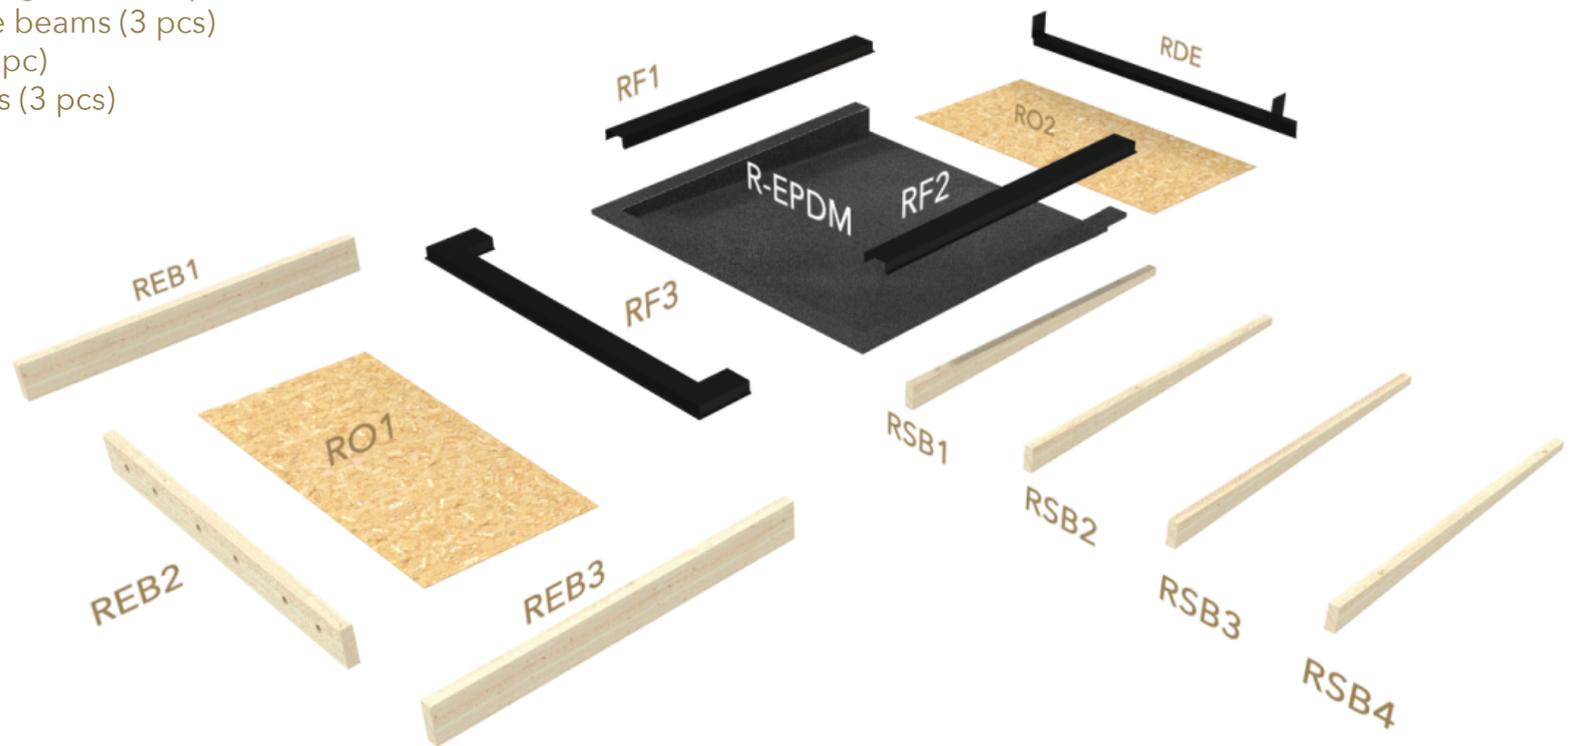

If anything is missing or damaged, please contact your local Auroom reseller.

Exterior walls


- CM1** - External corner moulding CM1 (1 pc)
- CM2** - External corner moulding CM2 (1 pc)
- CM3** - External corner moulding CM3 (1 pc)
- CM4** - External corner moulding CM4 (1 pc)
- AEW1** - Exterior wall panel A1 (1 pc)
- BEW1** - Exterior wall panel B1 (1 pc)
- CEW1** - Exterior wall panel C1 (1 pc)
- AEW2** - Exterior wall panel A2 (1 pc)
- BEW2** - Exterior wall panel B2 (1 pc)
- CEW2** - Exterior wall panel C2 (1 pc)
- AEW3** - Exterior wall panel A3 (1 pc)
- BEW3** - Exterior wall panel B3 (1 pc)
- CEW3** - Exterior wall panel C3 (1 pc)
- DLWS** - Lower panel element D (1 pc)
- DUWS** - Upper panel element D (1 pc)
- DLP** - Left panel element D (1 pc)
- DRP** - Right panel element D (1 pc)
- RBB** - Rear wall bottom board (1 pc)
- RTB** - Rear wall top board (1 pc)
- SBB1/SBB2** - Side wall bottom boards (2 pcs)
- STB1/STB2** - Side wall top boards (2 pcs)
- FSB1-FSB6** - Front wall small loose boards (6 pcs)

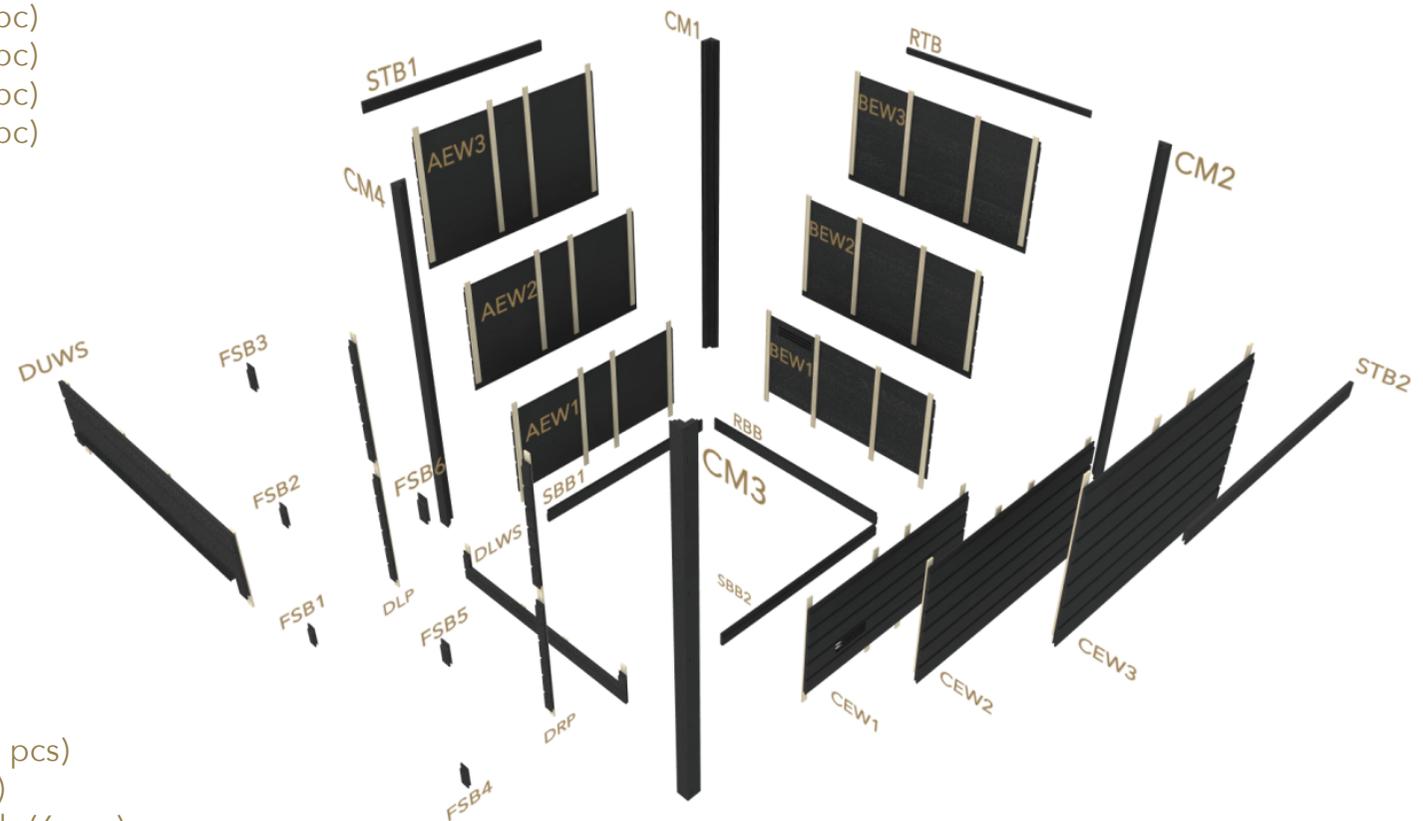

If anything is missing or damaged, please contact your local Auroom reseller.

Interior


- HG** - Heater guard (1 pc)
- HGH1/HGH2** - Heater guard holders (2 pcs)
- US1/US2** - Upper bench supports (2 pcs)
- LS1** - Lower bench supports (1 pcs)
- FG1-FG4** - Floor grates (4 pcs)
- BF1** - Bench frame 1 (1 pc)
- BF2** - Bench frame 2 (1 pc)
- BG1** - Bench grid 1 (1 pc)
- BG2** - Bench grid 2 (1 pc)
- BS1-BS2** - Bench skirt (1 pc)
- BR** - Backrest (1 pc)
- BRS1-BRS2** - Backrest supports (2 pcs)

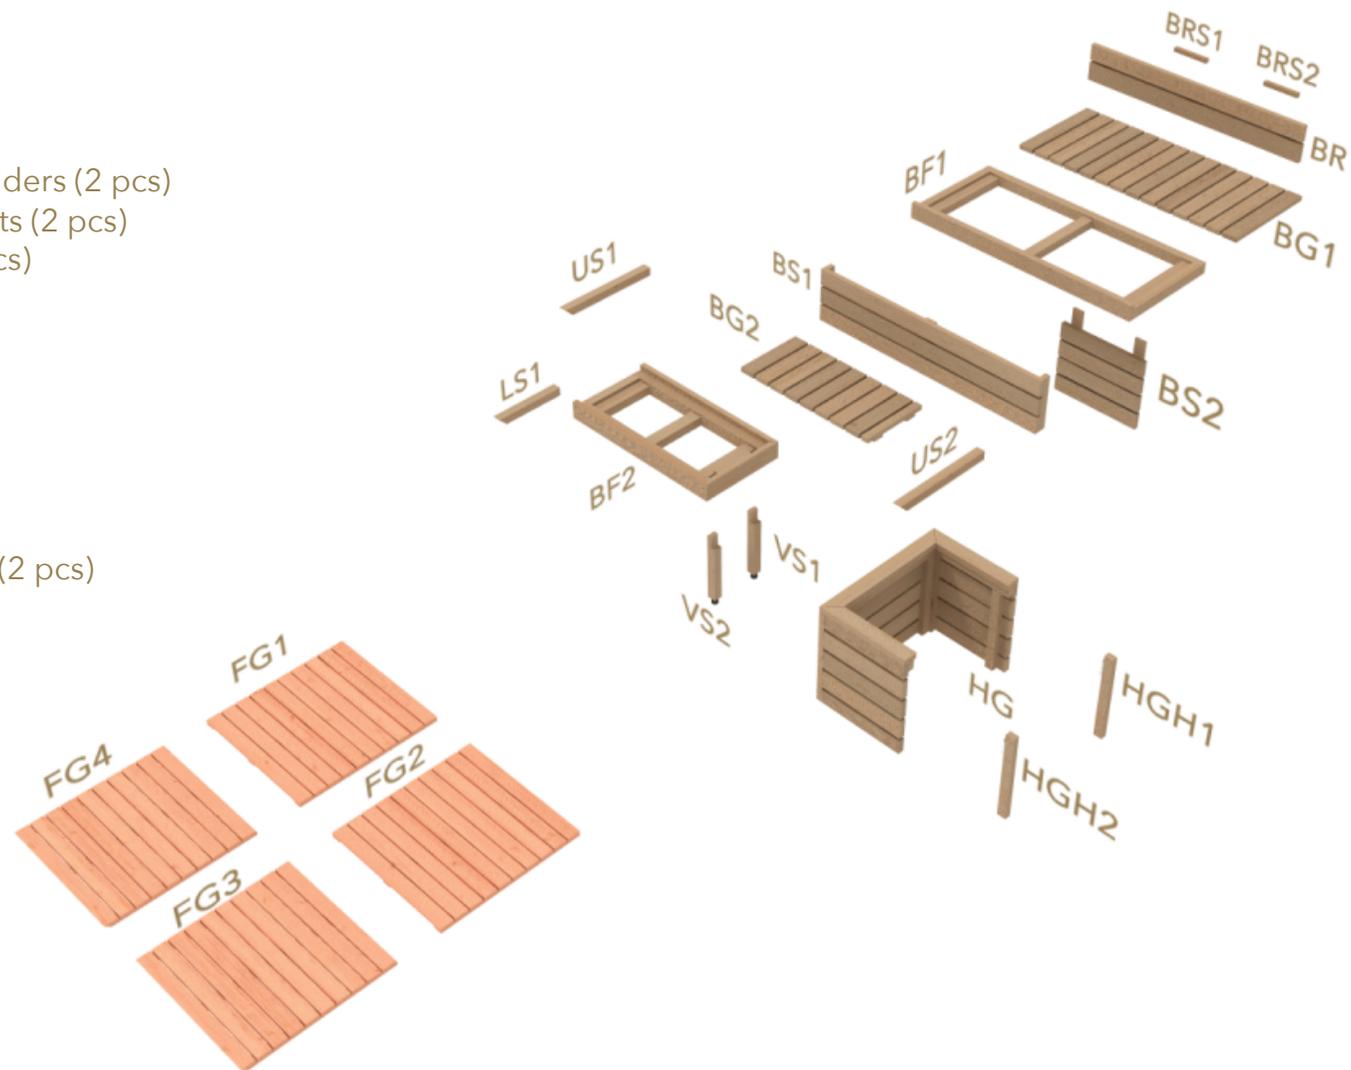


If anything is missing or damaged, please contact your local Auroom reseller.

Front glass

- W1** - Window 1 (1 pc)
- DF** - Door with hinges (1 pc)
- DG** - Door glass (1 pc)
- DW1/DW2** - Door frame details (2 pcs)
- DH** - Door handle (1 pc)
- GDS** - Glass door stopper (1 pc)
- GDH1/GDH2** - Glass door hinges (2 pcs)
- GDG** - Glass door gaskets (2 pcs)

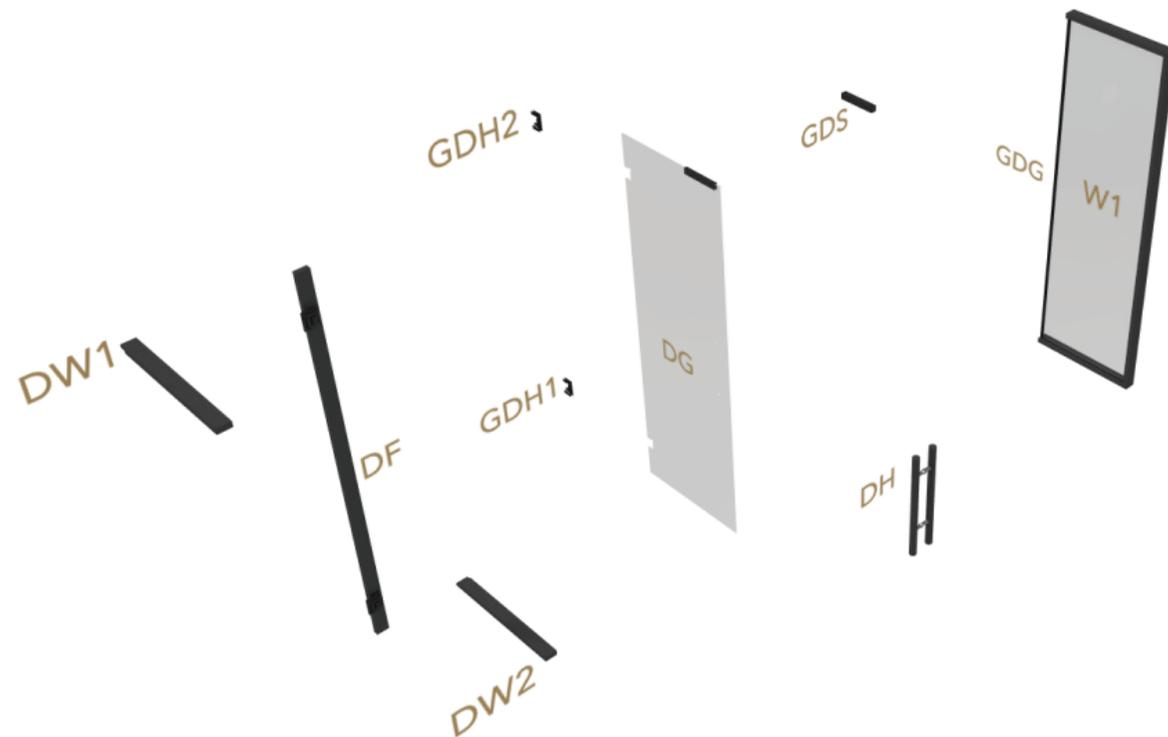

If anything is missing or damaged, please contact your local Auroom reseller.

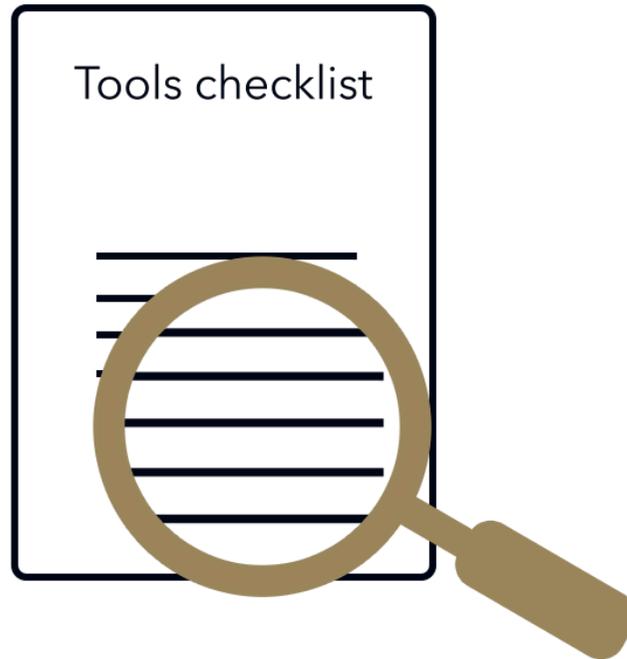

THE SAUNA PACKAGE INCLUDES:

.....
Firestone EPDM Adhesive
.....

Firestone EPDM QuickPrime
.....

Repair paint
.....

EPDM tape
.....

Tape for wind barrier fabric
.....

EXTRA material and screw set
.....

NOTE: If anything is missing or damaged,
please contact your local Auroom reseller.

TOOLS REQUIRED FOR INSTALLING EPDM RUBBER:

.....
Penny roller and rubber roller
.....

Roller for gluing
.....

Sweeping brush
.....

Cutter
.....

TOOLS REQUIRED FOR INSTALLING THE SAUNA:

.....
Cordless drill
.....

TORX driver bit set
.....

Drill bit set
.....

Ladder
.....

Claw lever
.....

Spirit level
.....

Tape measure
.....

Hammer
.....

Hex key
.....

Screwdriver set
.....



STAINLESS STEEL TORX SCREWS:	TORX HEAD REQUIRED:	TOTAL QUANTITY:	REQUIRED FOR:	QUANTITY REQUIRED:
6 x 120 mm: (0.24 x 4.72 in)	T 30	100 pcs	Floor elements (F1 / F2) Wall corners Bench frames (BF1 / BF2) Roof beams (RSB 1 - 4 + REB 1 - 3) Ceiling elements (CL 1 - 2)	13 pcs 34 pcs 14 pcs 22 pcs 10 pcs
5 x 80 mm: (0.20 x 3.15 in)	T 25	35 pcs	Wall middle connection Roof middle connection Roof beams (RSB 1 - 4) Bench supports (US 1 - 2 / LS)	12 pcs 4 pcs 8 pcs 8 pcs
5 x 60 mm: (0.19 x 2.36 in)	T 20	90 pcs	Glasswall (W1/DW1-2/DF) Exterior cladding Heater guard holders US (HGH)	20 pcs 58 pcs 4 pcs
4 x 40 mm: (0.15 x 1.57 in)	T 20	20 pcs	Backrest supports (BRS) Backrest (BR) Bench skirt (BS1) Heater guard holders (HGH) Vertical support (VS)	4 pcs 2 pcs 4 pcs 4 pcs 2 pcs
4 x 30 mm: (0.16 x 1.18 in)	T 20	25 pcs	OSB boards (RO1/2) Bench skirt (BS2) Glass door magnetic stopper (GDS)	16 pcs 2 pcs 2 pcs
3x20 mm: (0.12 x 0.78 in)	T 20	8 pcs	Ventilation grid (VG)	6 pcs
Exterior screws 5 x 75 mm: (0.2 x 2.95 in)	T 20	70 pcs	Corner mouldings (CM 1 - 4) Exterior cladding (*BB/*TB/*SB)	32 pcs 32 pcs
Brown screws 5 x 60 mm: (0.19 x 2.36 in)	T 20	15 pcs	Loose cladding (BSB)	12 pcs
Flat stain screws:	T 20	8 pcs	Raindrop stain (RDE)	6 pcs
Black stain screws:	T 20	15 pcs	Roof stains (RF)	12 pcs
Flat wooden covers:	T 20	20 pcs	Glasswall (W1/DW1-2)	16 pcs

NOTE: The package contains extra screws and nails.

Mira S with CLT | Installation team & Reminders



Professional carpenters required: 2-4



Professional electricians required: 1



Handle the wood panels with care



Maintain cleanliness




Take safety precautions

Phase 2:


Foundation

Mira S with CLT | Foundation

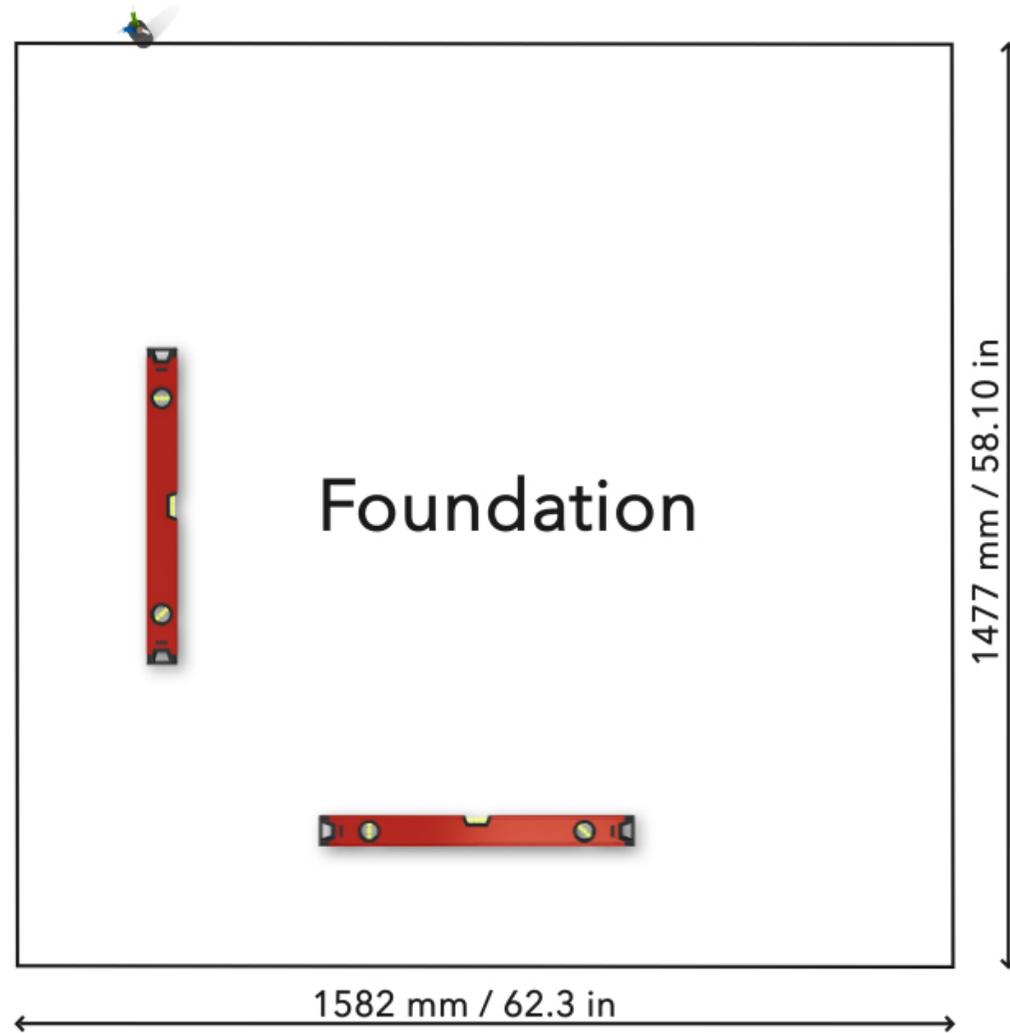



Front side

Installation location of the electric shield
200 mm

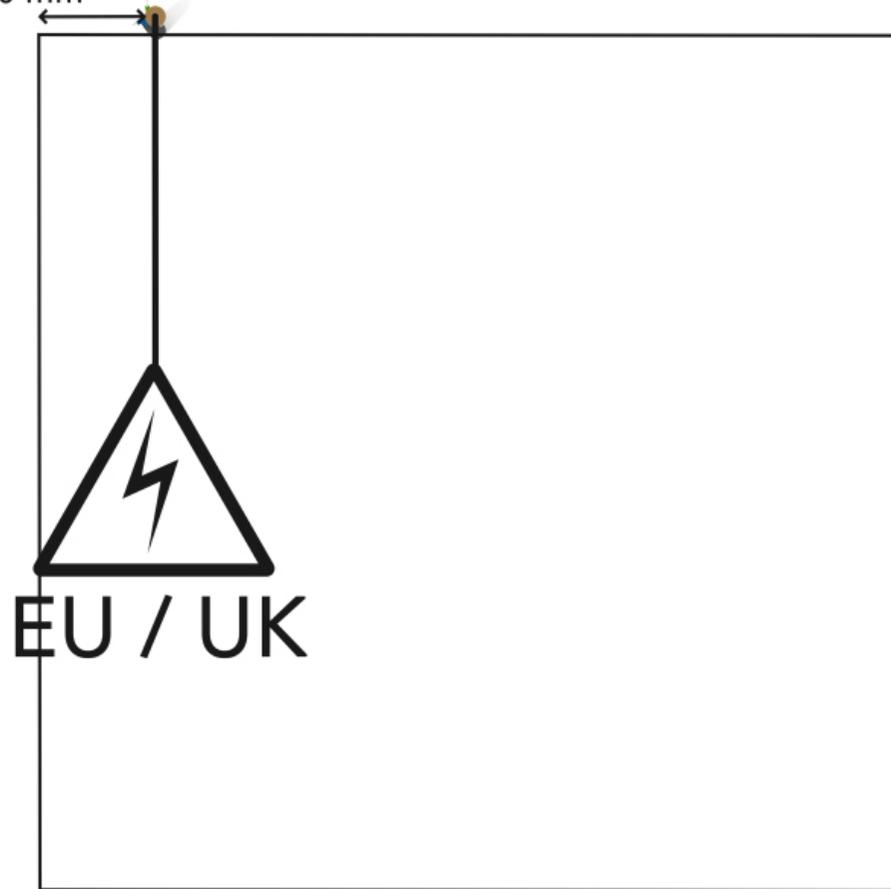

Front side

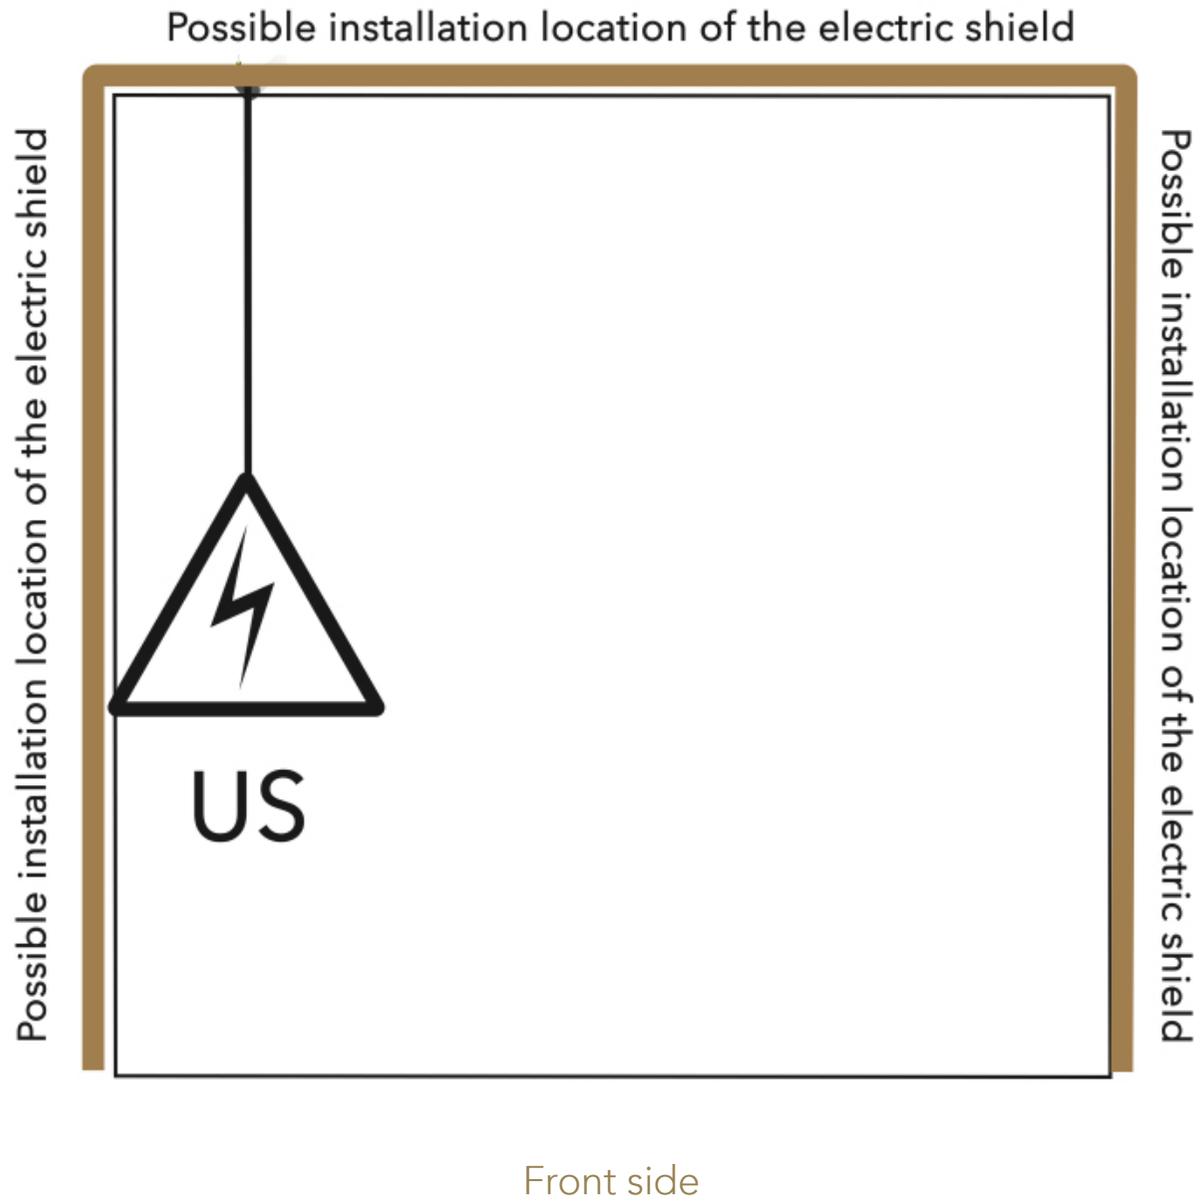


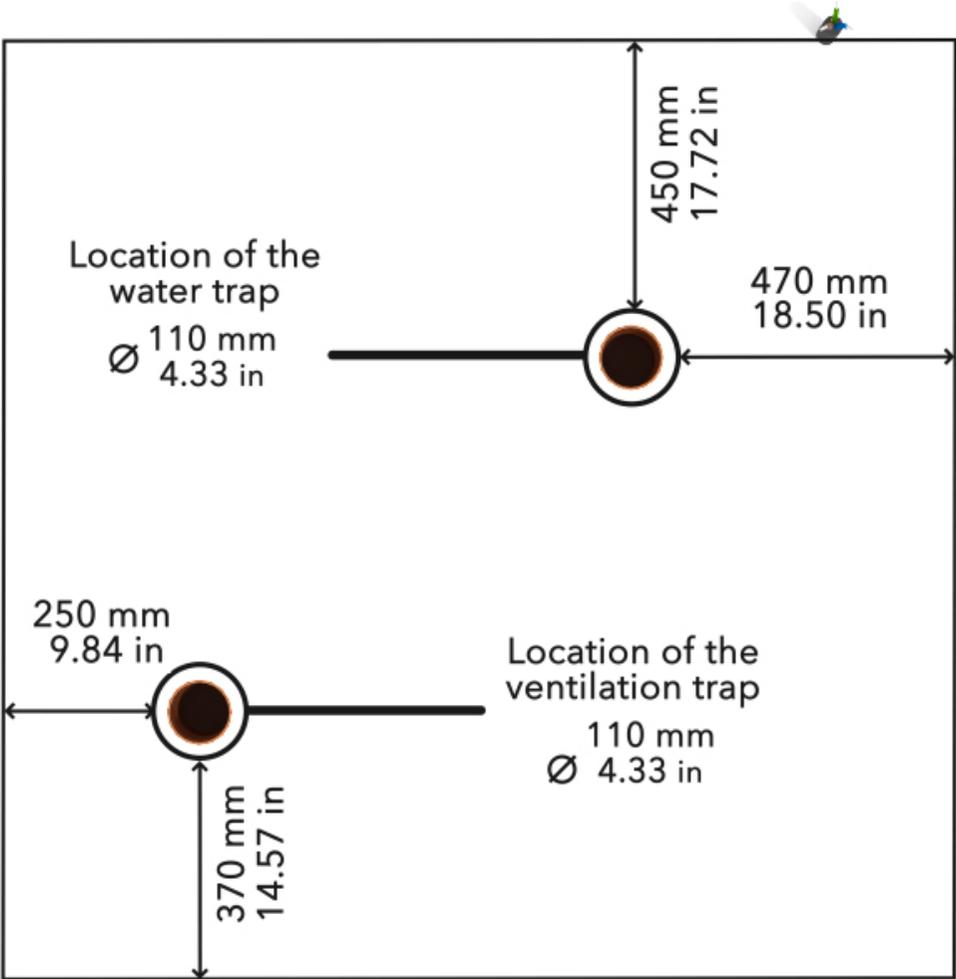


Front side

Phase 3:


Flooring

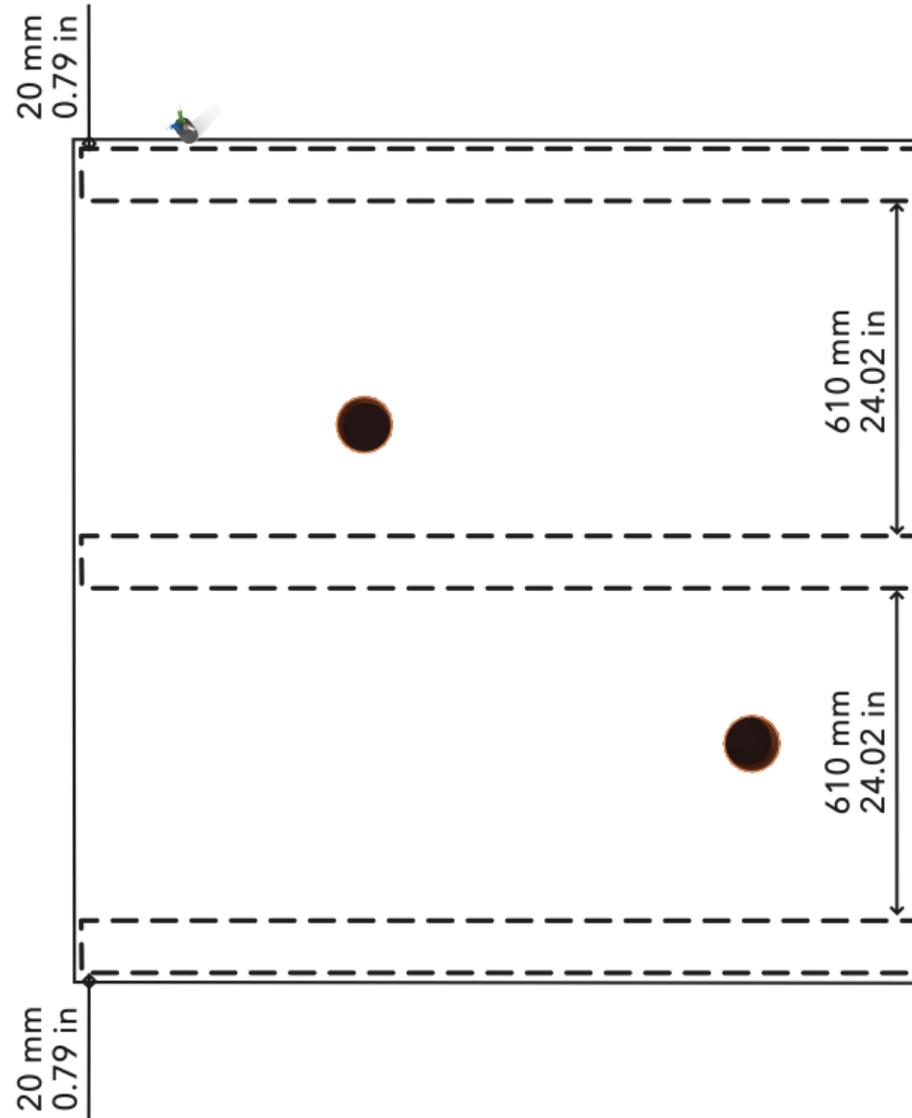

Front side

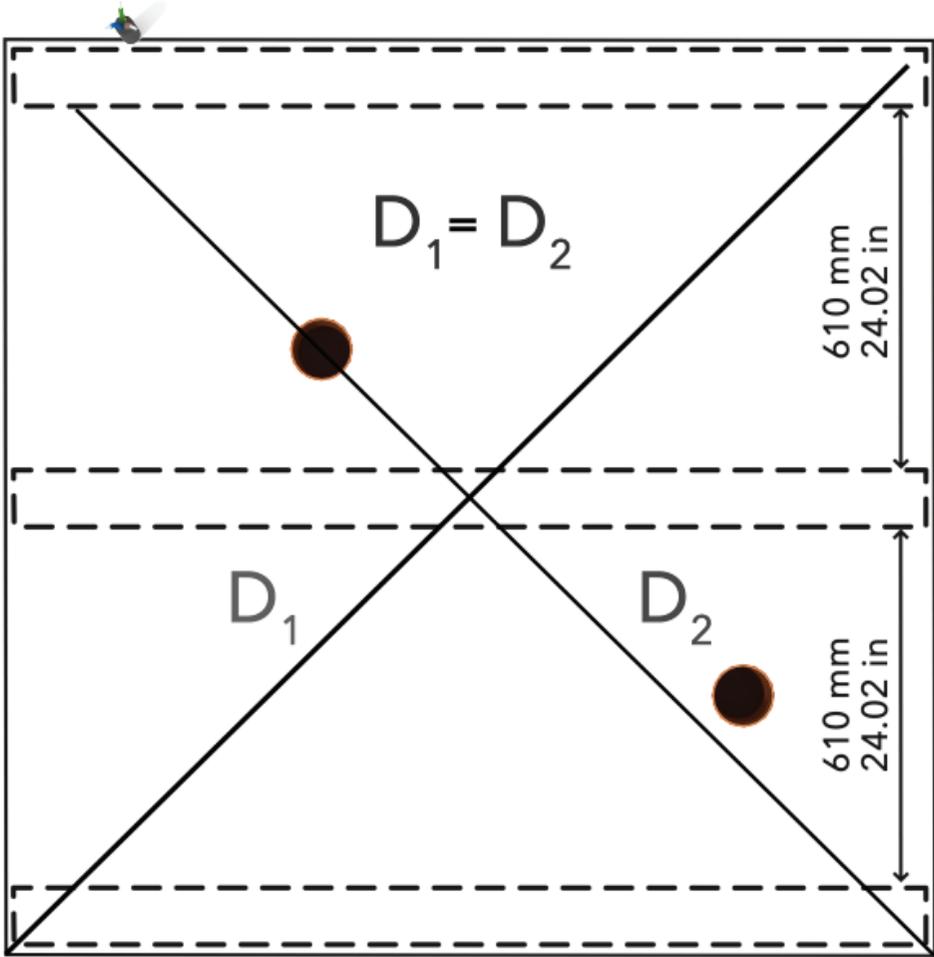



Front side

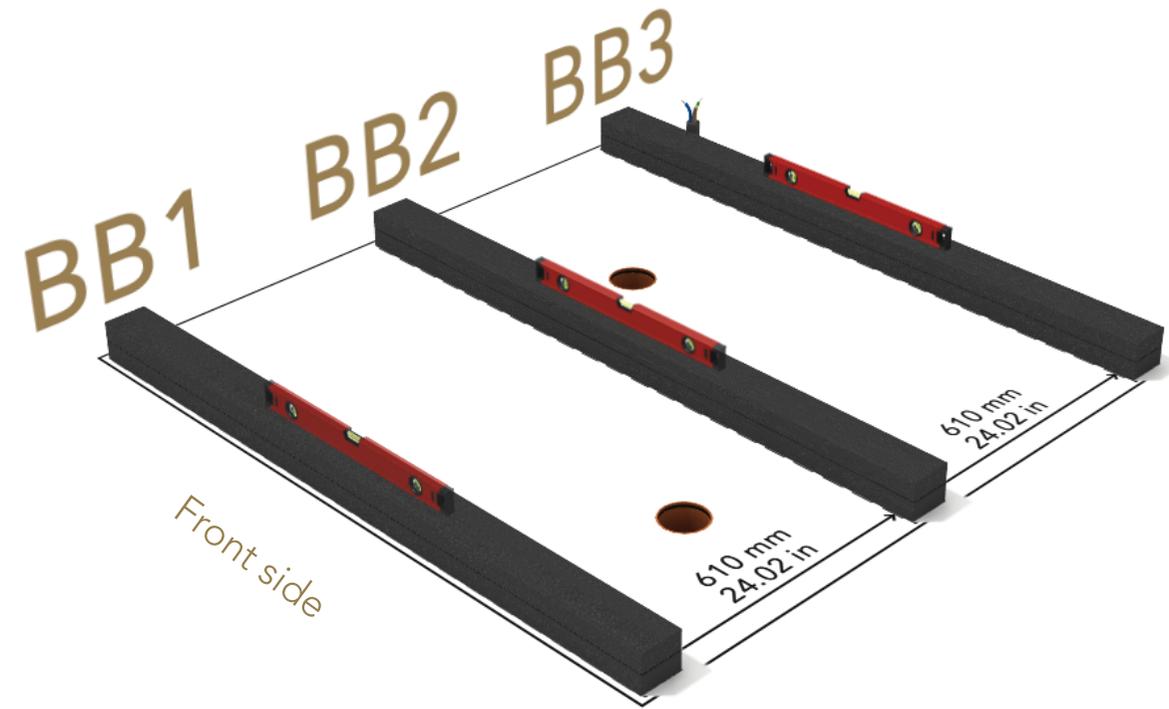

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- F1
- F2
- F-EPDM
- DTC

Mira S with CLT | Flooring

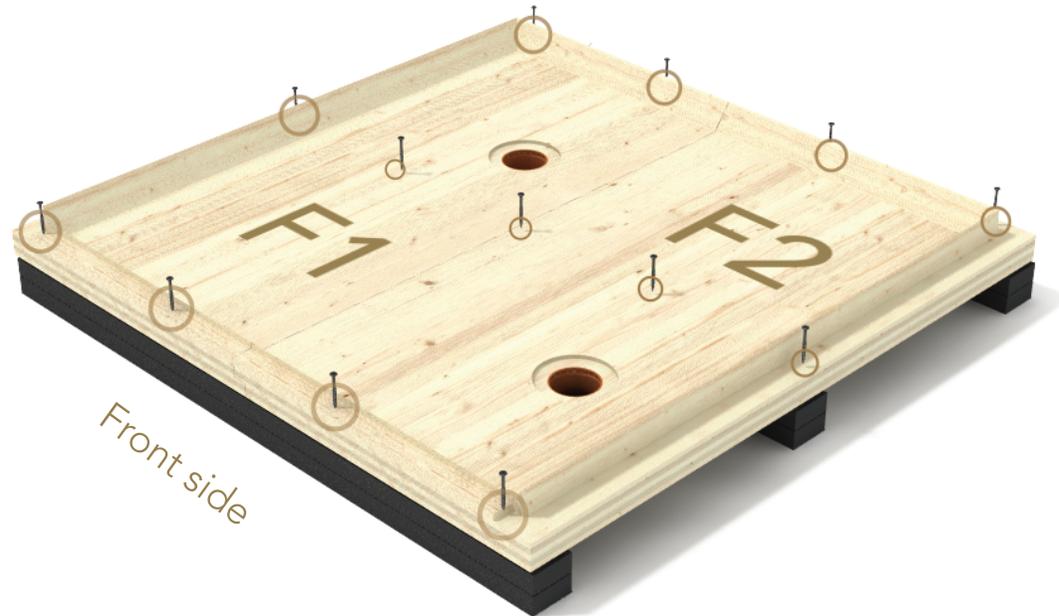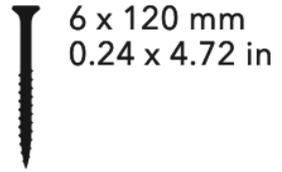

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2
- F-EPDM
- DTC

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.

! Please follow safety precautions for EPDM rubber installation.



Apply EPDM to one half at a time



The EPDM rubber flooring installation is carried out in two stages, covering the first half of the floor and then the second half.

Before applying adhesive, ensure that both the EPDM rubber and the floor surfaces are clean and free from dust.

- Fold half of the EPDM back on itself. Apply a thin layer of adhesive to both the EPDM rubber and the floor by using the mini roller.
- Once the adhesive no longer feels tacky, roll and smooth the EPDM rubber onto the floor. Using a broom smooths out creases or bubbles.
- Repeat the process on the other half.
- Trim off any excess rubber if necessary

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2
- F-EPDM
- DTC




Mira S with CLT | Flooring

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.



Please follow safety precautions for EPDM rubber installation.

Cut out for drain
and vent

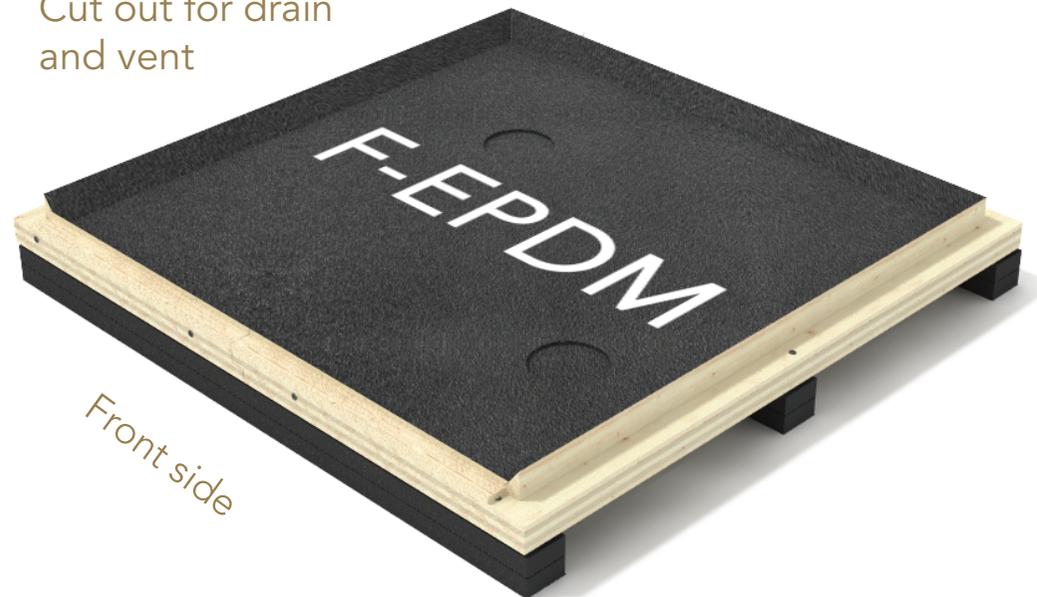


Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2
- ✓ F-EPDM
- ✓ DTC

Phase 4:
Walls





Mira S with CLT | Walls

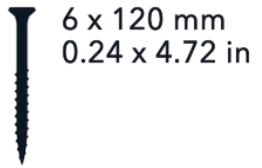

Checklist

- ✓ BIW1
- AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2

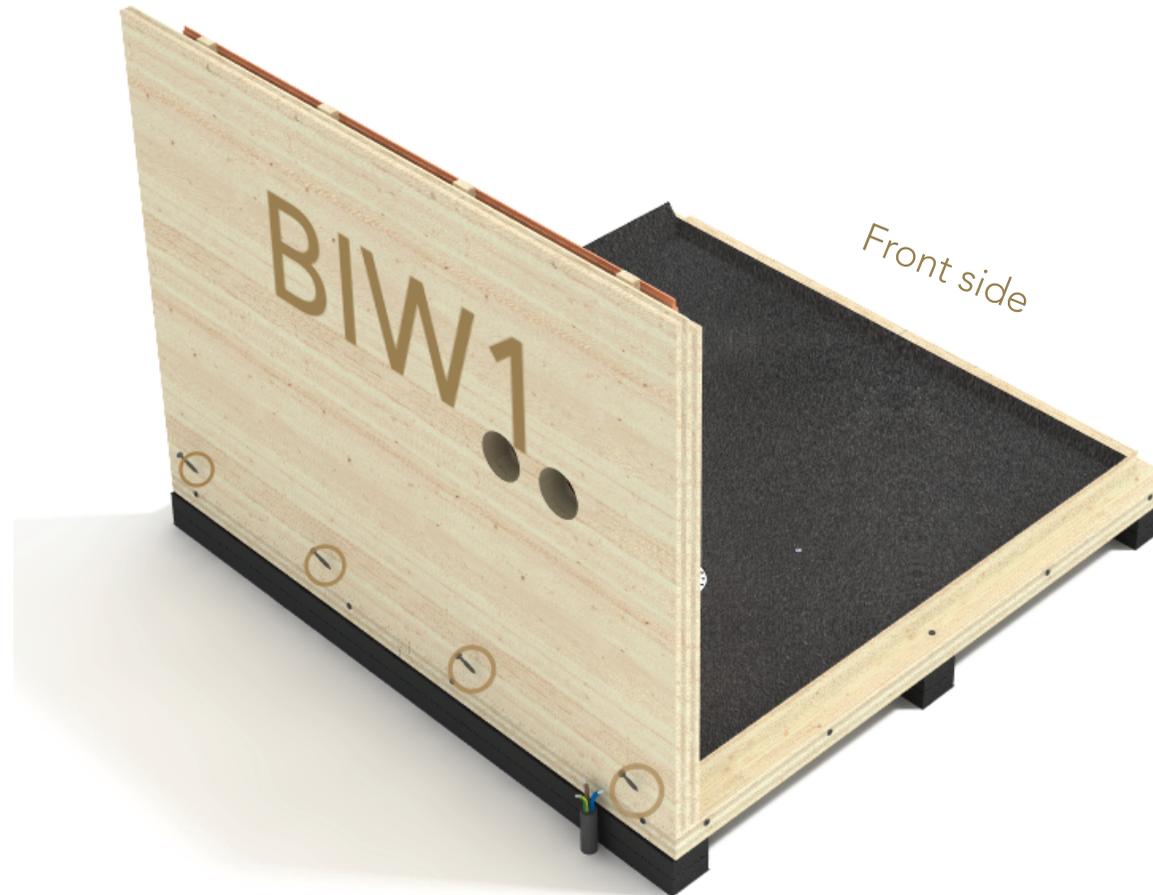


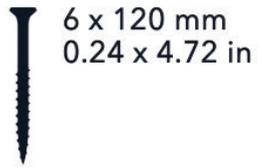

Checklist


- ✓ BIW1
- ✓ AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2

Mira S with CLT | Walls

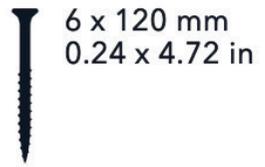

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2

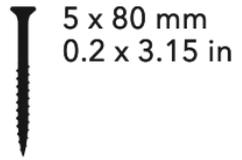


Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



Mira S with CLT | Walls

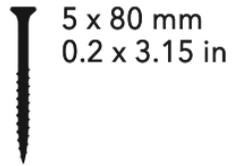

Front side



Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2

After installation, apply tape to seal the joints between the elements.

Mira S with CLT | Walls


Front side



Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2


Mira S with CLT | Walls

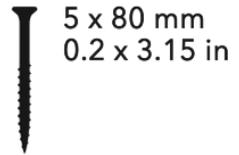

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2



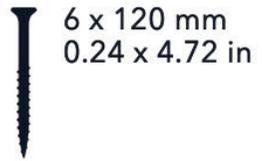

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2

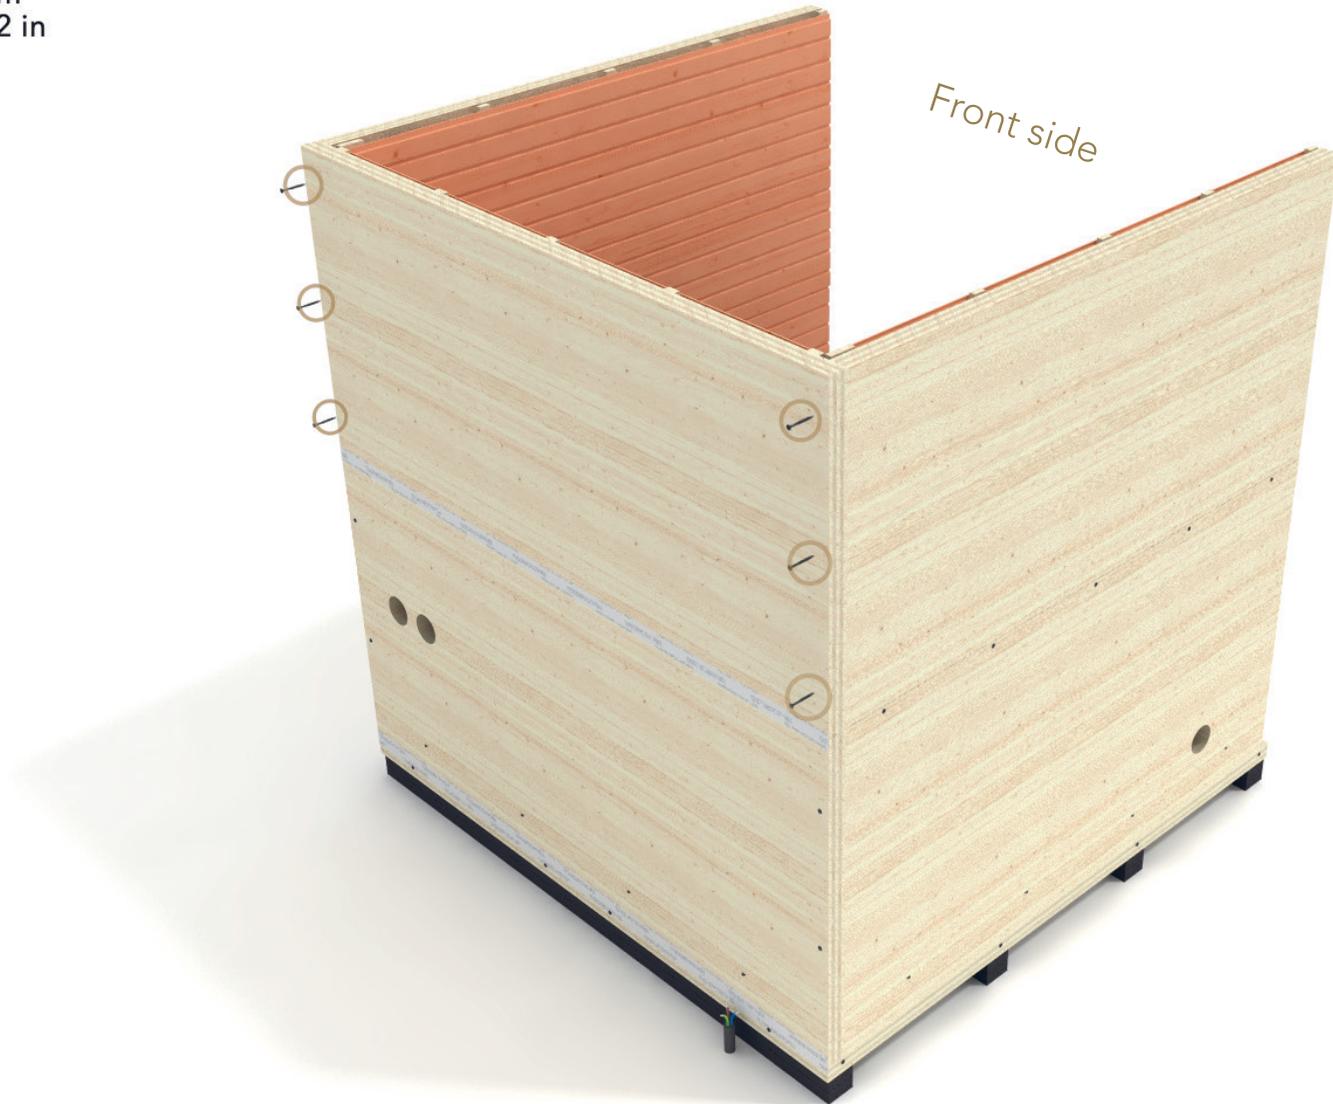


After installation, apply tape to seal the joints between the elements.




Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2

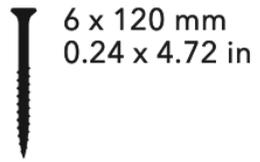

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2

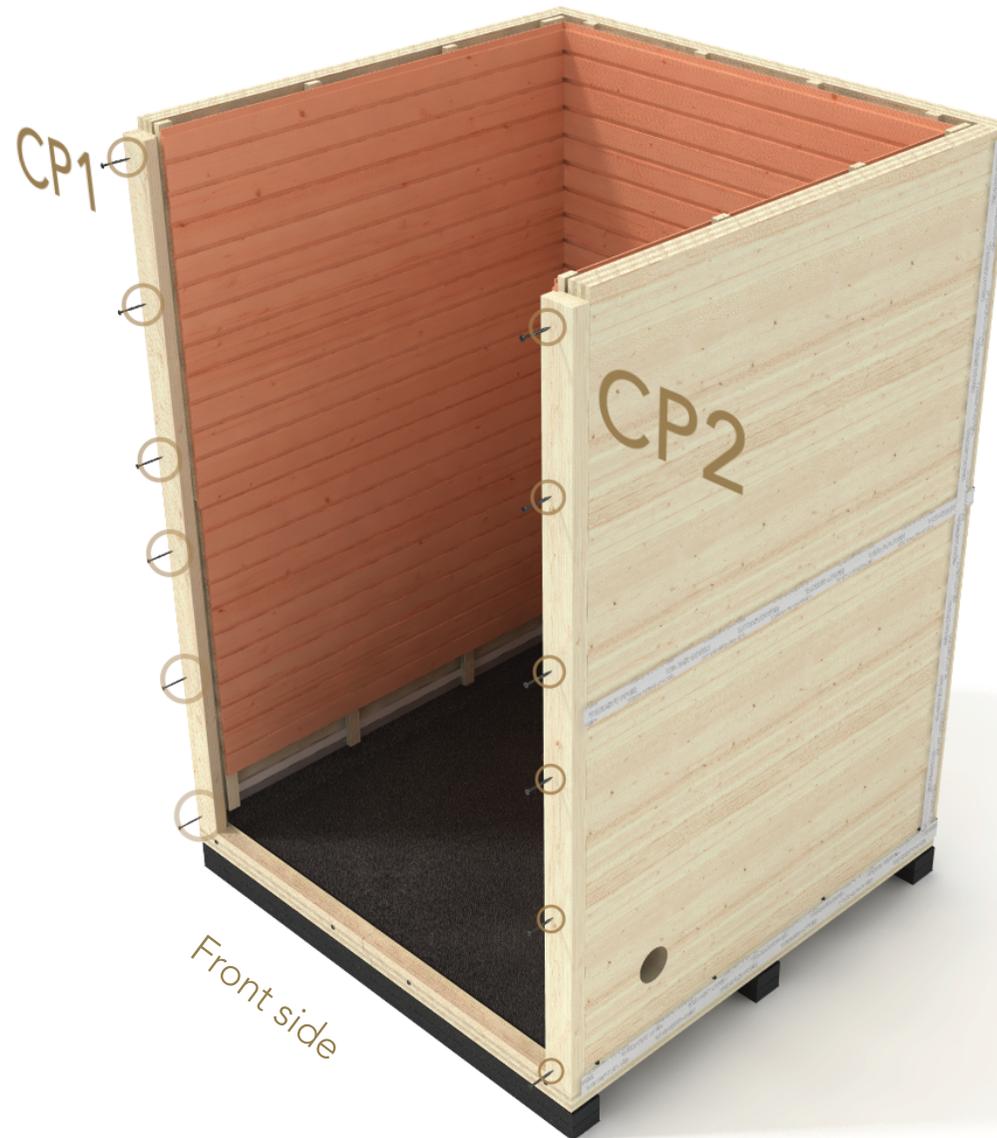


Mira S with CLT | Walls

After installation, apply tape to seal the joints between the elements.

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2




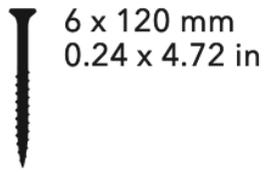

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2

Mira S with CLT | Walls

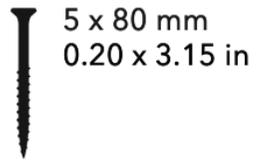

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2





Phase 5:

Roofing



Mira S with CLT | Roofing

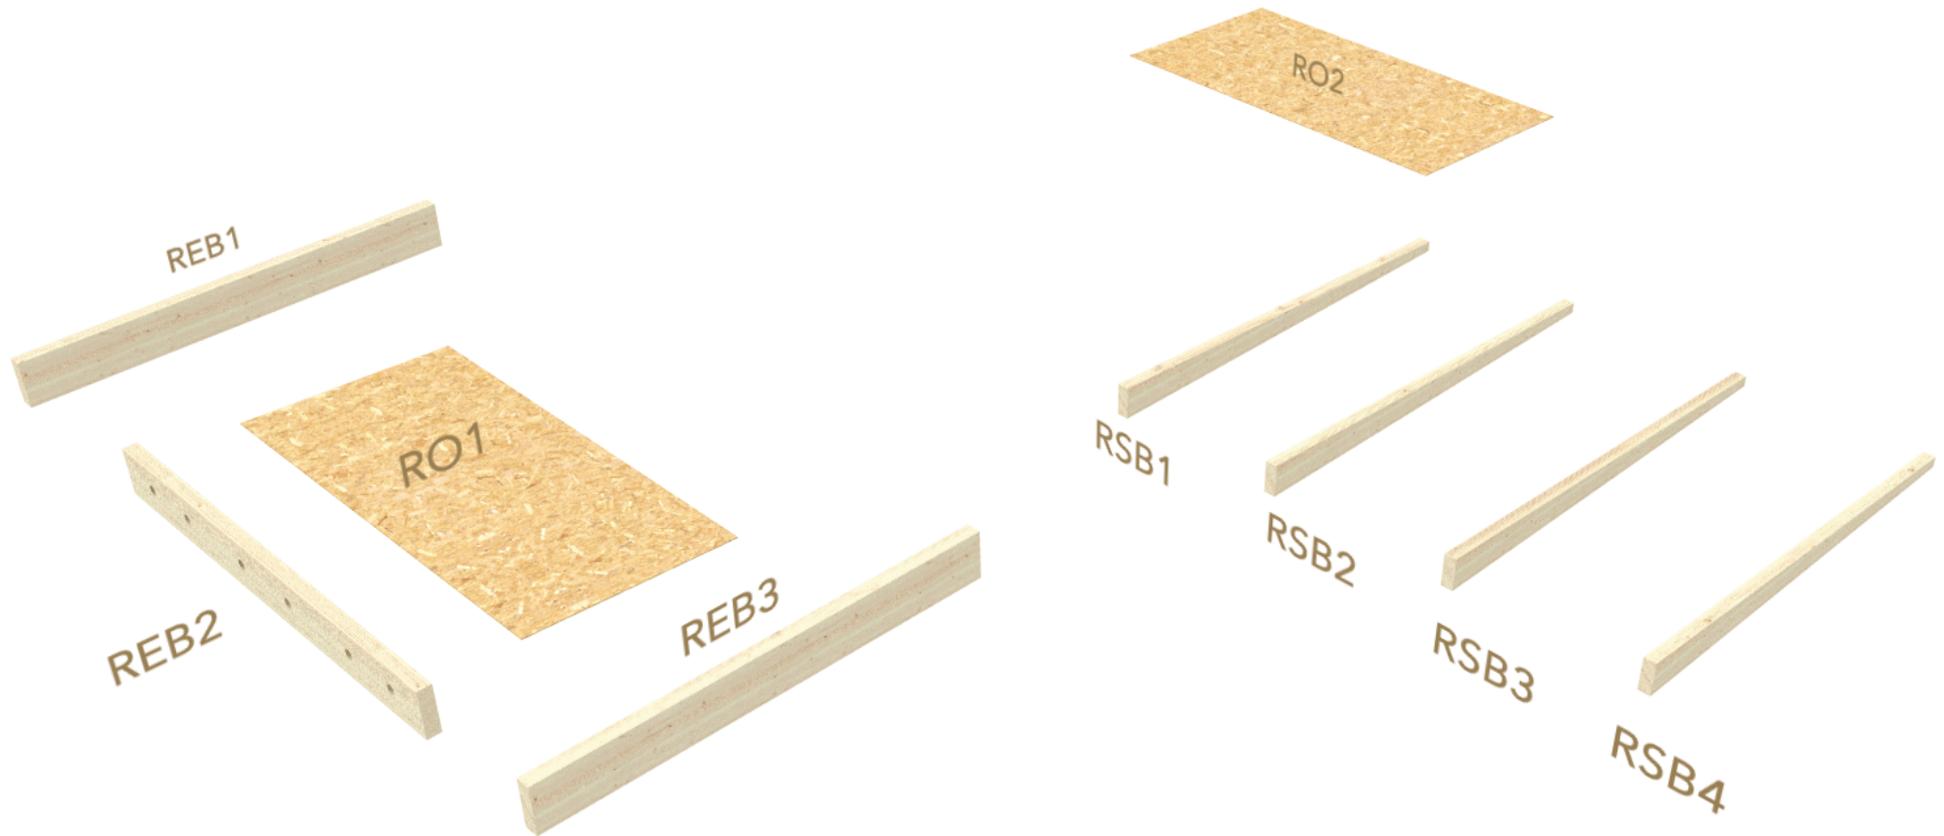


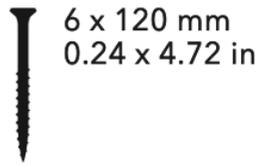

Checklist


- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2

Mira S with CLT | Roofing

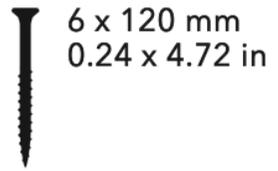

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2

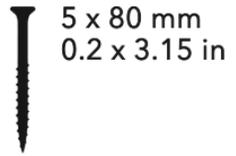

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



Mira S with CLT | Roofing



5 x 80 mm
0.2 x 3.15 in



Checklist


- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2

Mira S with CLT | Roofing

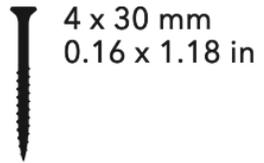


Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RO1
- ✓ RO2

Phase 6:

Exterior walls


Mira S with CLT | Exterior walls

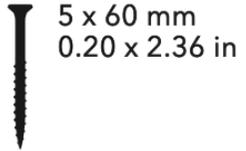

Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



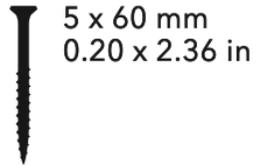


Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

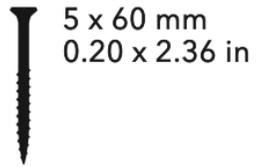

Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



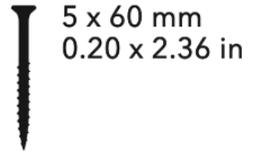


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

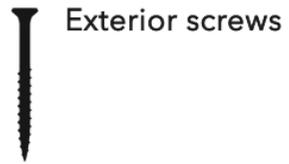

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



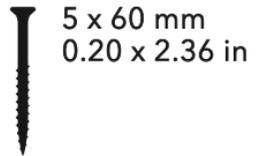


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

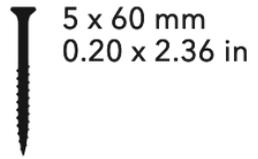

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



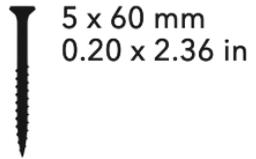


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

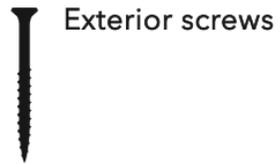

Checklist


- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



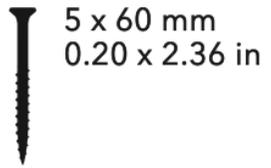


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- AEW2
- AEW3
- SBB1
- STB1

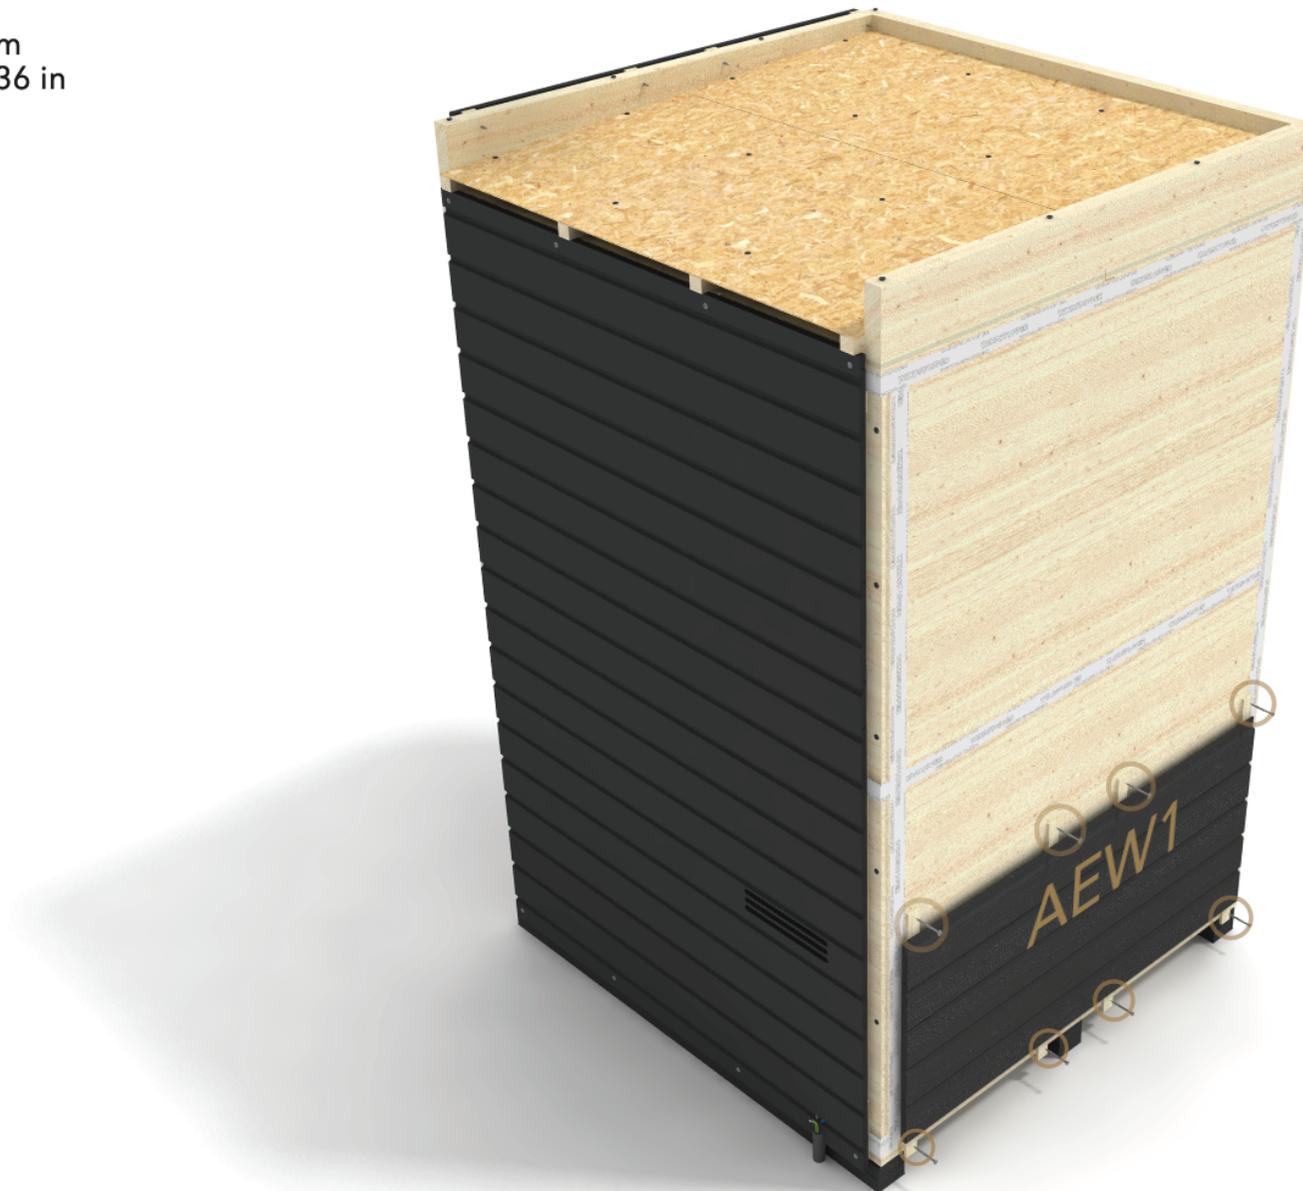


Mira S with CLT | Exterior walls

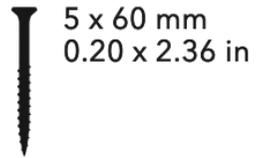

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- AEW3
- SBB1
- STB1



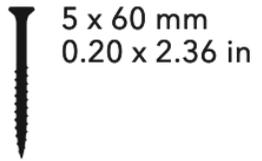


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- SBB1
- STB1





Mira S with CLT | Exterior walls

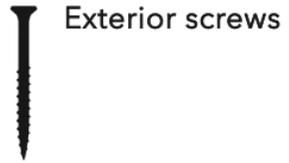


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- ✓ SBB1
- ✓ STB1

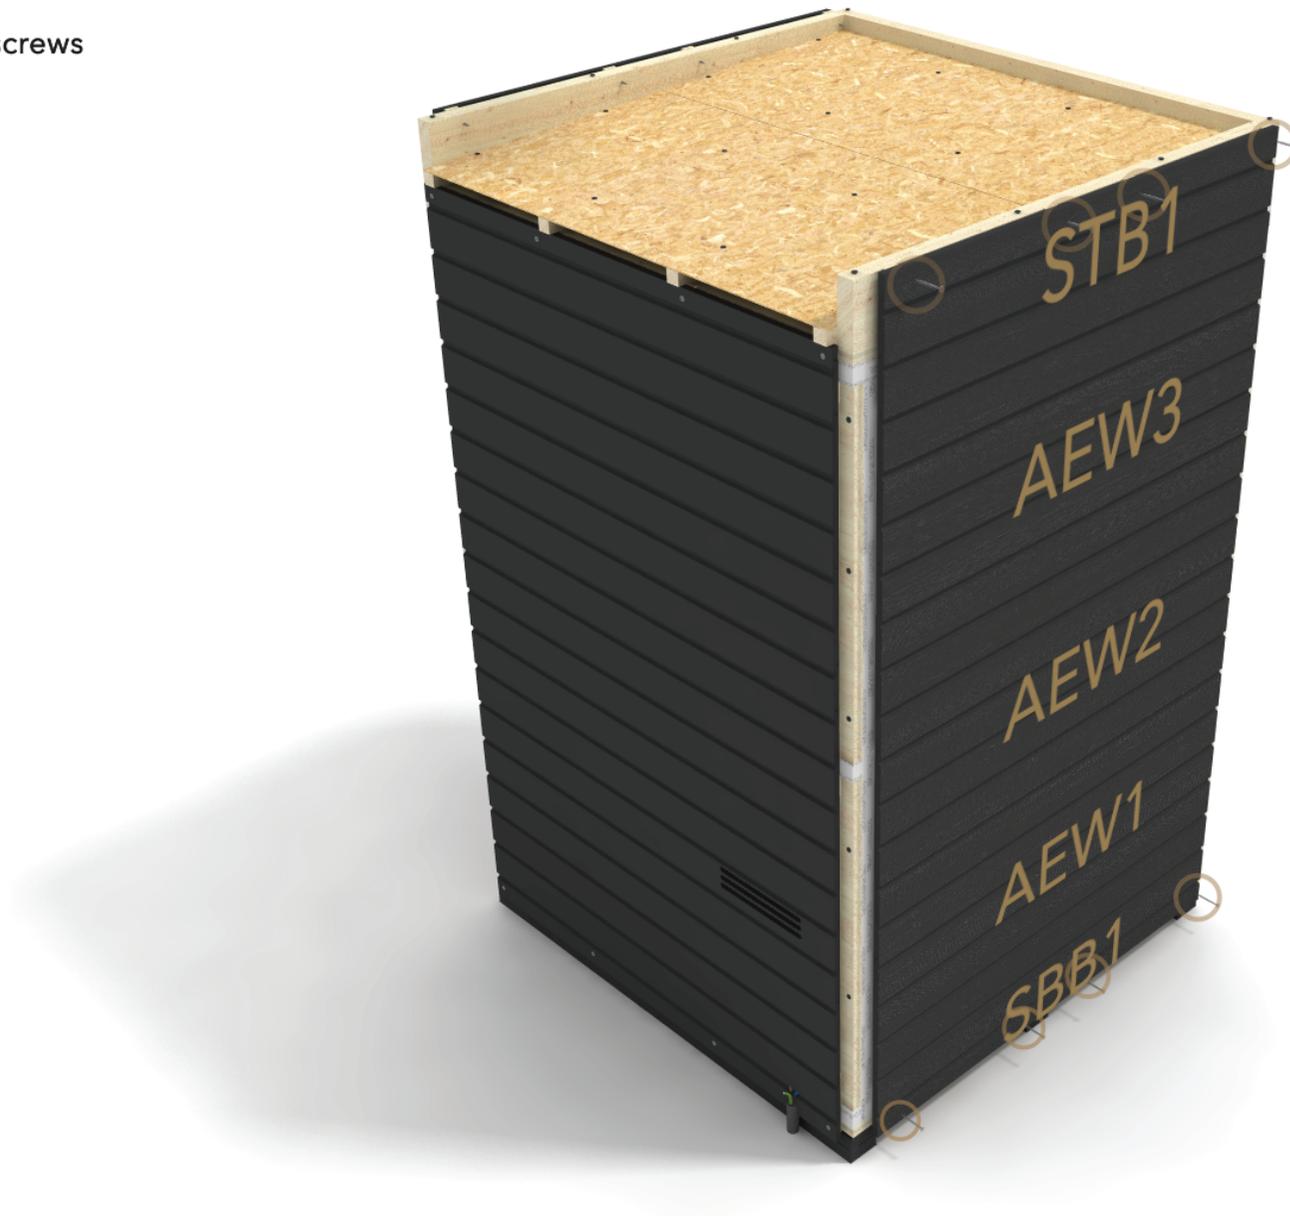

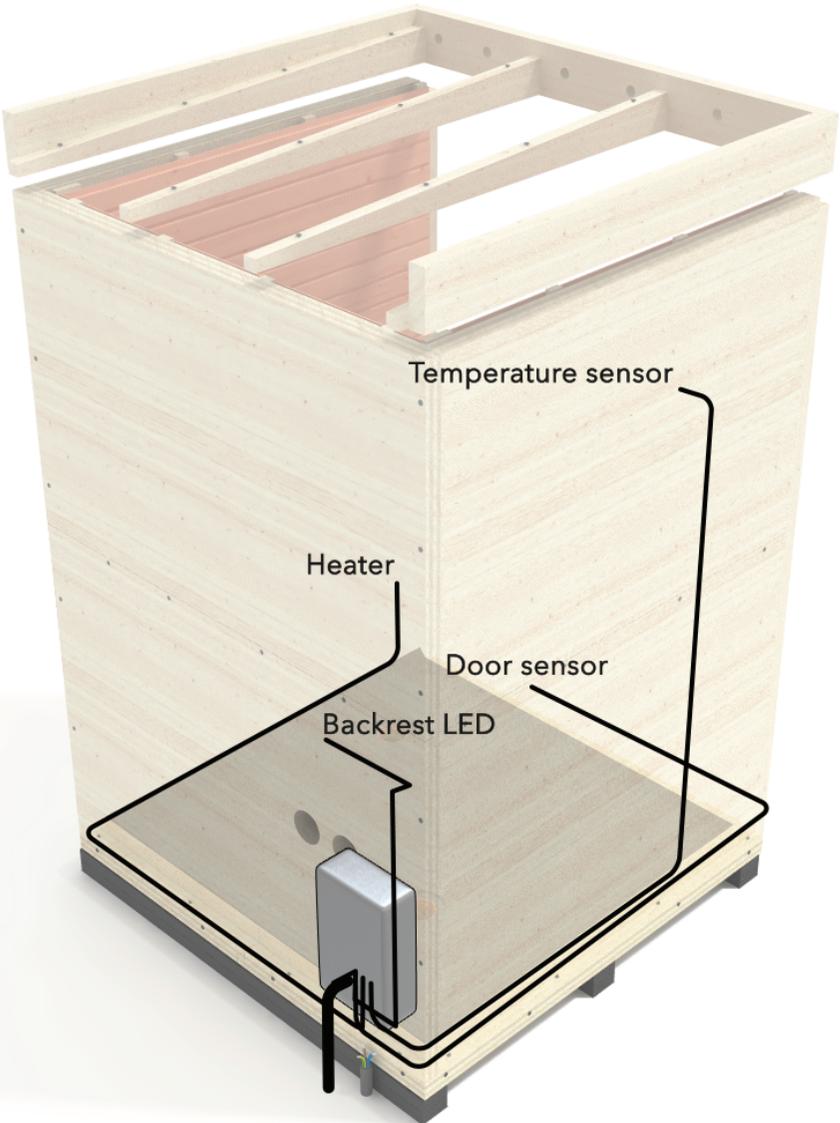

Mira S with CLT | Exterior walls

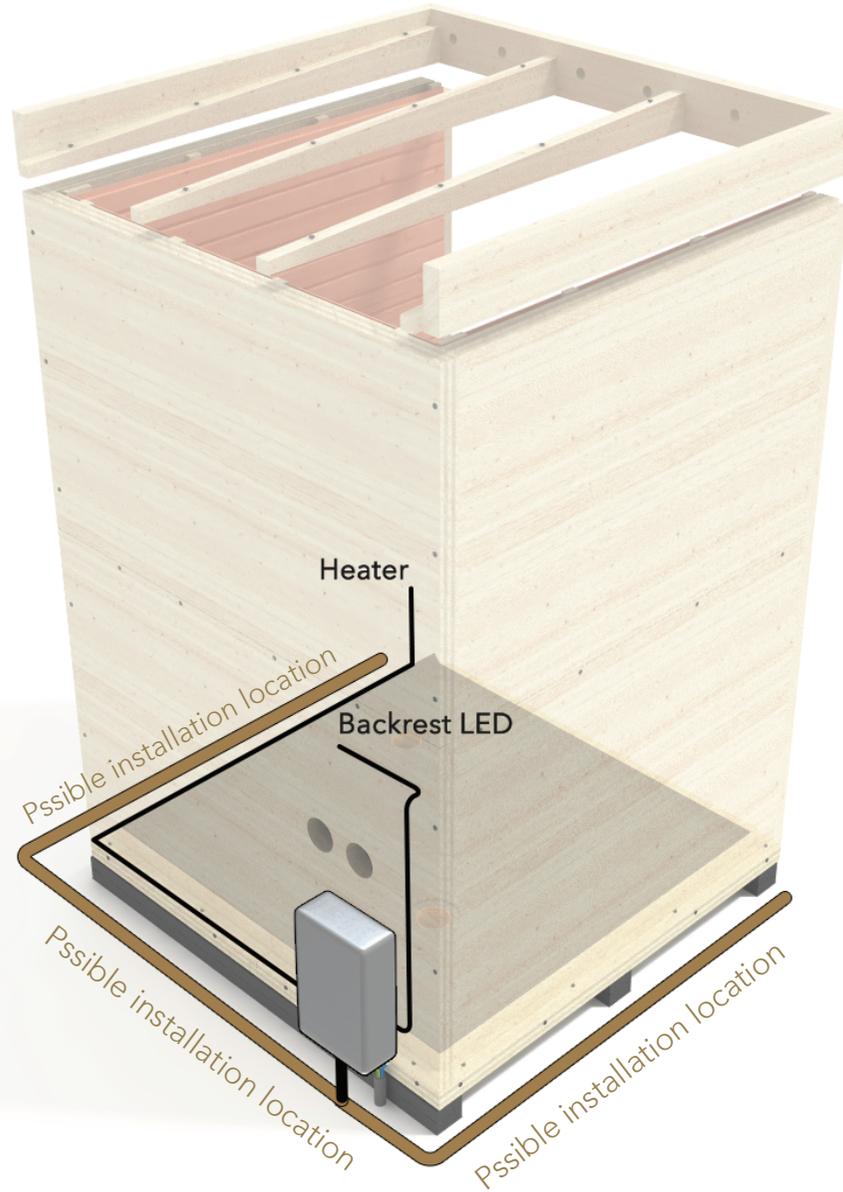

Phase 7:

Finishing the interior walls

Mira S with CLT | Interior walls

Ensure that all electrical cables are installed before attaching or securing the loose boards.

 Brown screws
5 x 60 mm
(0.19 x 2.36 in)




Checklist

- ✓ BSB2
- ✓ BSB1
- ✓ BSB3

Phase 8:
Interior



Mira S with CLT | Interior

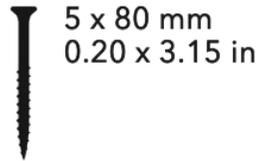

The height of the bench supports is given from the bottom edge of the interior cladding to the bottom edge of the bench support.

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- FG1 - FG4
- BF1
- BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG

The height of the bench supports is given from the bottom edge of the interior cladding to the bottom edge of the bench support.



It is recommended to cover the installed floor grids during installation to prevent scratches and dirt.


Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG




Mira S with CLT | Interior

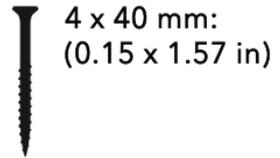

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG



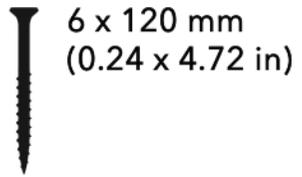


Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG




Mira L with CLT | Interior

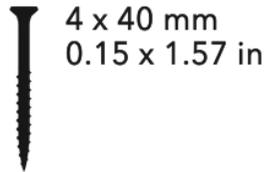

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG



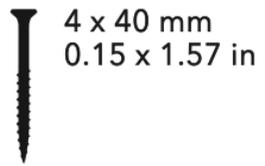

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- BG1
- BG2
- HGH1
- HGH2
- HG



Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- HGH1





Do not use the heater guard if it doesn't conform with the safety distances given by the heater manufacturer.



Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- ✓ HGH1
- ✓ HGH2
- ✓ HG



4 x 40 mm
0.15 x 1.57 in



Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- ✓ HGH1
- ✓ HGH2
- ✓ HG



Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.

Phase 9:

Front glass




Checklist



- W1
- DF
- DW1
- DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG

Mira S with CLT | Front glass

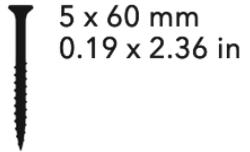

Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG





Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG

Mira S with CLT | Front glass

Glass Wall Installation Guide

Install the glass wall in the center of the opening. Ensure there is an equal gap between the frame and the wall on both sides of the glass wall.



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG

5 x 60 mm
0.19 x 2.36 in
+ cover plugs



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG


Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- DH
- GDS
- GDG




Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- GDS
- GDG

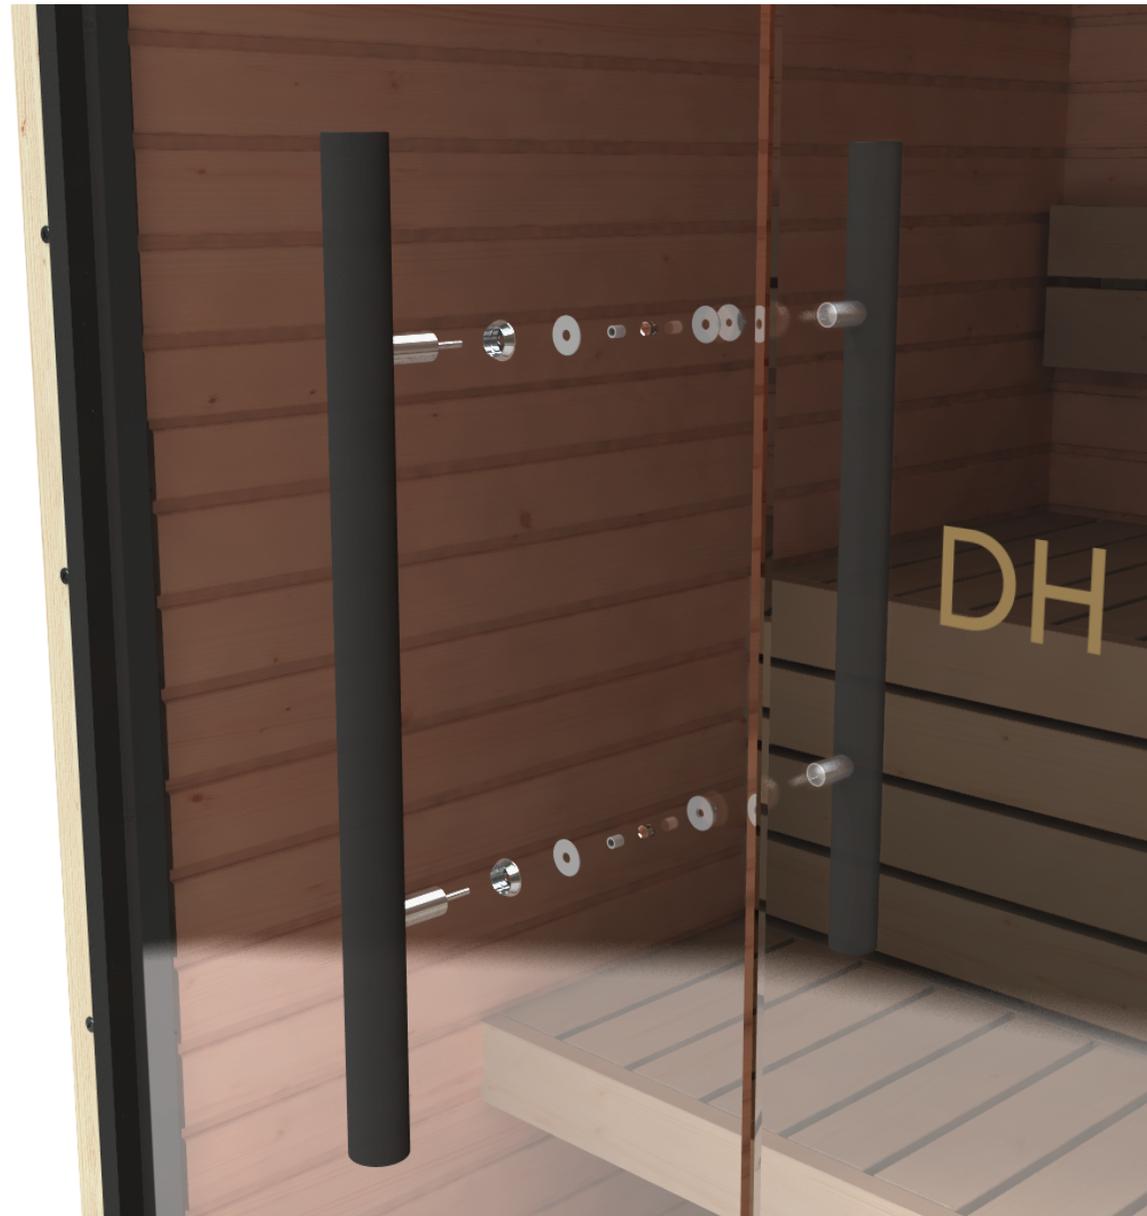

Mira S with CLT | Front glass

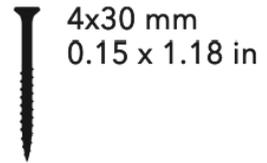

Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- GDG



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- GDG




Mira S with CLT | Front glass

Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- ✓ GDG





Mira S with CLT | Front glass

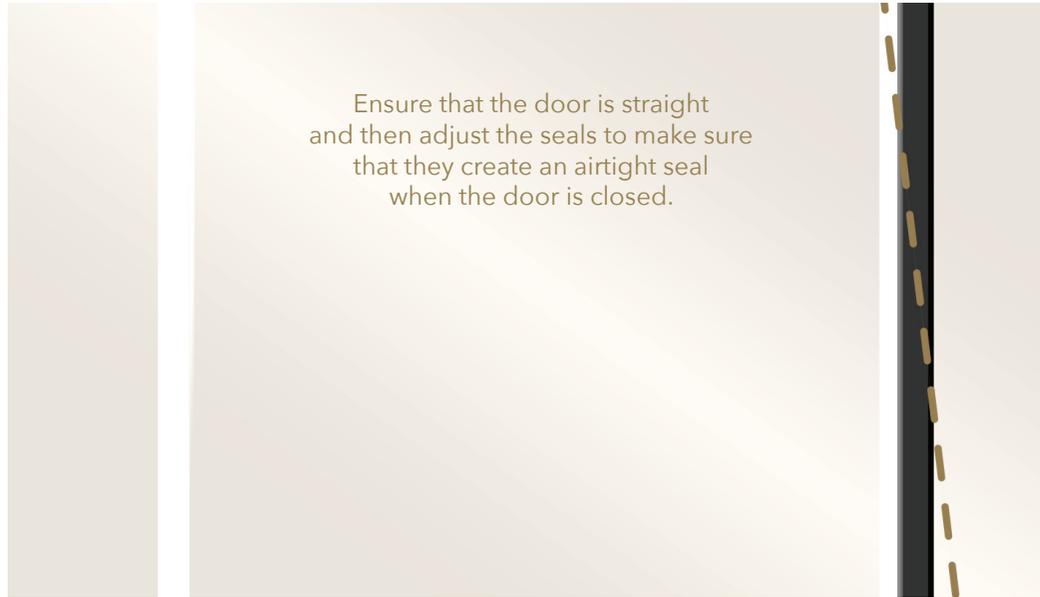

Mira S with CLT | Front glass

Adjust the door glass before gluing the seal.
The soft lip of the seal can be shortened by tearing off part of it.
Adjust the height of the seal to match the gap between the glass and the doorframe.

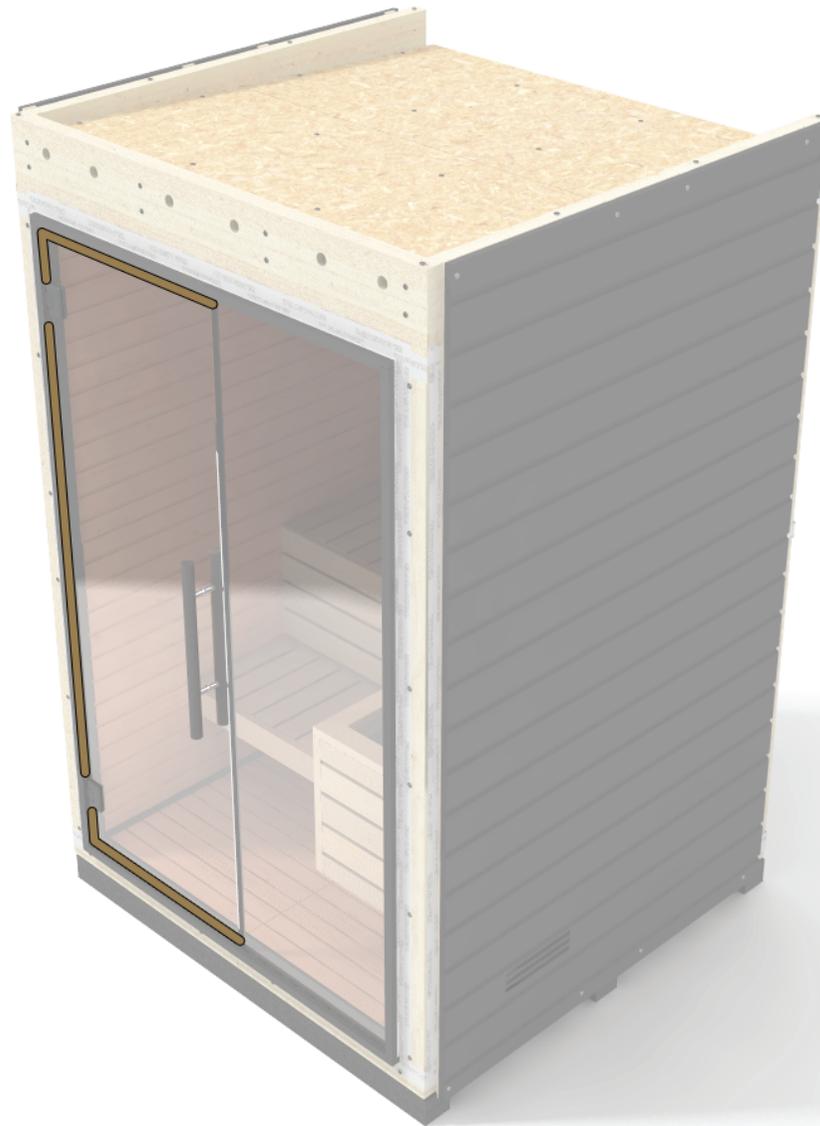
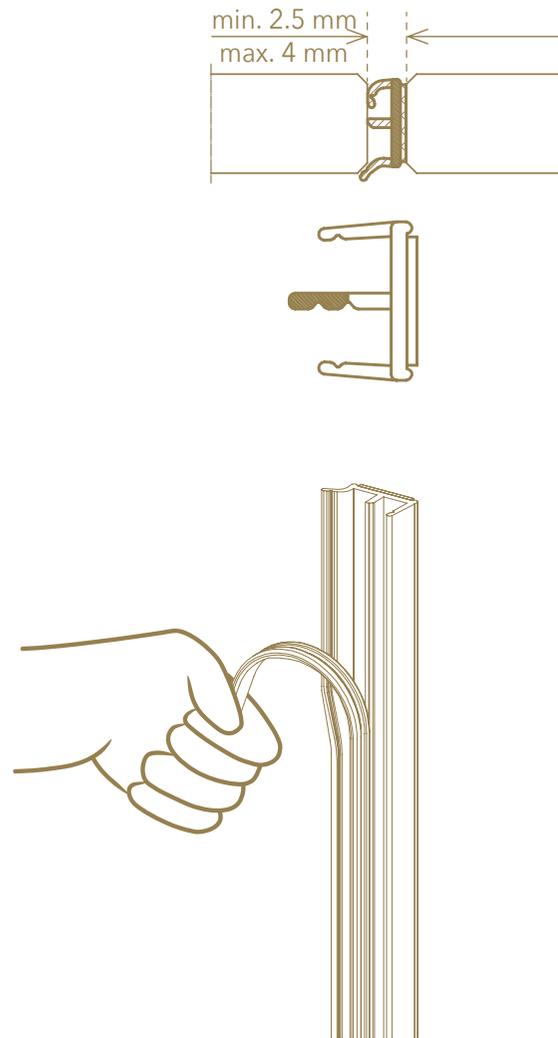


Tape Installation Guide

Positioning the Tape: Ensure there is a 20 mm (0.8 inch) gap between the tape and the edge of the glass wall frame. This ensures the tape remains hidden after installing the external cladding panels.


Mira S with CLT | Front glass

Right Side View

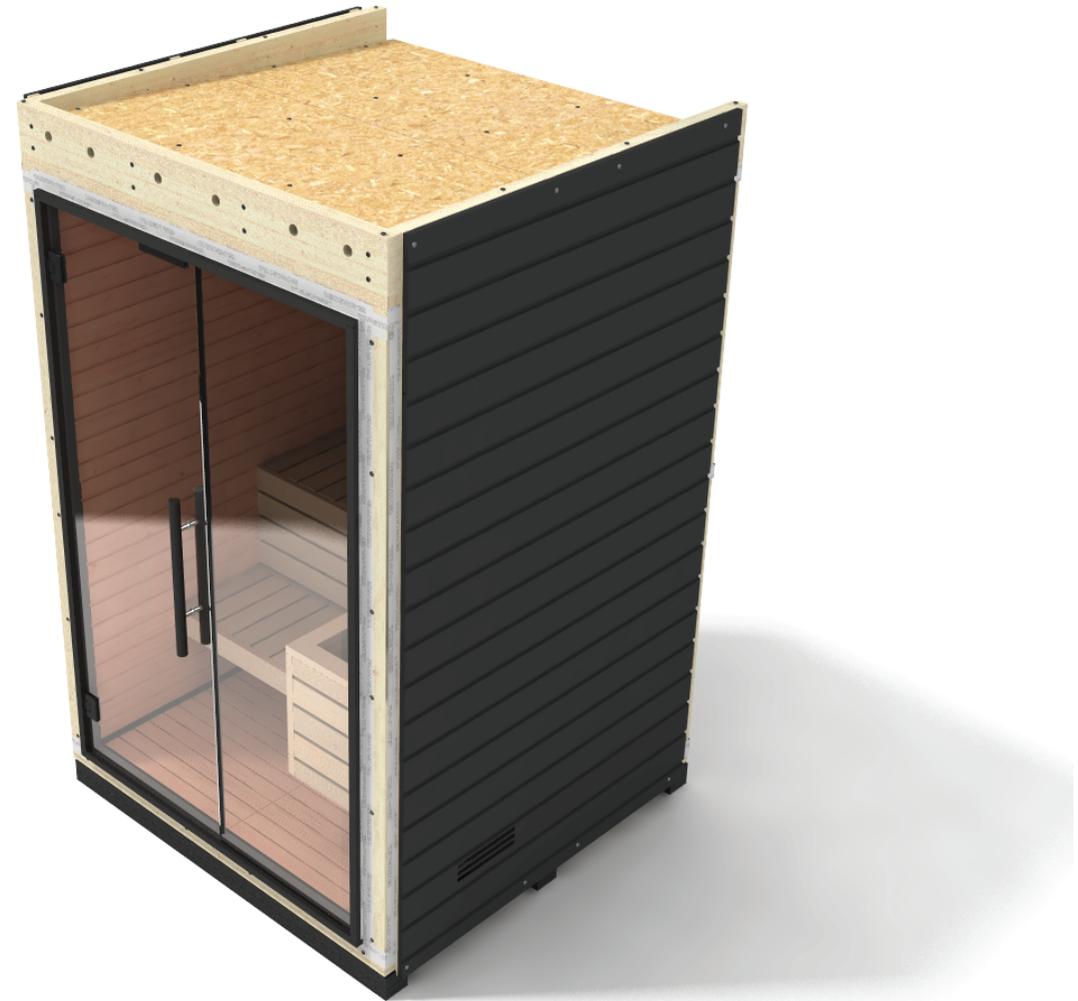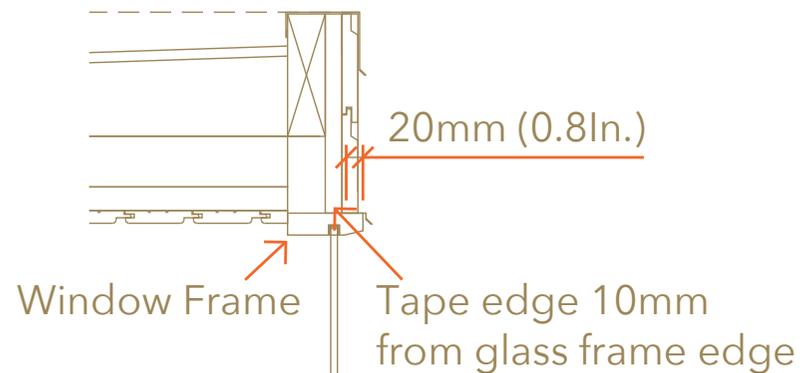

Phase 10:

Finishing the exterior walls

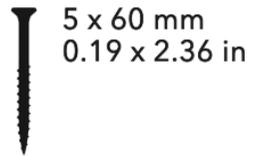


Checklist

- ✓ DLWS
- DRP
- DLP
- DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4




Mira S with CLT | Exterior walls

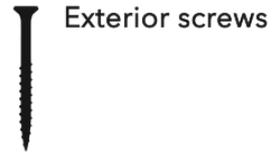

Checklist


- ✓ DLWS
- DRP
- DLP
- DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4



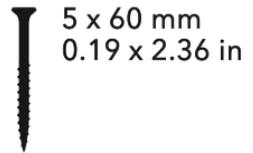


Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

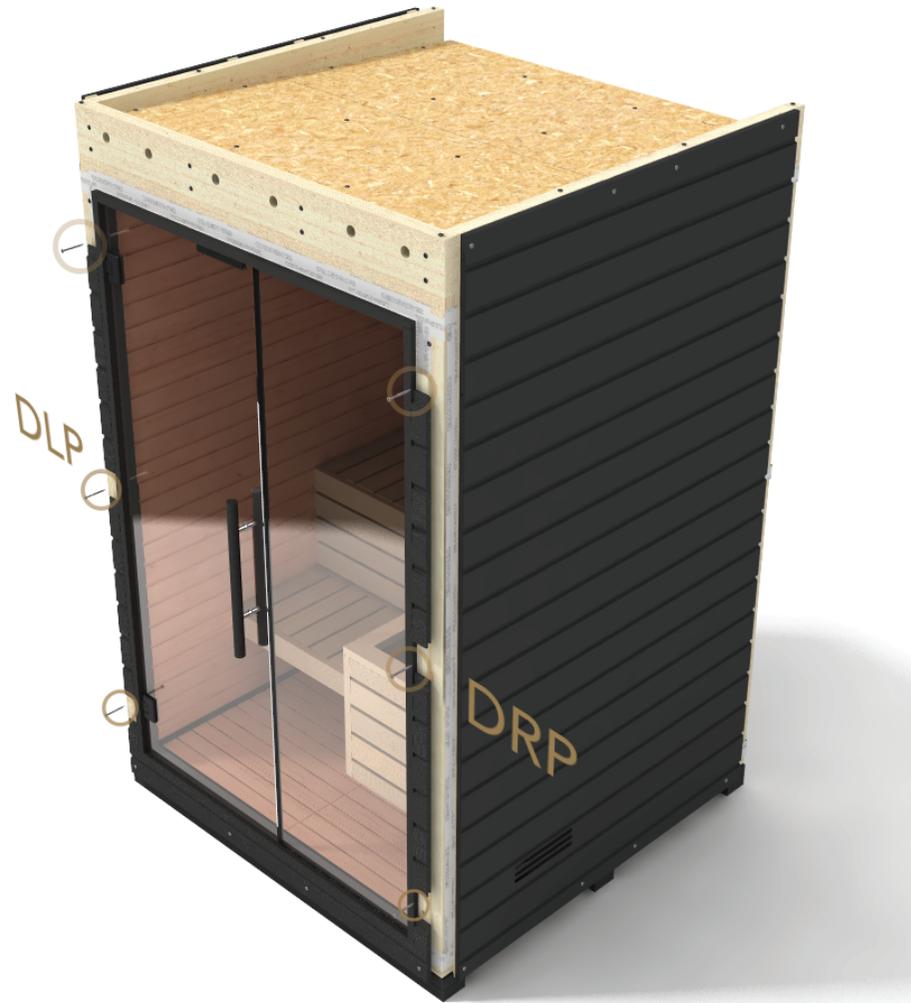


Mira S with CLT | Exterior walls

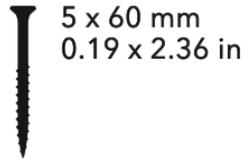

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4



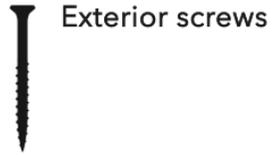

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4





Mira S with CLT | Exterior walls

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

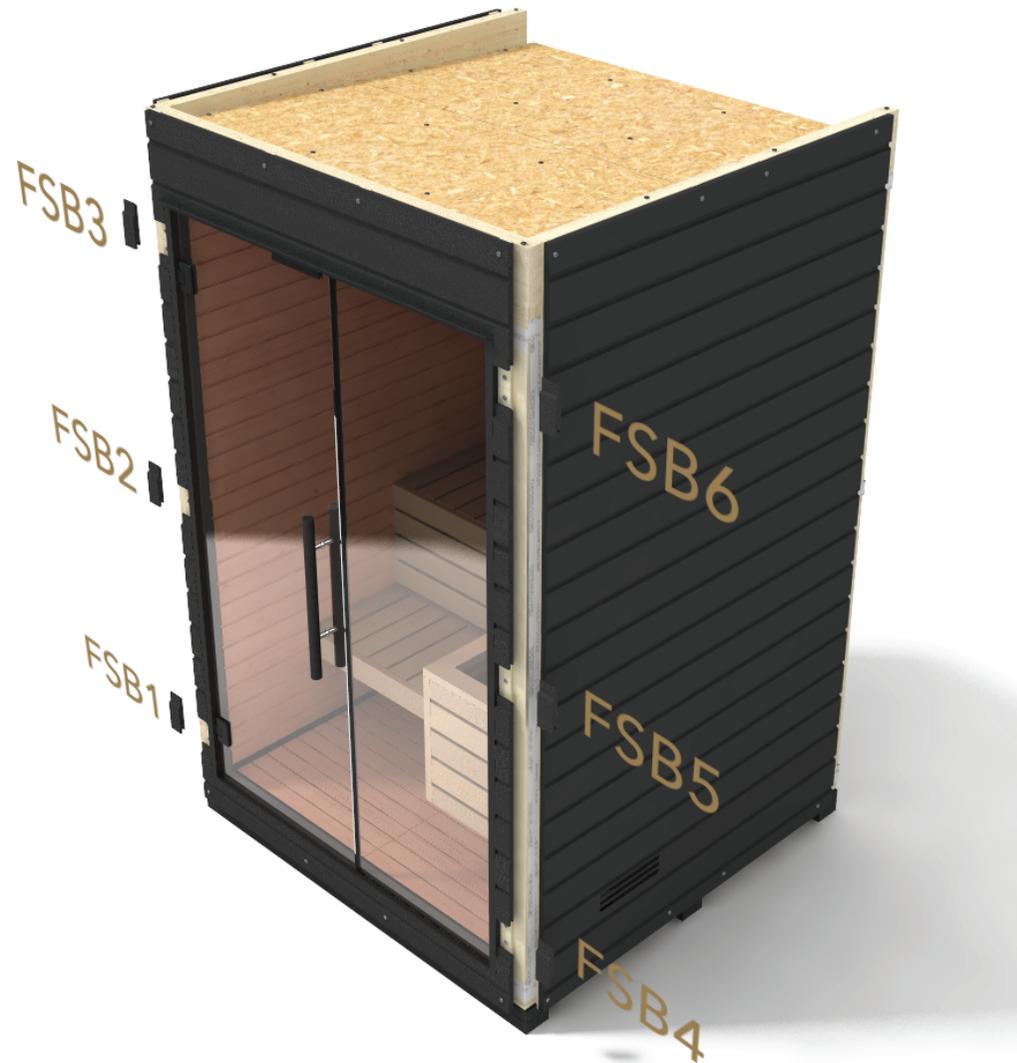


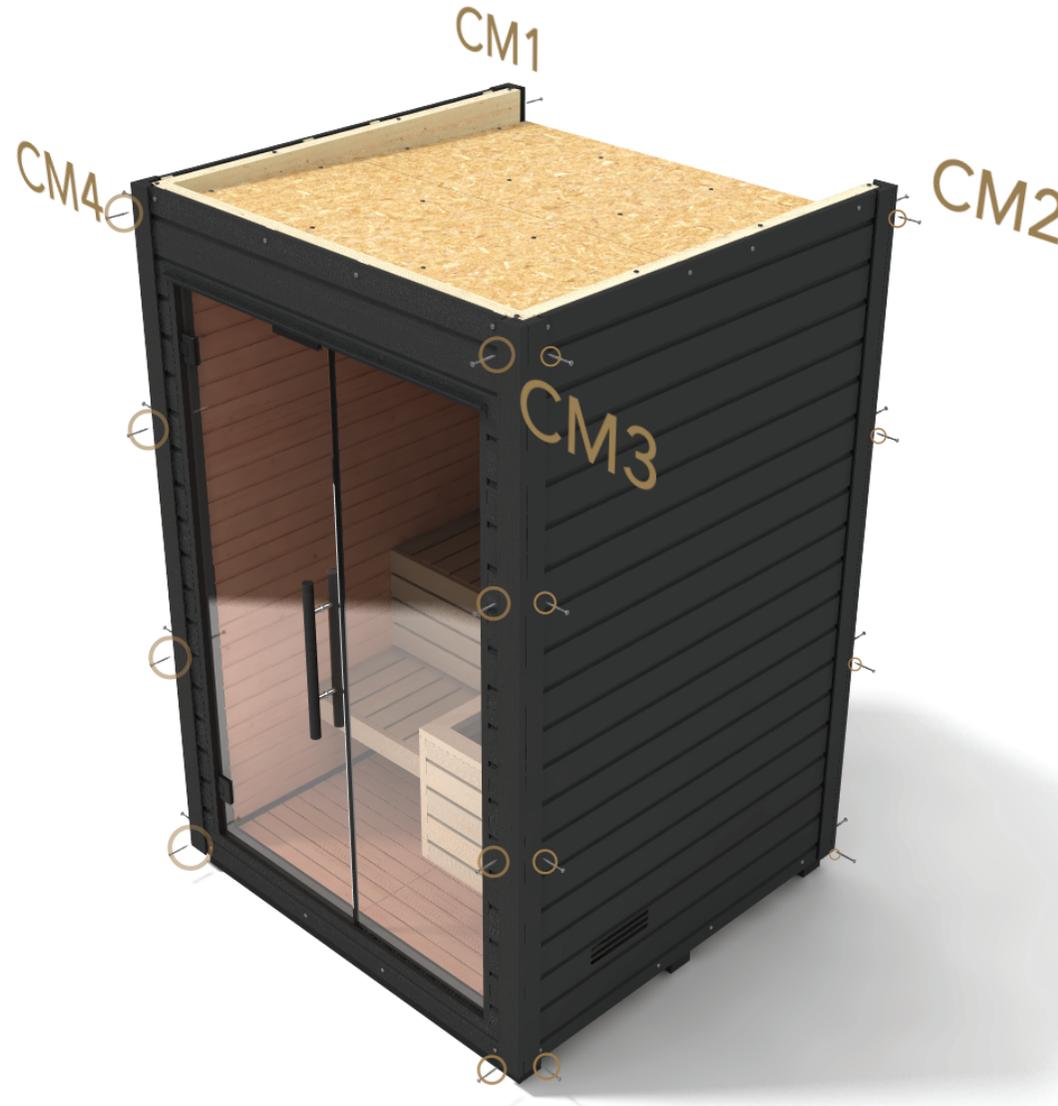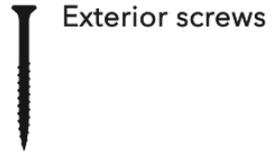

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- ✓ FSB5
- ✓ FSB6
- ✓ CM1
- ✓ CM2
- ✓ CM3
- ✓ CM4

Phase 11:
**Finishing
the roof**

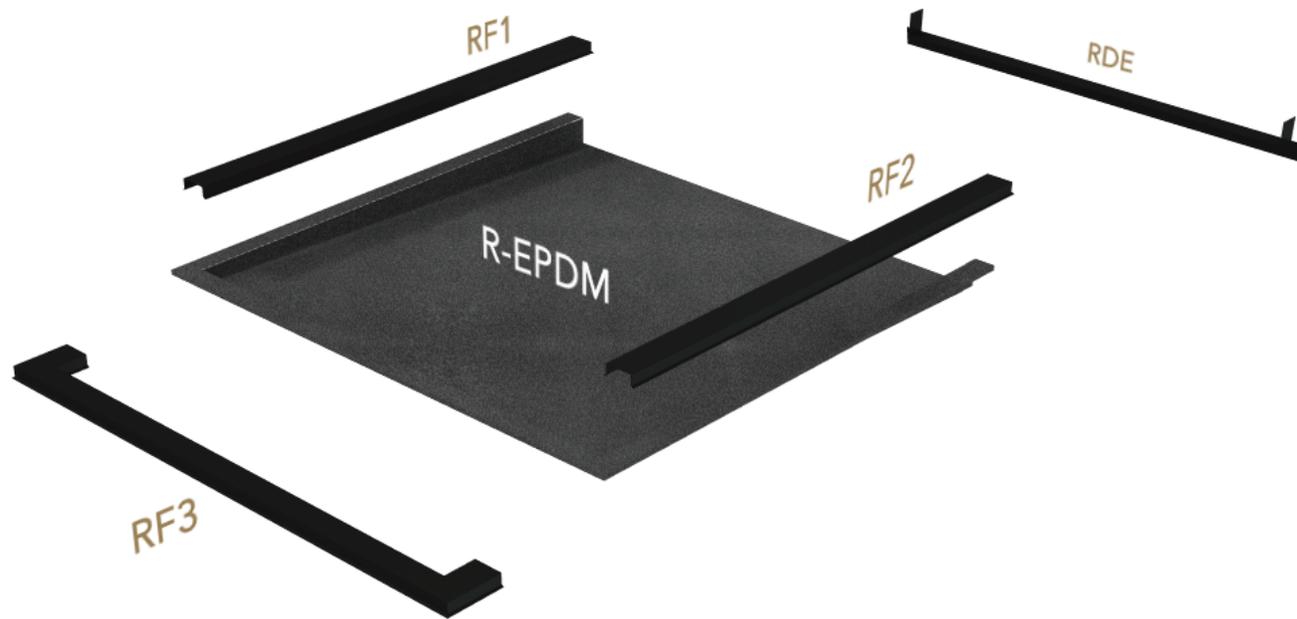



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

Mira L with CLT | Roofing

The EPDM rubber is installed on the roof in two stages (first half of the roof and second half of the roof).

Before gluing, clean the surfaces from dust (EPDM rubber and roof osb).

- Apply adhesive to both the EPDM rubber and the roof in a thin layer.
- Initially, glue the center of the EPDM, leaving the edges unglued.
- Once the adhesive no longer feels tacky, roll and smooth the EPDM rubber onto the roof.
- Repeat the same process for the other half of the roof.

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.

! Please follow safety precautions for EPDM rubber installation.

Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2

Apply EPDM to one half at a time

Do not apply EPDM to sides



Mira S with CLT | Roofing

For the raindrop flashing and the edge of the EPDM, use Firestone QuickPrime.



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

Mira S with CLT | Roofing


EPDM tape



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2

Mira S with CLT | Roofing

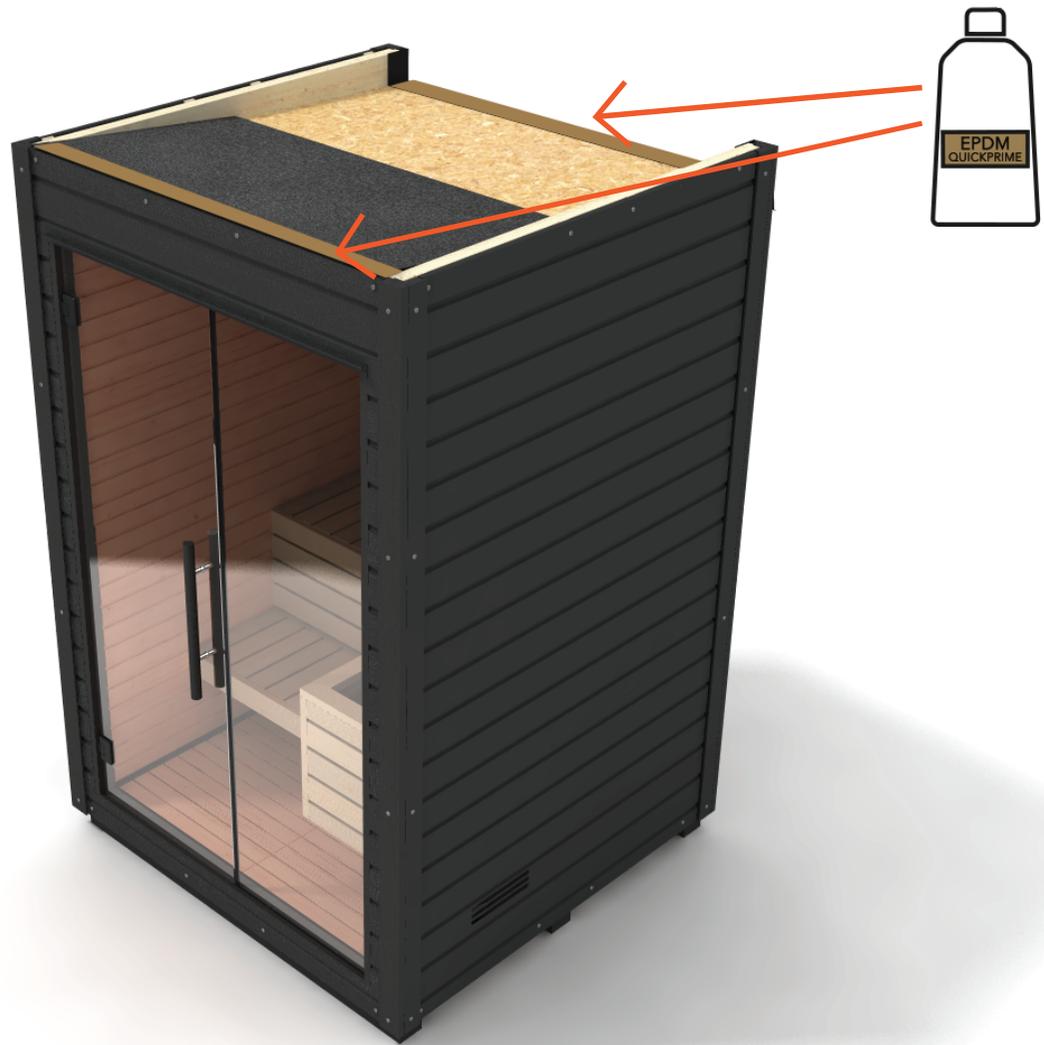

Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

- Attach EPDM rubber with adhesive overlay to the edge.
- Connect the EPDM rubber at the corner by folding and gluing it without the need for cutting. This method ensures the corner joint achieves maximum waterproofing.

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.


! Please follow safety precautions for EPDM rubber installation.

Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3




Mira S with CLT | Roofing

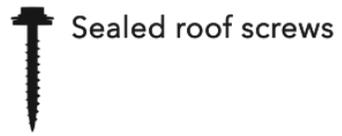

Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- RF3

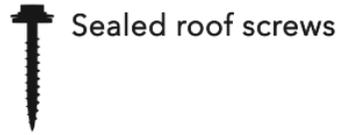

Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- ✓ RF3

Mira S with CLT | Roofing



AUROOM

Moments of wellbeing



auroomwellness.com

Saunas carefully crafted by Auroom OÜ.
Location: Vana-Kastre 62313, Estonia